

Description: A guide to creating password protected displays in GraphWorX64

OS Requirement: Windows Server 2003 x64/Vista x64/ Server 2008 x64/Windows 7 x64/ Server 2008 R2 x64

General Requirement: Basic knowledge of GraphWorX64

Introduction:

GraphWorX64 has a very powerful development environment in which you can design your HMI/SCADA control screens.

This application note provides a guide to password protect your screens so no one else can make changes to them in design mode. This can only be done by selecting Application \ Advanced Mode when designing screens in GraphWorX64.

Application \ Advanced Mode:

You can get to Application \ Advance Mode, as following and provide a password to protect your display for unauthorized changes.

- 1) Open a new or existing GraphWorX64 display in configuration mode. Click on the View Tab (Available only in configuration).

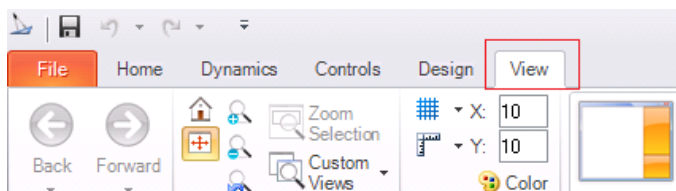


Figure 1: GraphWorX64 Display / Configures mode / View.

- 2) Click on Application Mode and then select Advanced Mode

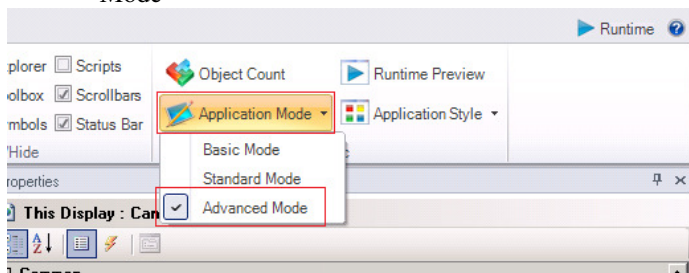


Figure 2: Application \ Advanced Mode

- 3) Once you are in Advance Mode then you can enter your password under **Protection** Tab for 'This Display' Properties.

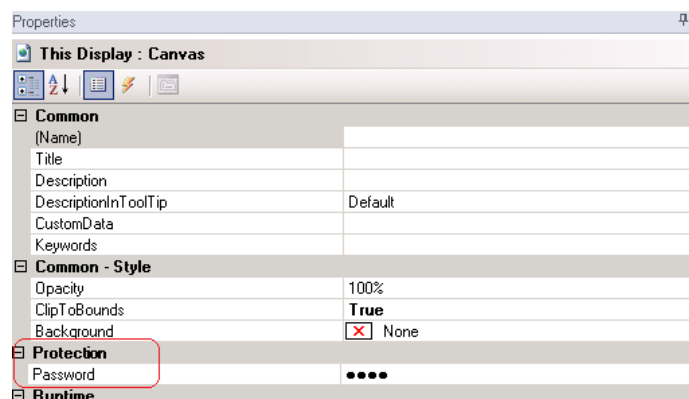


Figure 3: Display Properties / Protection / Password

- 4) Reenter your password and press OK. Save the display which is now password protected.



Figure 4: Protection / Re-enter Display Password.

Open a Password Protected Display:

If you open a password protected display in configuration mode. It will ask the user to enter display password. Once you enter a display password press OK.

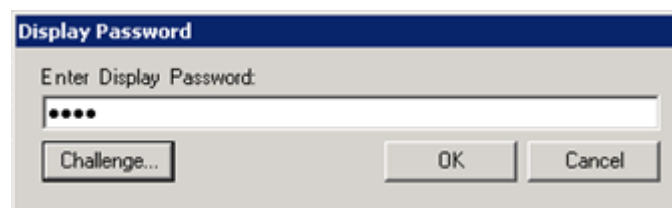


Figure 5: Password to open a display in configuration Mode.

The display will be opened in configuration mode. Note that you can always open the password protected display in runtime without providing a password.

Note: If you ever forget your display password click on "Challenge..." button to get a challenge code. Then call ICONICS Technical Support to get an answer.