



MobileHMI

Multiple Tiles on Windows Phone



APPLICATION NOTE

September 2013

Description: Guide to using multiple tiles of Mobile HMI using the Windows Phone.

OS Requirement: Windows Phone 7 or 8

General Requirement: Windows Phone with Windows Phone 7 Operating System and an installation of Mobile HMI.

Introduction

Mobile HMI is a free App you can download from the Marketplace. Mobile HMI supports multiple tiles on your Windows Phone which adds a whole new dimension to its usability. The tiles can be used to quickly access important Alarms, KPIs, trends and displays while potentially saving critical time. This application note will guide you through how to use the multiple tiles capability for Mobile HMI on your Windows Phone.

Adding tiles.

The Windows Phone Home Screen can be customized so that a number of Trend, Alarm and GraphWorX displays can be easily accessed using tiles.

For our example case, we would start with a home screen containing only the Iconics MobileHMI tile. To add a tile to the home screen, simply browse to your desired MobileHMI layout, touch the ellipsis on the bottom right hand corner and touch the "Pin" button as shown in Figure 1. This adds a tile on the Home Screen which directs the user to the selected layout.



Figure 1 - Touch the circled pin button to add a tile.

Similarly, a multiple amount of tiles representing Trends, Alarms and Displays can be easily added to your home screen. A home screen with such a customized layout is shown in Figure 2. You can now simply browse to the tile you like. Touching the back button will promptly direct you back to the home screen.

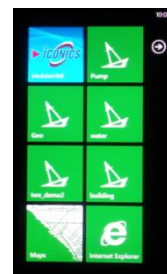


Figure 2 - Home screen with multiple MobileHMI tiles.

Removing tiles

From the home screen

Tiles can be removed from the home screen in two simple steps.

1. Hold down on the tile you want removed for two seconds.
2. Touch the "unpin" button as shown in Figure 3.

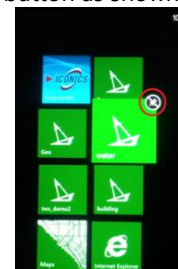


Figure 3 - Removing a tile from the home screen.

Removing the tile by browsing

1. Browse to the relevant layout (alarm, trend etc...).
2. Touch the ellipsis on the bottom right corner
3. Touch the "unpin" option as shown in Figure 4, after which you will see the tile is removed from the home screen.



Figure 4 - Removing a tile by browsing.