



Description: A description of how to use Global Aliasing in the AlarmWorX32 Server Configurator.

OS Requirement: Win 2000/XP/2003/NT

General Requirement: GENESIS32 8.0 should be installed on the machine. You should have a Global Aliasing configuration, which is active. This applications note will not explain how to create Global Aliases.

Instructions

1. Open the **AlarmWorX32 Server Configurator**. You can select a **GAS** theme as shown in **Figure 1**.

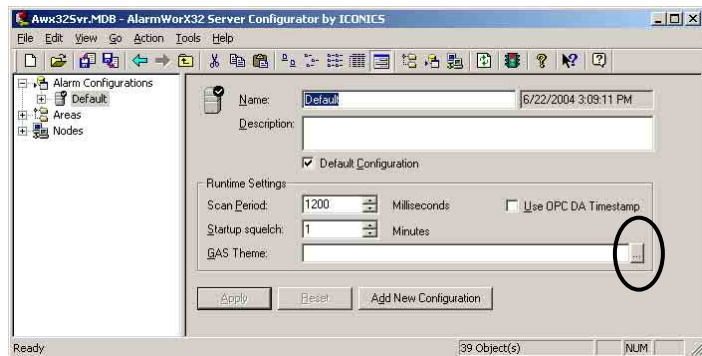


Figure 1

2. The **Themes** list will be opened as shown in **Figure 2**. It will list all the available Themes. You can **select** the **Theme** and the **Theme Item**. Click **OK** when you are done.

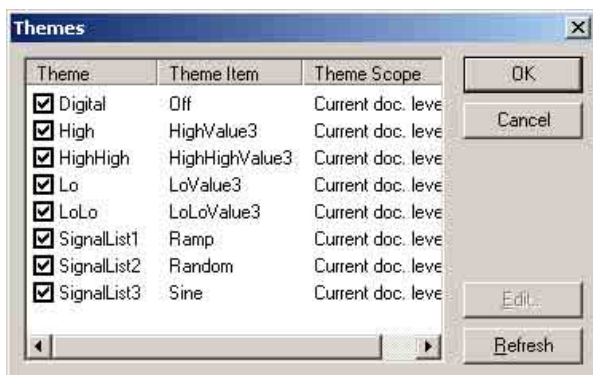


Figure 2

3. You can now **select Global Aliases** instead of tags. The **Unified Data Browser** will now list Global Aliases in addition to tags, as shown in **Figure 3**.



Figure 3

4. Any location where you can set a value or select a tag, you can now select a Global Alias. See **Figure 4**.

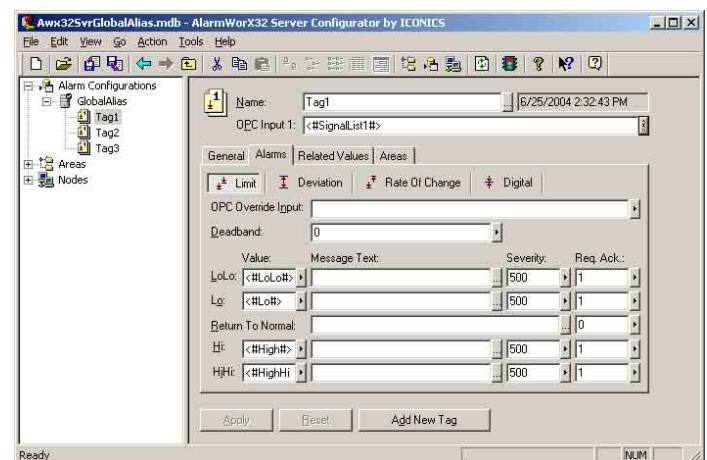


Figure 4

5. The theme you select will be used at **startup**. The AlarmWorX32 Server will determine if there is any theme set, and resolve all the aliases. If you want to set a new theme while AlarmWorX32 Server is running, open the AlarmWorX32 Server Configurator and select a different theme.
6. Selecting a different theme in GraphWorX32 will not affect the AlarmWorX32 Server; even if you set the theme to be machine level. The only location to set a theme for the AlarmWorX32 Server is from the Configurator itself.