

Description: Guide to use Global Aliasing in the AlarmWorX32 Server Configurator.

OS Requirement: Win 2000, XP Pro, Server 2003, Vista, Server 2008, Windows 7

General Requirement: GENESIS32 9.20 should be installed on the machine. You should have an active Global Aliasing configuration.

Introduction

The Global Aliasing theme you select for the AlarmWorX32 Server will be used at startup. The AlarmWorX32 Server will determine if there is any theme set, and resolve all the aliases. If you want to set a new theme while AlarmWorX32 Server is running, open the AlarmWorX32 Server Configurator and select a different theme.

Selecting a different theme in GraphWorX32 will not affect the AlarmWorX32 Server; even if you set the theme to be machine level. The only location to set a theme for the AlamWorX32 Server is from the Configurator itself.

Using Global Alias in the Configurator

- Open the AlarmWorX32 Server Configurator and select the configuration that you would like to add the Global Alias feature.
- Click on the “...” button, to select a GAS theme as shown in Figure 1.

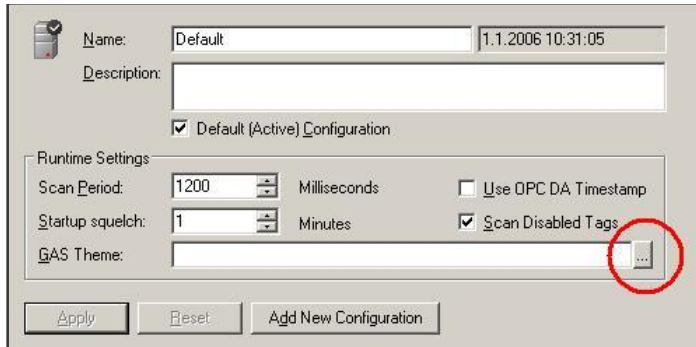


Figure 1 - Selecting a GAS Theme for Your Configuration

- The **Themes** list will be opened as shown in Figure 2. It will list all the available Themes. You can **select** as many themes as you want.
- Click on the Edit button for each theme that you have selected to select the Theme Item.

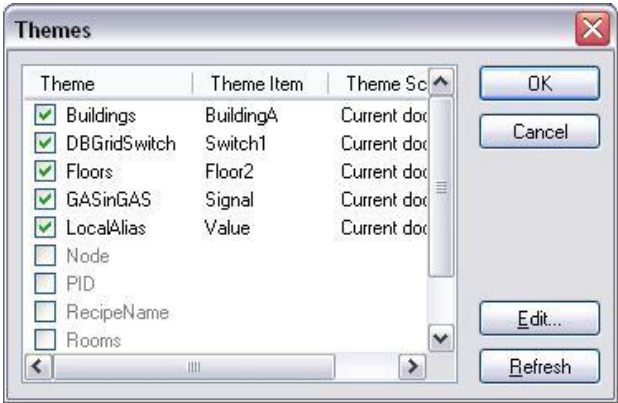


Figure 2 - Selecting Theme and Theme Items

- Any location where you can set a value or select a tag, you can now select a Global Alias as show in Figure 3 by opening the Unified Data Browser and selecting the Global Aliases Tab.

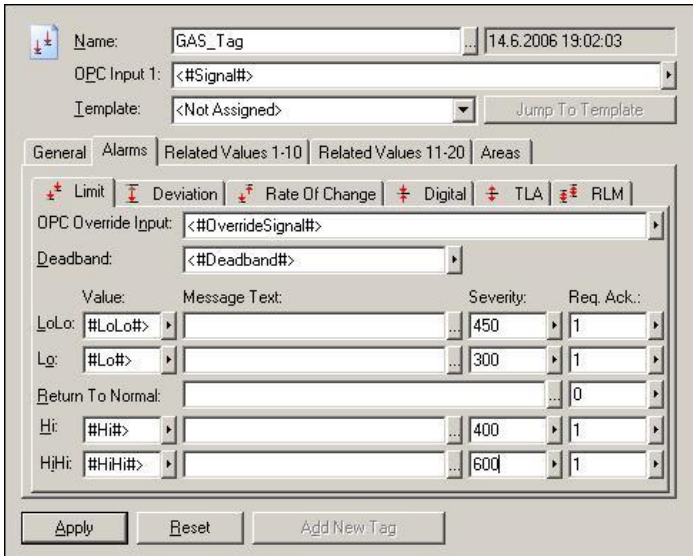


Figure 3 - Using Global Aliases