



MobileHMI

Integration with GraphWorX64



APPLICATION NOTE

September 2013

Description: Guide to configuring your MobileHMI Application for Windows Phone with advanced graphical views using GraphWorX64.

OS Requirement: Vista x64/ Windows 7 x64/ Windows 8 x64/ Windows Server 2008 x64/ Windows Server 2008 R2 x64/ Windows Server 2012.

General Requirement: MobileHMI v10.8 or GENESIS64 v10.8.

NOTE: AnyGlass functionality requires a Windows 8 or Windows Server 2012 machine to serve as a MobileHMI server, but the GraphWorX64 displays can be created on a wider variety of operating systems, such as Windows 7.

Introduction

With MobileHMI and GraphWorX64, you have the ability to create detailed graphical displays to view and interact on your Windows Phone. You have the ability to leverage much of the existing GraphWorX64 functionality such as viewing trends with the TrendWorX64 Viewer, acknowledging alarms with the AlarmWorX64 Viewer, monitoring production with the EarthWorX64 Viewer, and much more all from your mobile device using MobileHMI.

In this application note you will create a GraphWorX64 mobile display including the Pivot Control. Then you will publish the display and view it from your mobile device.

Creating a GraphWorX64 Mobile Display

1. Open **GraphWorX64 for MobileHMI** display from Start → Programs → ICONICS → MobileHMI → GraphWorX64 for MobileHMI.

NOTE: If you did not install MobileHMI, but installed GENESIS64, you can still create a GraphWorX64 Mobile Display from GraphWorX64.

2. Go to **File → New Settings**. Pick the **MobileHMI** platform. Choose display properties to match your desired device.

NOTE: Choosing display properties to match the device is not mandatory. A device with properties for an iPhone can run on a Windows Phone 8, but its aspect ratio and size will best fit the iPhone.

3. Select the **Pivot Control** from the MobileHMI Configuration ribbon, click and drag it onto the display so that it fills the whole display.
4. Select the newly added Pivot Control from the Explorer, and then on the Properties, under "Content", edit the "Text" field to "Overview". Change the Foreground color (Text color) as you wish.

5. In the items row, select the ellipsis button to add a collection which contains three pages (alternately, you can add pages using the "Add Pages" button in the Pivot Pages group after select your pivot control).

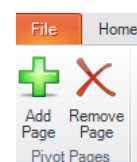


Figure 1 - Add page

6. In Explorer, right-click on a page, choose **Edit Text**, and name it, "KPI". Repeat for the other two pages, naming them "Alarms" and "Trends".

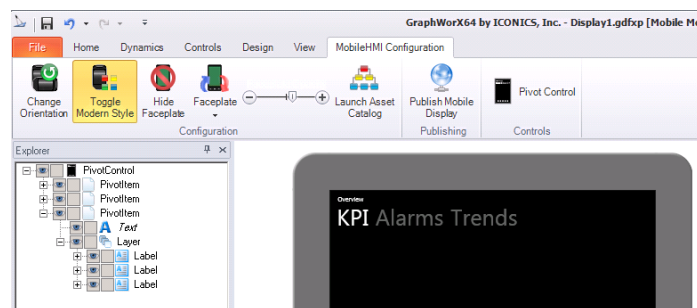


Figure 2 - Pivot Control with Multiple Pages

7. With the PivotItem for the KPI page fully expanded in the explorer, select the **Layer** that is located below it, as in Figure 3.

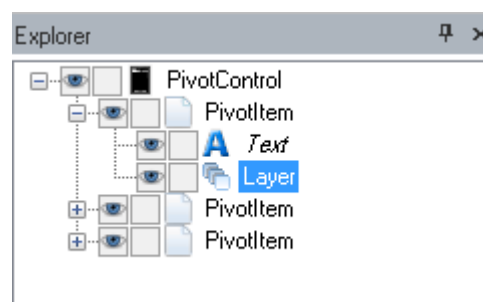


Figure 3 - Editing a Group for a PivotItem

8. With only the layer selected, you can now add various GraphWorX64 objects and controls to it. As this is the KPI page, add several process points and labels related to KPIs (Key Performance Indicators). You can use the Simulation tags for these if you wish.



MobileHMI

Integration with GraphWorX64



APPLICATION NOTE

September 2013

9. In a similar fashion, add an AlarmWorX64 Viewer to the **Alarms** page.
10. Finally, add a TrendWorX64 Viewer to the **Trends** page and add an OPC or Simulation data source pen to it.
11. Save all of your changes, and now publish the display using the **Publish Mobile Display** button from the MobileHMI Configuration ribbon.

NOTE: Publishing a GraphWorX64 Windows Phone Display is the similar procedure as publishing any other display. For more information on how to publish a GraphWorX64 display, please refer to the "GraphWorX64 – Publishing Display Using..." application notes. If you did not install MobileHMI, but GENESIS64 instead, you will want to make sure you publish path is pointing to the MobileHMI folder such as GENESIS64/Websites/PubDisplay/**MobileHMI**

Configuring a Single Display Layout

To configure your MobileHMI clients to see this page first when choosing your server in the MobileHMI app we need to configure it on the MobileHMI server.

1. On the server, launch **Workbench-SL** from Start → Programs → ICONICS.
2. In Workbench-SL, choose the **MobileHMI** provider.
3. Expand your configuration database, then right-click on **Layouts** and choose **Add Layout**.
4. Give your layout a name. Check the box for "Single Display Layout". It should look something like Figure 4. Click Apply.

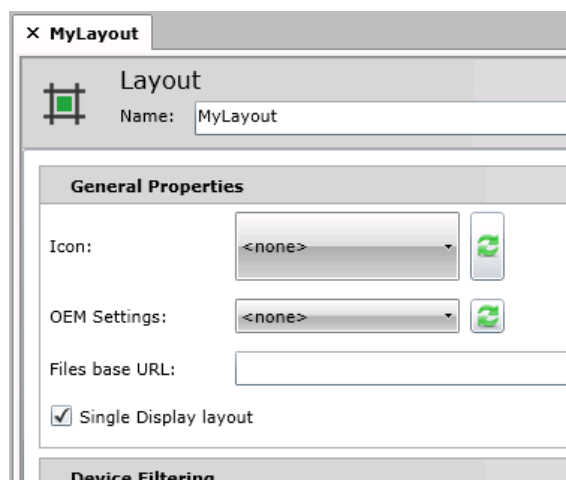


Figure 4 - New Layout

5. Right-click your layout and select **Add Group**. Give your group a name. Click Apply.
6. Right-click on your group and select **Add Tile**. Give your tile a name, then go to the Command tab. Choose the "Load

Graphics Display (*.gdfxp|*.gdfxpz)" command and enter the URL of your published MobileHMI display, such as:

<http://ServerName/PubDisplay/MobileHMI/YourDisplayName.gdfxp>

7. Click Apply.

NOTE: Because we are using a single-display layout this tile will not actually be visible, so we don't need to configure anything else but the command. If you wish to use the App Hub instead of jumping to a particular display you can uncheck "Single Display Layout" on the Layout level and configure your tiles and groups as desired. For more information on the App Hub, see the help files.

Viewing the Published Page

With the page published you should now be able to view it on your mobile device. Pages can either be viewed in an HTML5-compliant browser, or opened within the MobileHMI app for your device.

Viewing in the MobileHMI app

1. If you do not already have MobileHMI installed on your device, please refer to the "MobileHMI – Getting Started" Application Note and help documentation.
2. Launch **MobileHMI** from your mobile device.
3. Connect to your server. If you do not already have a server listed, add one. Make sure you are either on the same WiFi network as your MobileHMI server or that you are using the fully qualified domain name (like mobilehmi.iconics.com). Once connected, log in if you have security enabled, otherwise you should be taken to the page you specified in your tile in the "Configuring a Single Display Layout" section.
4. To select other pages you can either tap the header, or slide your finger from right to left.

Viewing in an HTML5-Compliant Browser

To view your page in an HTML5-compliant browser, simply navigate to the AnyGlass URL of your page, such as:

<http://ServerName/AnyGlass/PubDisplay/MobileHMI/DisplayName.gdfxp>

NOTE: It is important to remember the "AnyGlass" part of the URL.