



ICONICS, Inc.
100 Foxborough Blvd.
Foxborough, MA 02035
Phone: (508) 543-8600
Fax: (508) 543-1503
[Worldwide Support Centers](#)
www.iconics.com



© ICONICS, Inc. All rights reserved.
Specifications are subject to change without notice.
GENESIS, GENESIS32, Pocket GENESIS, BizViz
and their respective modules, OPC-To-The-Core, and
Visualize Your Enterprise are trademarks of ICONICS,
Inc. Other product and company names mentioned
herein may be trademarks of their respective owners.

Introduction

The basic purpose of GENESIS32 data mining is to visualize data from various data sources, such as a Microsoft Access database, in a customizable, user-friendly display format that enables users to interact with and manipulate the data. The Data Mining Configurator establishes connections with data sources that can be mined from GENESIS32 applications, such as GraphWorX32, where users can visualize data. In general, the Data Mining Configurator enables you to:

- Connect to databases (i.e. where to get the data).
- Select data sets to mine within the connected databases (i.e. which group of data within the connected database).
- Specify data items to monitor within the chosen data sets (i.e. which values to read from the selected group of data).


Once you have configured your database connections using the Data Mining Configurator, you can configure a GraphWorX32 display in order to visualize the data. In GraphWorX32, the Unified Data Browser enables you to create process points using data items from your data mining configuration database. Thus, the data mining configuration database serves as a medium through which data can be channeled from multiple data sources (e.g. Microsoft Access, Microsoft SQL Server, Microsoft Excel, Oracle, SAP, ODBC, and Generic OLE DB data sources) to a visualization medium (i.e. GraphWorX32) where you can view or manipulate the data.

Key features of data mining include:

- Brings database access to any OPC client.
- Supports many data sources, including Microsoft Access, Microsoft SQL Server, Microsoft Excel, MSDE, SAP, and Oracle.
- Easy-to use dataset support includes database table access (single field read or write, column read or write, row read or write, and two-dimensional array read or write) as well as simple SQL commands.
- Data manipulators enable access to database stored procedures and execution of complex SQL commands.
- Database Connection Wizard.
- Database object browser.
- Support for aliasing (one data tag can access multiple database fields).
- Data Mining (grid) ActiveX control.
- Data Mining Configurator.
- Integration of data-mining configuration into Unified Data Browser.


Configuring the Data Mining OPC Server

The data-mining OPC server can be configured using two configuration tools:
The first is the stand-alone **Data Mining Configurator**, shown in the figure below. This document describes how to use the Data Mining Configurator.

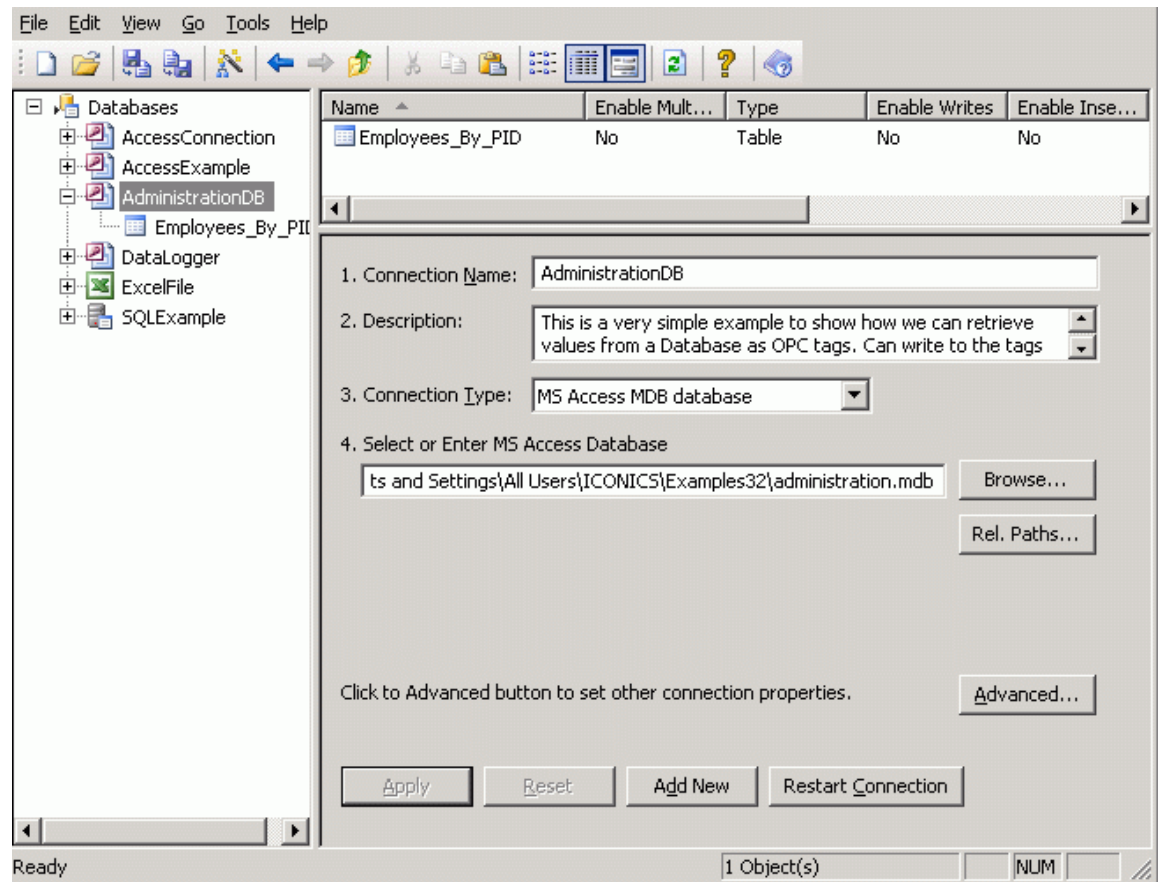

Stand-Alone Data Mining Configurator

The second tool is embedded in the **Unified Data Browser** on the **Database Access** tab, as shown in the figure below. This tab is available together with OPC Data Access browser. It was designed for ease of use to allow users to make on-the-fly modifications in the server address space. This second tool supports a subset of features available in the Data Mining Configurator application. For more information, please see the Unified Data Browser Help documentation.

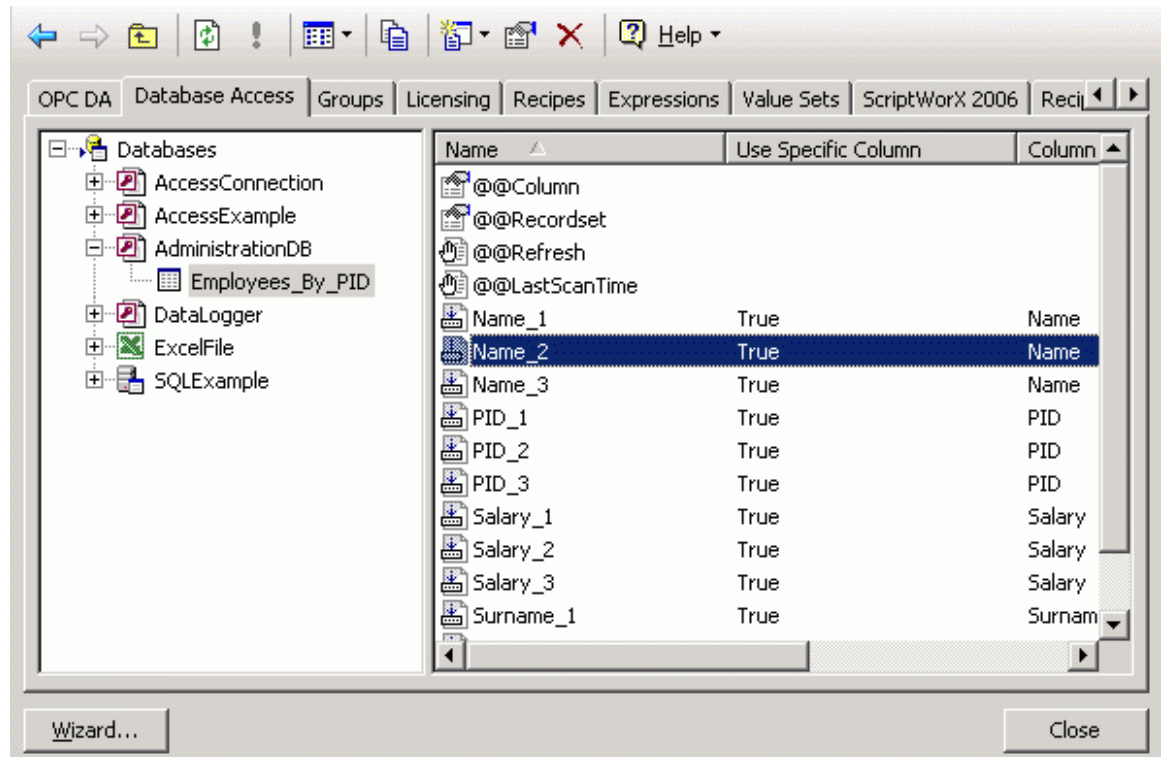

Unified Data Browser: Database Access Tab

Note: Both data-mining configuration tools are capable of configuring Data Mining OPC Servers on the local machine only.

When configuring data mining, first you should decide what type of action you want to perform with databases; there are two basic options:

- Read the data periodically and display them in an OPC client (e.g. in GraphWorX32)
- Manipulate database data upon user request.

The first option is represented by **Data Sources**; the second option by **Data Manipulators**. Both of these objects need to specify a **Database Connection**. For instruction on how to create each of these objects in the configuration database, please see the sections below.

Data Mining Configuration Quick Start

Data mining configuration involves the following basic steps:

1. Start the Data Mining Configurator.
2. Connect to a database (i.e. where to get the data).
3. Select a data set or data manipulator to mine within the connected database (i.e. which group of data within the connected database).

4. Specify which data items to monitor within the chosen data set (i.e. which values to read from the selected group of data).
5. Create a GraphWorX32 display that connects to data items in your data mining configuration database.
6. Visualize and manipulate the data in the GraphWorX32 display in runtime.

The steps listed above are described throughout this document. The GENESIS32 installation provides a **Data Mining Demo** configuration that will help you get started with your data mining configurations. The following section will guide you through the demo.

Note: The Data Mining Configurator provides a **Data Mining Wizard** that helps you create and configure your data source connections. You can also configure your data mining settings in the **Database Access** tab in the Unified Data Browser. For more information, please see the Unified Data Browser help documentation.

Data Mining Configuration Demo


The GENESIS32 installation provides a **Data Mining Demo** configuration. To view the demo files, go to the **Program Files\ICONICS\GENESIS32\Examples\Database Mining Examples** directory in the GENESIS32 installation. This directory contains the following files:

- **DBOPCServerConfigurator.mdb:** This Microsoft Access file is the default active data mining configuration database.
- **administration.mdb:** This Microsoft Access file is the demo database connection.
- **DBOPC.gdf:** This is a GraphWorX32 display that allows you to view the data sources and data items specified in the demo database connection.

To view the **DBOPCServerConfigurator.mdb** demo configuration database:

1. Open the Data Mining Configurator from the Windows **Start** menu by selecting **Programs > ICONICS Tools > Data Mining Configurator**.
2. This opens the **DBOPCServerConfigurator.mdb** database in the Configurator, as shown in the figure below. The main tree control of the Configurator is called **Databases**. Under this tree control, you can see the following items:
 - The demo database connection, called **AdministrationDB**, which connects to the **administration.mdb** Microsoft Access database.
 - A demo data source, called **Employees_By_PID**.
 - Several data items (e.g. Name_1, Name_2, Name_3, PID_1, PID_2, etc.)


These demo items are described in greater detail in the sections below.

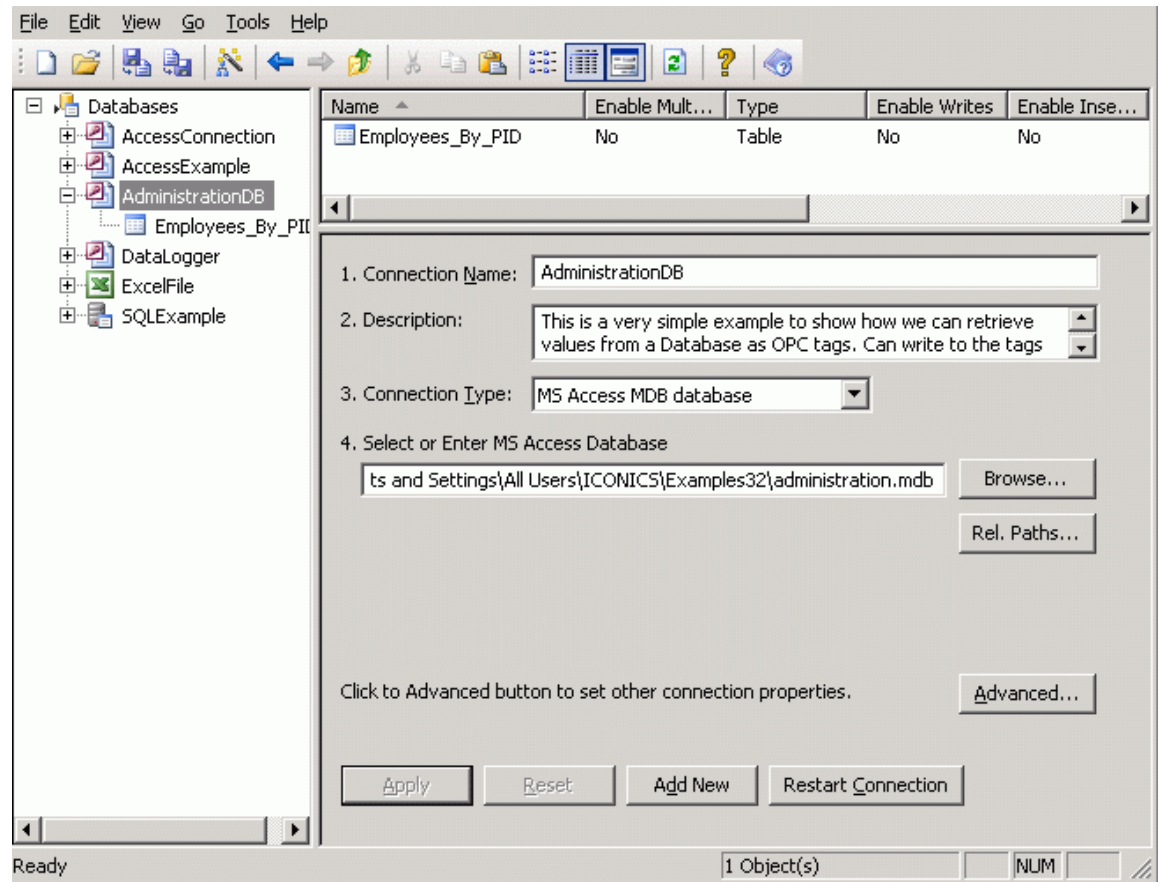

Data Mining Configuration Demo

Demo Database Connection


The Data Mining Configurator default configuration database provides a demo database connection called **AdministrationDB**, as shown in the figure below. The example configuration shows a connection to a Microsoft Access database called **administration.mdb**, which is located in the **\Program Files\ICONICS\GENESIS32\Examples\Database Mining Examples** directory in the GENESIS32 installation.

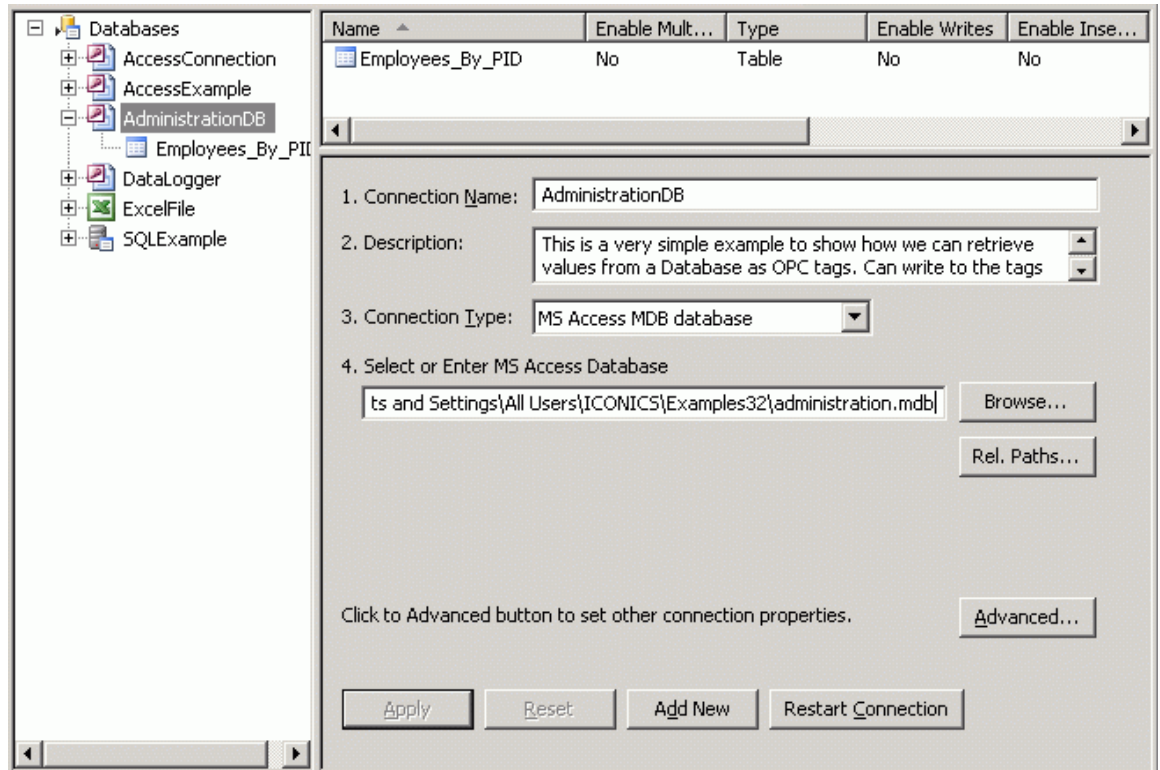

Database Connection Demo

Demo Data Source


The Data Mining Configurator demo database connection, called **AdministrationDB**, contains a data source called **Employees_By_PID**, as shown in the figure below. This example configuration shows a data source connection for the **administration.mdb** database.

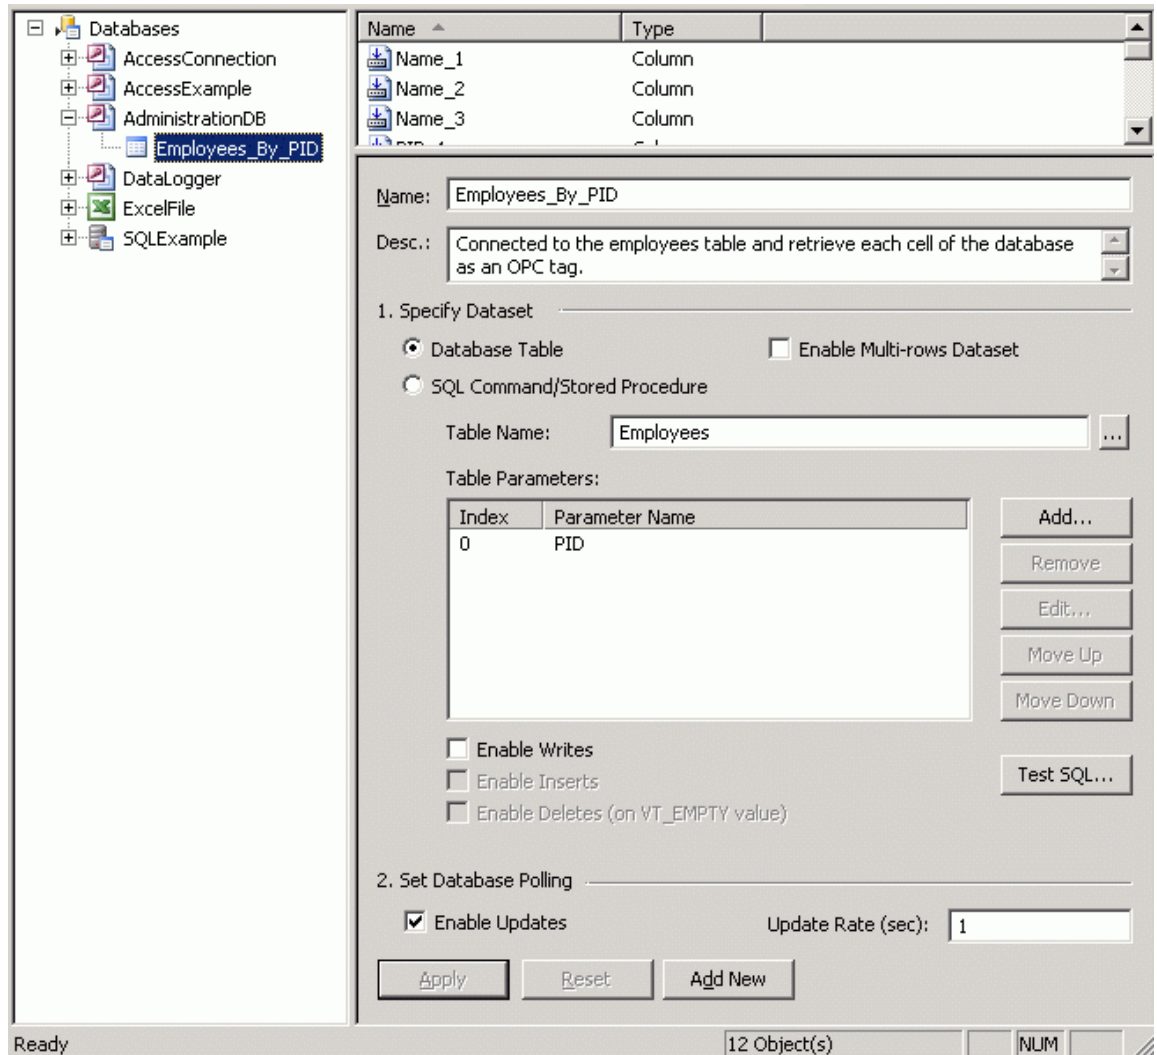

Data Source Demo

As you can see in the **Employees_By_PID** data source configuration above, the data set specifies a table in the **administration.mdb** (Access) database called **Employees**. To view the tables in the database:

1. Click on the ... button next to the **Table Name** field, as shown in the figure above.
2. This opens the **Unified Data Browser**, which displays a list of tables in the database, as shown in the figure below. As you can see, the database contains two tables: **Employees** and **ProjectDetails**. In this demo data source, the **Employees** table already has been selected.

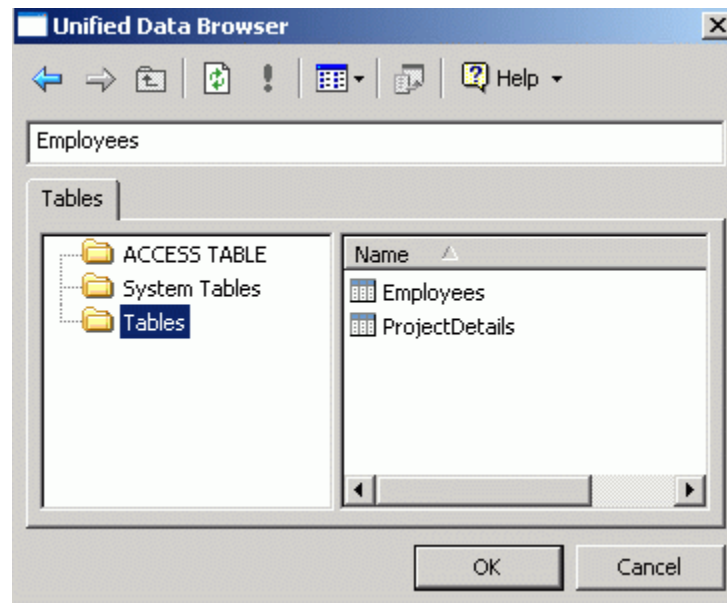


Employees Table in Unified Data Browser

3. To view the same the database tables in Microsoft Access, start Microsoft Access (must be installed through Microsoft Office) and open the **administration.mdb** file in the **Program Files\ICONICS\GENESIS32\Examples\Database Mining Examples** directory in the GENESIS32 installation. The **Employees** database table in the database contains several columns and rows of data about four different employees, as shown in the figure below:

- Bob
- Russel
- Dave
- Arthor

The columns list the personal data for each employee:

- **PID:** Employee's identification number
- **Name:** Employee's first name
- **Surname:** Employee's last name
- **Title:** Employee's job position
- **Department:** Company department in which the employee works
- **Salary:** Employee's salary

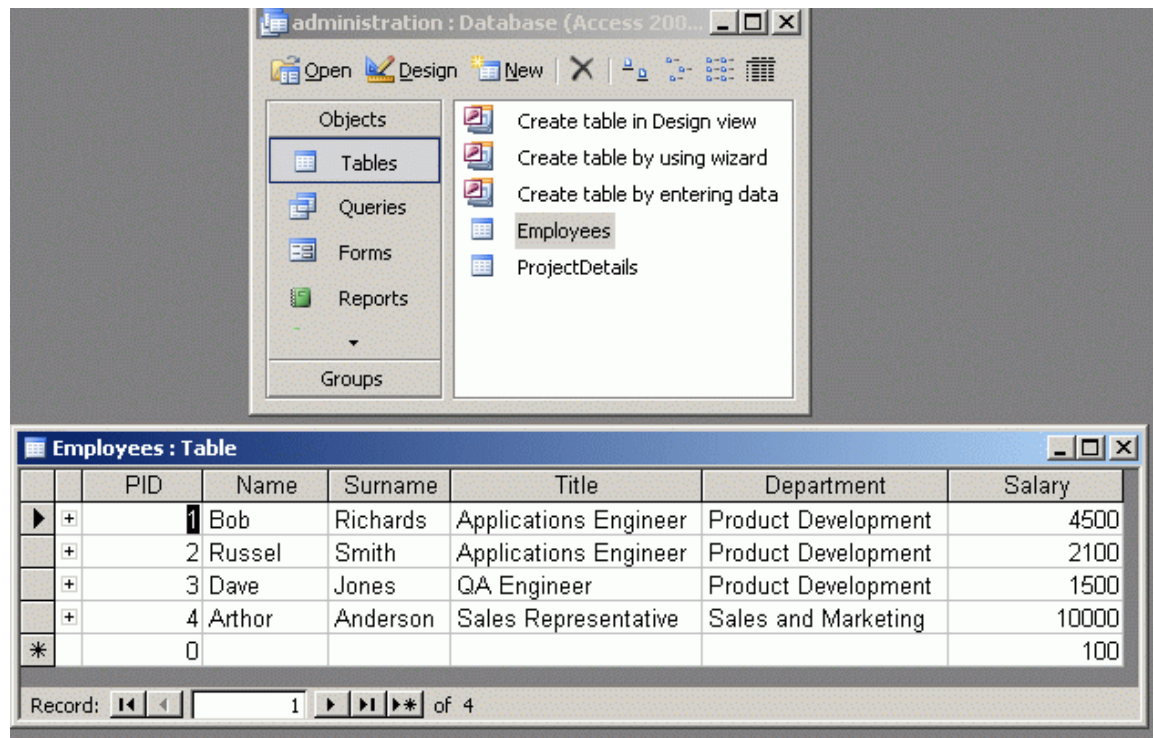

Employees Table in Administration Database

Demo Data Items


As shown in the figure below, the **Employees_By_PID** data source configuration contains several data items:

- Name_1
- Name_2
- Name_3
- PID_1
- PID_2
- PID_3
- Salary_1
- Salary_2
- Salary_3
- Surname_1
- Surname_2
- Surname_3

Databases	Name	Type
+ AccessConnection	Name_1	Column
+ AccessExample	Name_2	Column
+ AdministrationDB	Name_3	Column
+ Employees_By_PID	PID_1	Column
+ DataLogger	PID_2	Column
+ ExcelFile	PID_3	Column
+ SQLExample	Salary_1	Column
	Salary_2	Column
	Salary_3	Column
	Surname_1	Column
	Surname_2	Column
	Surname_3	Column

Data Items in Employees Table


The data items correspond to the information in the **Employees** database table in the Administration database. For example, the itemID **AdministrationDB.Employees_By_PID.Name_2** has the value **Russel**, because **Russel** is the second name listed in the database table, as shown in the figure below.

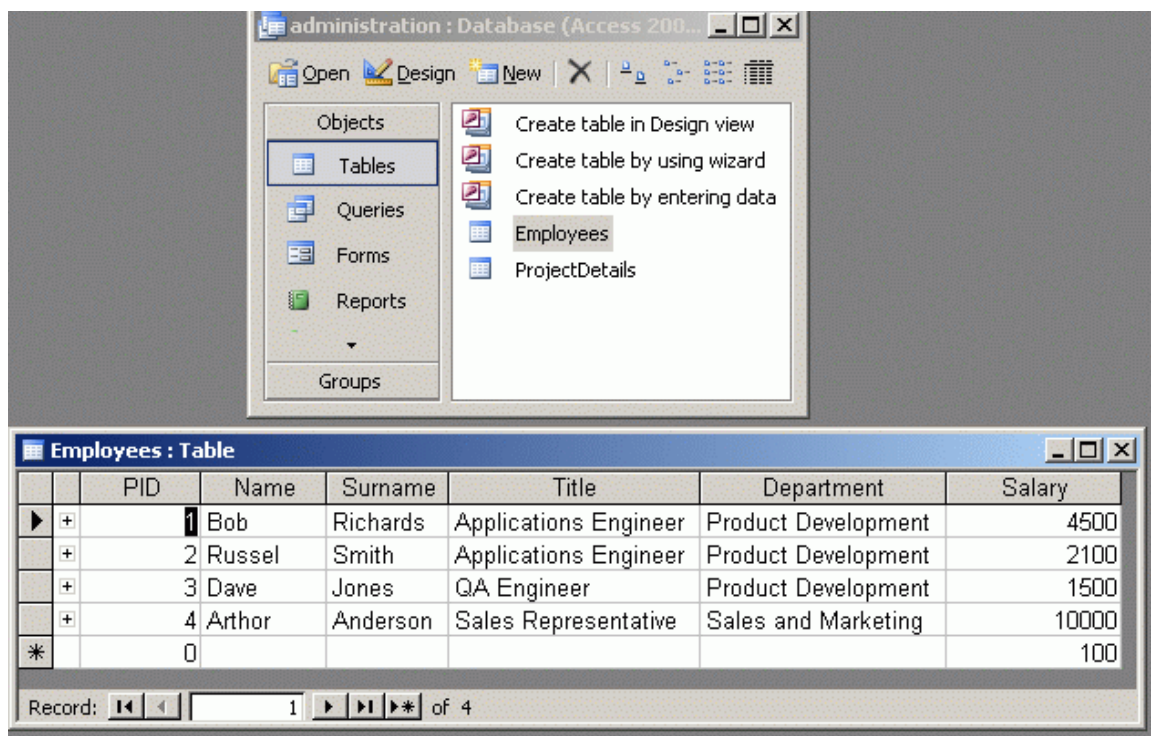

PID	Name	Surname	Title	Department	Salary
1	Bob	Richards	Applications Engineer	Product Development	4500
2	Russel	Smith	Applications Engineer	Product Development	2100
3	Dave	Jones	QA Engineer	Product Development	1500
4	Arthor	Anderson	Sales Representative	Sales and Marketing	10000
0					100

Employees Table in Administration Database

How do you determine which value to display for each itemID? This is defined in the data item properties. For example, click on the **Name_2** data item in the tree control under the **Employees_By_PID** to view the data item properties, as shown in the figure below.

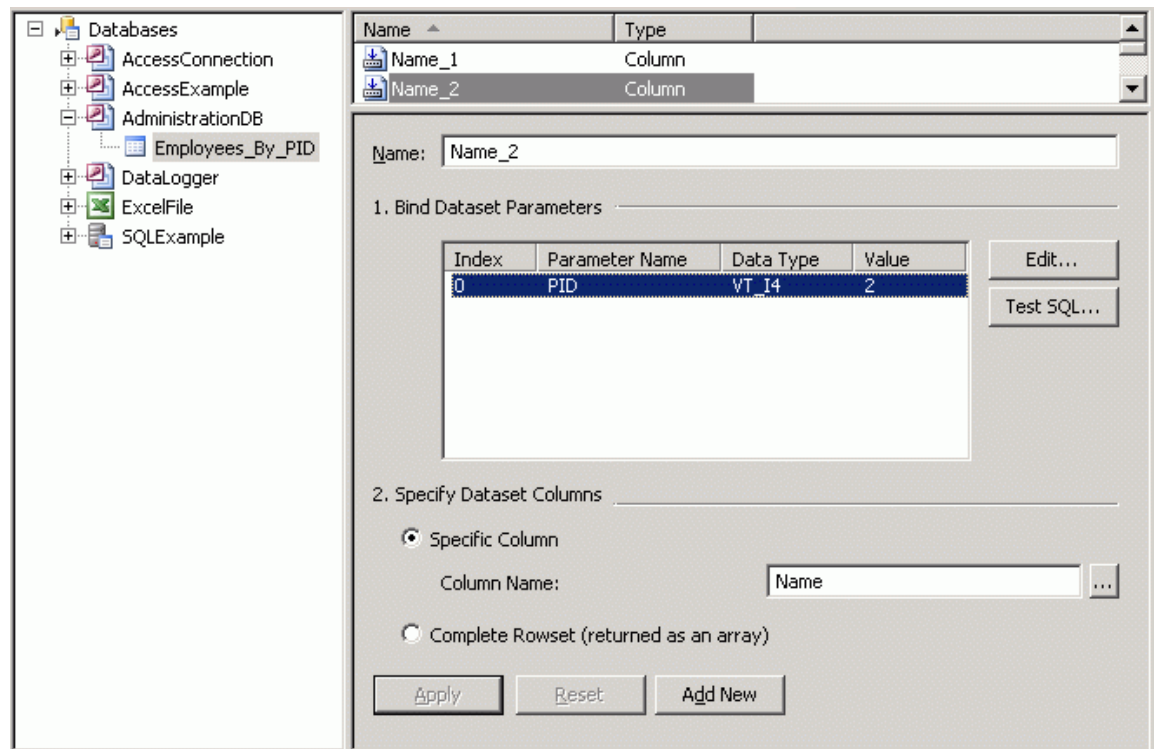


Data Item Demo

To select a column name from the database table, choose **Specific Column** and then click the ... button next to the **Column Name** field as shown in the figure above. This opens the **Unified Data Browser**, which displays a list of columns in the **Employees** database table, as shown in the figure below. The columns list the personal data for each employee:


- **PID:** Employee's identification number
- **Name:** Employee's first name
- **Surname:** Employee's last name
- **Title:** Employee's job position
- **Department:** Company department in which the employee works
- **Salary:** Employee's salary

In this example, the **Name** column is already selected for the **Name_2** data item.

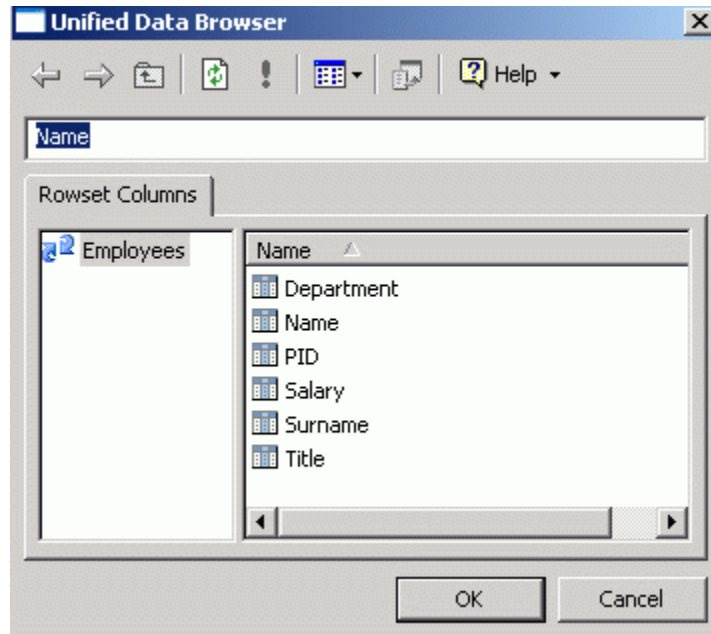

Names Column in Unified Browser

Once you have selected a table, you need to specify a data set parameter (i.e. a specific value that you want to read from the database table). Click the **Add** button to enter a **Parameter Value**, as shown in the figure below.

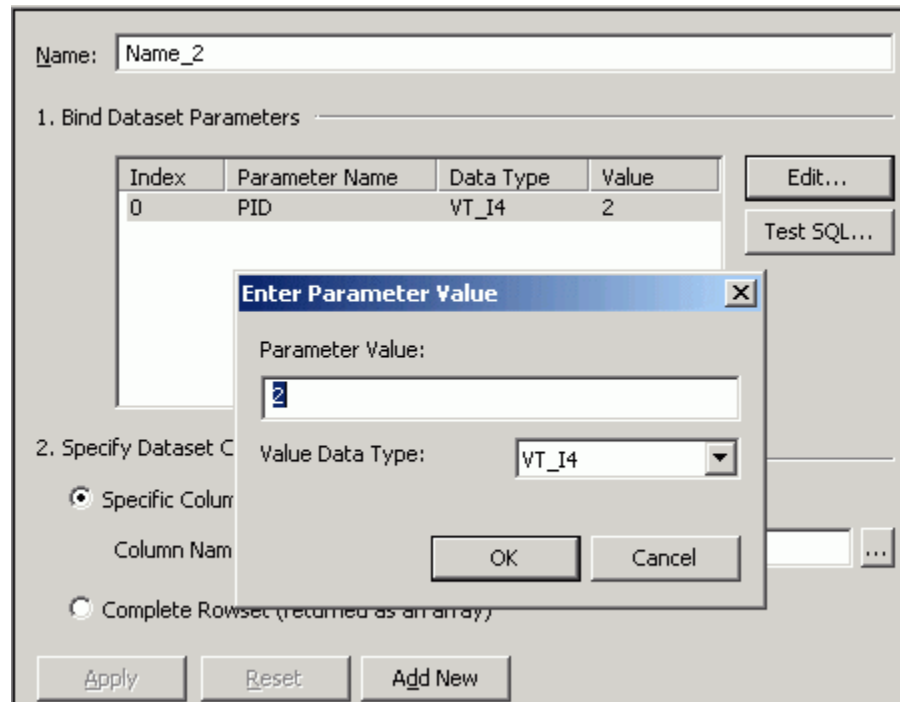

Specifying Data Set Parameters

The **Parameter Value** corresponds to the record number in the database table. For data item **Name_2**, the **Parameter Value** is "2," as shown in the figure above. As you can see in the figure below, in the **Name** column, record number "2" corresponds to the second value in the column. Thus, the value for record

number "2" is **Russel**, which is highlighted in the figure below. Thus, the **Parameter Value** for data item **Name_2** will be resolved as "Russel," as shown in the figure below.

Employees : Table						
	PID	Name	Surname	Title	Department	Salary
+	1	Bob	Richards	Applications Engineer	Product Development	4500
▶	2	Russel	Smith	Applications Engineer	Product Development	2100
+	3	Dave	Jones	QA Engineer	Product Development	1500
+	4	Arthor	Anderson	Sales Representative	Sales and Marketing	10000
*	0					100

Record: 1 2 3 4 * of 4

Record Number in Database Table

GraphWorX32 Data-Visualization Demo

Now that you have seen how the demo database connection, demo data source, and demo data items are configured in the Data Mining Configurator, the next step is to visualize the data in GraphWorX32. The Data Mining Demo provides an example GraphWorX32 display that shows how to configure your data mining connections so you can view data coming from the database.

1. Go to the **Program Files\ICONICS\GENESIS32\Examples\Database Mining Examples** directory in the GENESIS32 installation and open the **DBOPC.gdf** file.
2. The display opens in GraphWorX32 configuration mode, as shown in the figure below. The display contains two different examples of data mining visualization: static and dynamic. A **static** display simply displays the data values from the connected database. A **dynamic** display allows you to manipulate data values from the connected database.
The table in the **static definition** section contains some column names from the **Employees** database table, as shown in the figure below:
 - **Name:** Employee's first name
 - **Surname:** Employee's last name
 - **Salary:** Employee's salary
 - **PID:** Employee's identification number

Each column contains process points that correspond to data items (e.g. **Name_1**, **Name_2**, **Name_3**, **PID_1**, **PID_2**, etc.) in the **Employees_By_PID** data source from the demo data mining configuration. A process point must be configured for each data item. We will continue to look at the **Name_2** data item as an example:

3. Under the **Name** column in the GraphWorX32 display, double-click the second process point under the **Name** column, as shown in the figure below.

Static definition


Name:	Surname:	Salary in \$:	PID:
??????????	??????????	??????????	??????????
??????????	??????????	??????????	??????????
??????????	??????????	??????????	??????????

Dynamic definition

Name:	Surname:	Salary in \$:	
??????????	??????????	??????????	PID=PID_1
			PID=PID_2
			PID=PID_3


Data Mining Demo in GraphWorX32: Configuration Mode

- This opens the **Property Inspector** for the data item. Click on the **PPT/DE** tab, as shown in the figure below. As you can see, the **AdministrationDB.Employees_By_PID.Name_2** item ID has already been specified in the **Data Source** field.

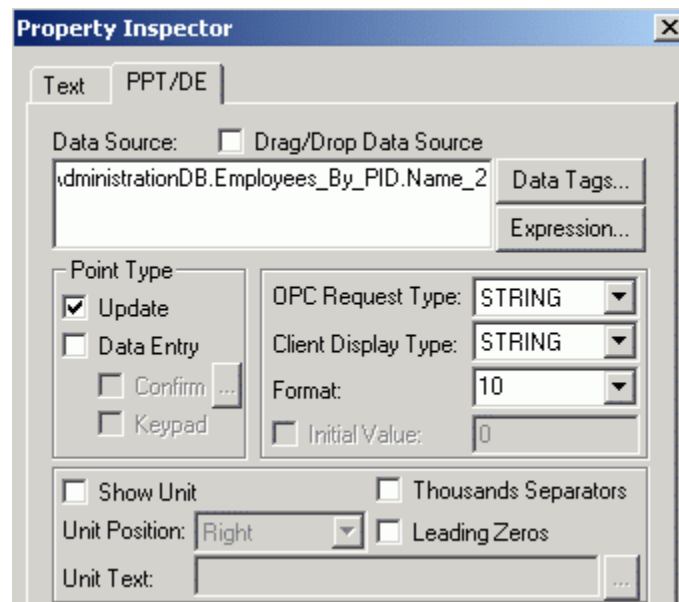**Property Inspector for Name_2 Data Item**

- Click on the **Data Tags** button to open the Unified Data Browser. The Unified Data Browser opens to the **Database Access** tab, as shown in the figure below. You can see that the browser tree control is similar to the tree control in the Data Mining Configurator; you can choose from configured data items from the **Employees_By_PID** data source connection. The **Name_2** item ID has already been selected. Notice that each **ItemID** (e.g. **ICONICS.DatabaseOPCServer.3\AdministrationDB.Employees_By_PID.Name_2**) contains the following information:


- Server name (e.g. **ICONICS.DatabaseOPCServer.3**)
- Database connection name (e.g. **AdministrationDB**)
- Data source name (e.g. **Employees_By_PID**)
- Data item name (e.g. **Name_2**)

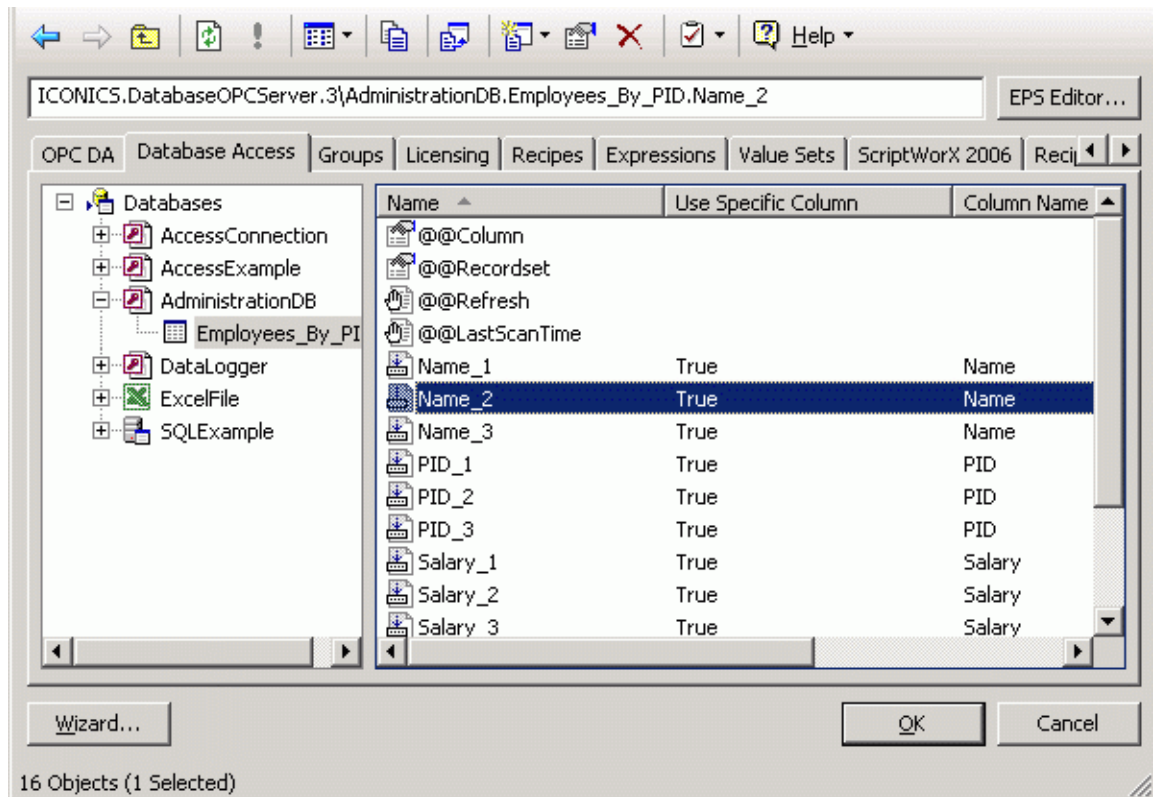

Data Item Specified in Unified Browser


6. Close out of the Unified data Browser and the Property Inspector dialog box.
7. Enter the GraphWorX32 display into runtime mode. You can see the data coming from the **Employee** database table, as shown in the figure below. Notice that the **Parameter Value** for data item **Name_2** is resolved as "Russel" in the visualization display.

Note: The **Static definition** section simply displays the values from the **Employee** database table for the configured data items, but the data cannot be manipulated. The **Dynamic definition** section also displays values from the **Employee** database table, but in this case only one row of data is displayed at a time, and you change the currently viewed row by clicking the three PID buttons, as shown in the figure below. The dynamic configuration uses local aliases and global aliases, which enable you to switch between rows during runtime mode.

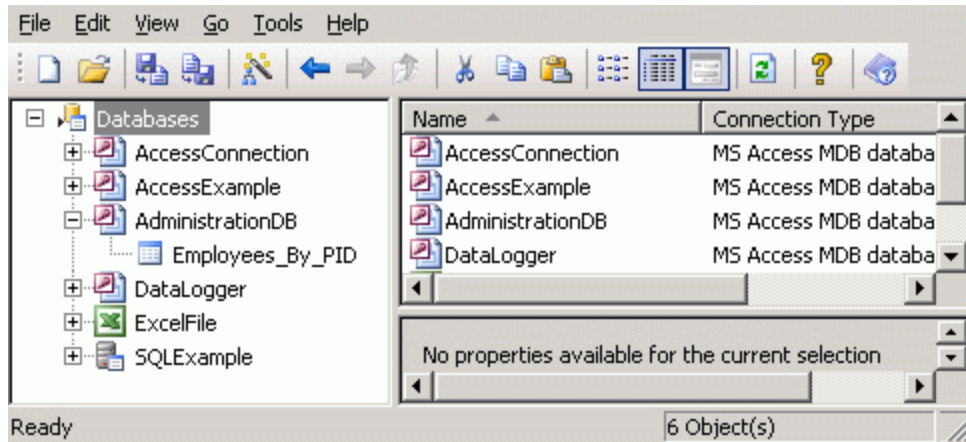

Data Mining Demo in GraphWorX32: Runtime Mode

8. The items displayed in GraphWorX32 correspond to the information in the **Employees** database table in the Administration database. For example, the itemID **AdministrationDB.Employees_By_PID.Name_2** has the value **Russel**, because **Russel** is the second name listed in the database table, as shown in the figure below.

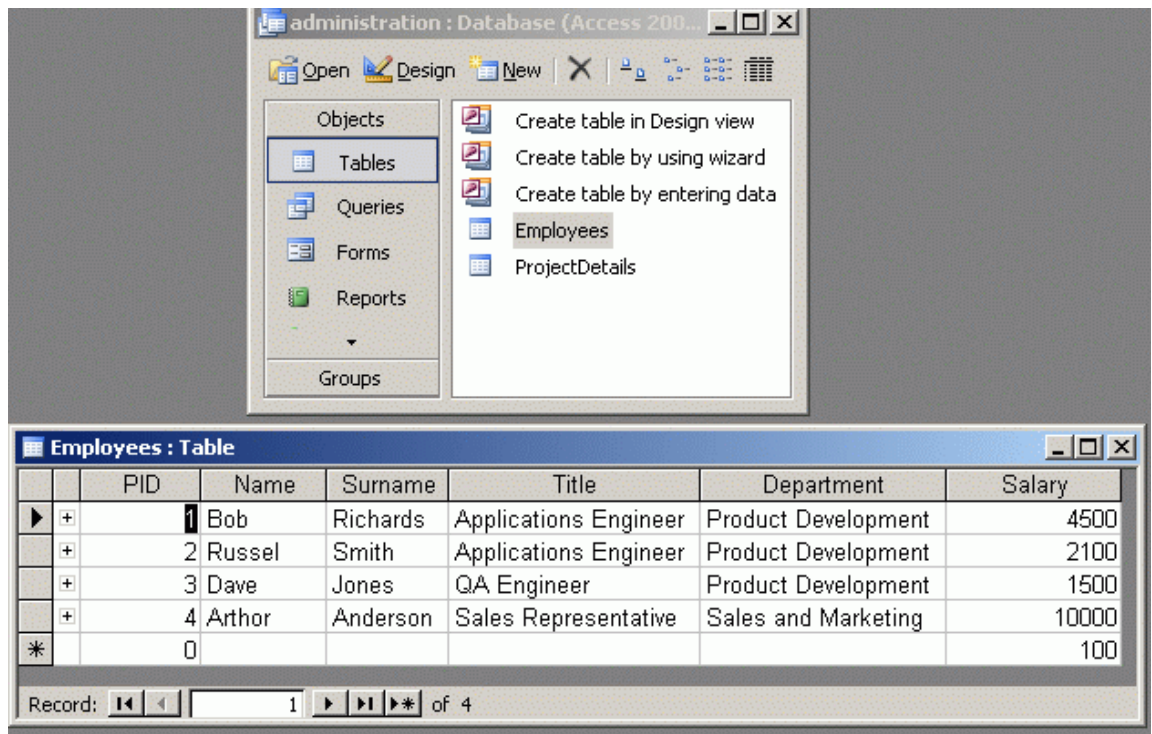


Employees Table in Administration Database

Starting the Data Mining Configurator

To start the Data Mining Configurator:

1. From the Windows **Start** menu, select **Programs > ICONICS Tools > Data Mining Configurator**.
2. This opens the Configurator, as shown in the figure below. The screen consists of a split window with a tree control view in the left-hand pane and a configuration view in the right-hand pane. The Configurator provides a standard format for the configuration database, as well as a sample (default) configuration project. The Configurator also includes a toolbar and menus with many command functions. The default configuration database is the **DBOPCConfig.mdb** file in the **C:\Documents and Settings\All Users\ICONICS\Examples32** directory.

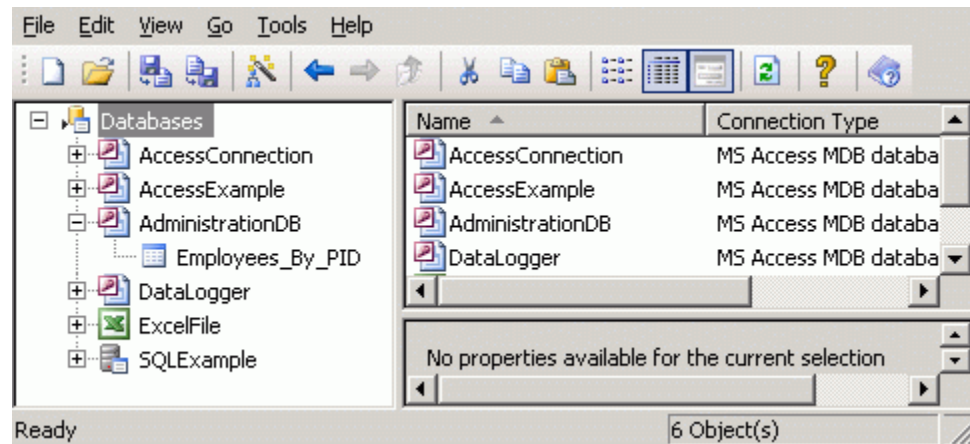

Configurator Screen

See Also

Creating a New Configuration

Data Mining Configuration Wizard

Toolbar


Menus

Options

Creating a New Configuration Database


To create a new configuration database in the Configurator:

1. Select **New** from the **File** menu, as shown in the figure below.

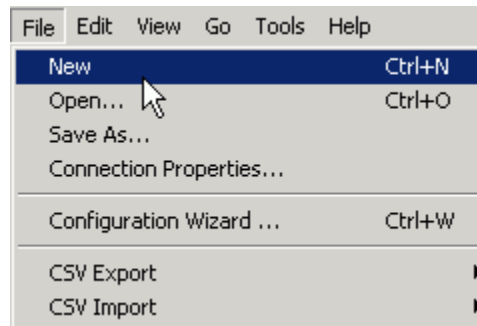

Creating a Configuration Database

2. In the **Save New Database** dialog box, select the database type from the **Save As Type** drop-down list, as shown in the figure below. Browse for the target directory, give the file a name, and then click the **Save** button.

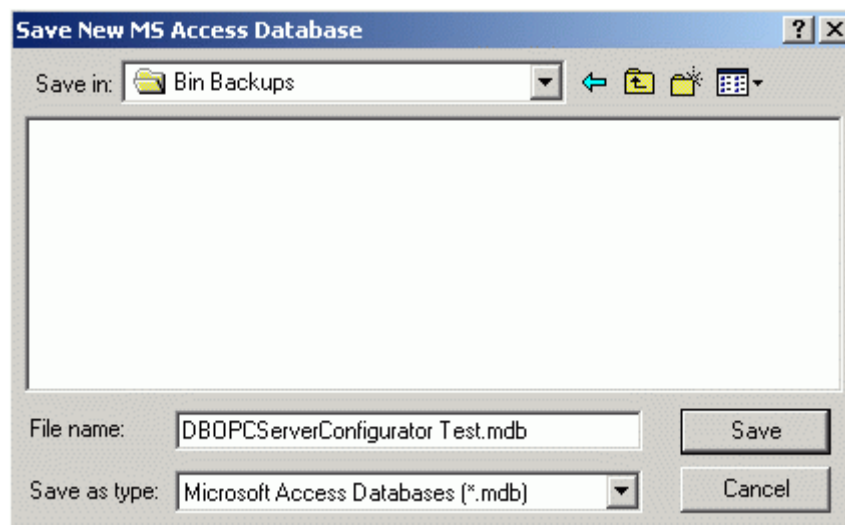

Saving the New Configuration Database

Toolbar

The Configurator toolbar, shown below, contains the following command buttons. To show or hide the **Standard** toolbar, select **Toolbars > Standard Buttons** from the **View** menu. The **Standard** toolbar, shown below, contains the following command buttons.

New: Creates a new configuration database.

Open: Opens an existing configuration database.

Import: Imports configuration data from a text file (.txt) or a Microsoft Excel file (.csv).

Export: Exports configuration data to a text file (.txt) or a Microsoft Excel file (.csv).

Configuration Wizard: Launches the Data Mining Wizard.

Back: Moves the cursor back to the previously selected item in the tree control.

Next: Moves the cursor to the next item in the tree control.

Up One Level: Moves up one level in the tree control.

Cut: Deletes current selection, sending it to the clipboard.

Copy: Copies the current selection to the clipboard.

Paste: Pastes the current contents of the clipboard.

List: Displays items as a list.

Details: Displays items as a list with details.

Dialog View: Displays additional configuration options.

Global Refresh: Refreshes the data for the entire Configurator screen.

About: Displays information about the application.

Help Topics: Displays help for the selected items.

File Menu

The **File** menu commands are listed in the table below.

Command	Shortcut Key	Function
---------	--------------	----------

New	CTRL+N	Creates a new configuration database.
Open	CTRL+O	Opens an existing configuration database.
Save As		Saves the current database under a different name as a Microsoft Access (.mdb) file.
Connection Properties		Displays the current database connection properties.
Configuration Wizard	CTRL+W	Launches the Data Mining Wizard.
CSV Export		Exports configuration data from your database to a text file (.txt) or a Microsoft Excel file (.csv). You can specify the delimiters and what to export.
CSV Import		Imports data into your configuration database from a text file (.txt) or a Microsoft Excel file (.csv). You can then specify the delimiters and choose from the import settings.
XML Export		Exports configuration data to an XML file.
XML Export Schema		Exports configuration data to an XML Schema file.
XML Import		Imports configuration data from an XML file.
XML Validate		This feature does not import an XML data file, but it will try to validate its structure using stored XML schema. Once it passes this validation, the XML file is acceptable for import by the Configurator.
Make Active		Activates the current database. If this command is not available, then the current database is already the active database.
Exit		Closes the application.

See Also

Database Connection Properties

Data Mining Configuration Wizard

Exporting Configuration Data

Importing Configuration Data

Activating the Database

File-New

Selecting **New** from the **File** menu creates a new configuration database.

See Also

Creating a New Configuration

File-Open

Selecting **Open** from the **File** menu opens an existing configuration database.

File-Save As


Selecting **Save As** from the **File** menu saves the current database under a different name as a Microsoft Access (.mdb) file.

See Also

Creating a New Configuration

File-Connection Properties

Selecting **Connection Properties** from the **File** menu opens the **Database Connection Properties** dialog box, shown below, which lists the initialization properties for the current database connection.

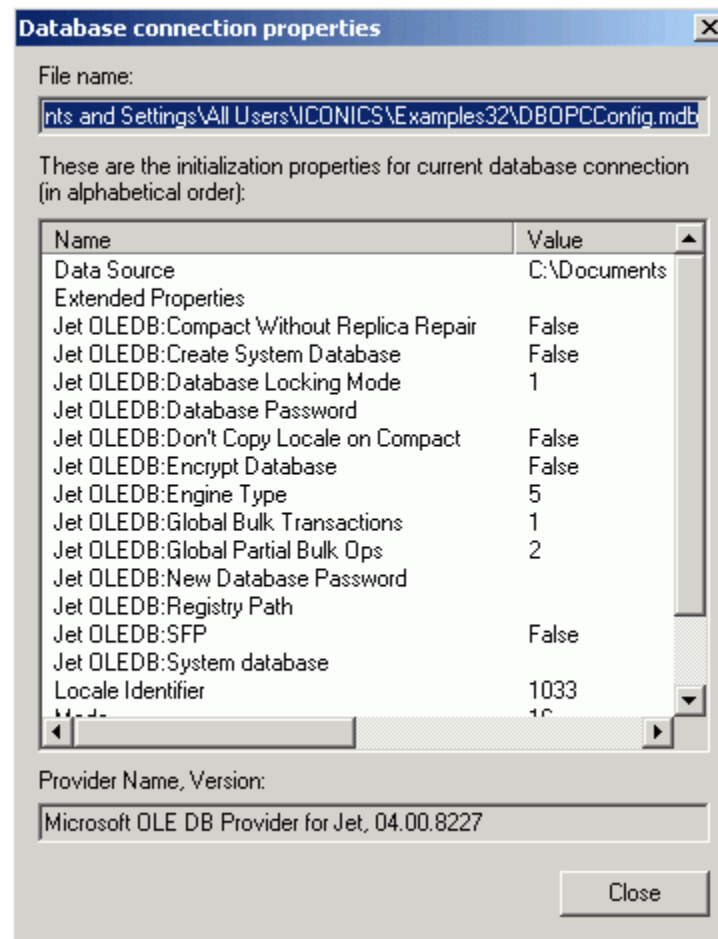

Database Connection Properties Dialog Box

File-Configuration Wizard

Selecting **Configuration Wizard** from the **File** menu launches the Database Mining Wizard.

See Also

Data Mining Configuration Wizard

File-Export CSV

Selecting **CSV Export** from the **File** menu exports configuration data from your database to a text file (.txt) or a Microsoft Excel file (.csv). You can specify the delimiters and what to export.

See Also

Exporting Configuration Data

File-Import CSV

Selecting **CSV Import** from the **File** menu imports data into your configuration database from a text file (.txt) or a Microsoft Excel file (.csv). You can then specify the delimiters and choose from the import settings.

See Also

Importing Configuration Data

File-XML Export

Selecting **XML Export** from the **File** menu exports configuration data to an XML file.

See Also

Exporting Configuration Data

File-XML Export Schema

Selecting **XML Export Schema** from the **File** menu exports configuration data to an XML schema file.

See Also

Exporting Configuration Data

File-XML Import

Selecting **XML Import** from the **File** menu imports configuration data from an XML file.

See Also

Importing Configuration Data

File-XML Validate

Selecting **XML Validate** from the **File** menu does not import an XML data file, but it will try to validate its structure using stored XML schema. Once it passes this validation, the XML file is acceptable for import by the Configurator.

See Also

Importing Configuration Data

File-Make Active

Selecting **Make Active** from the **File** menu activates the currently edited database. Next time the server goes into runtime, it will use this active database for all of its operations.

See Also

Activating the Database

File-Recent

The **File** menu lists the most recently used configuration databases. To open a recently used database, simply select the name of the database from the **File** menu.

See Also


Creating a New Configuration

File-Exit

Selecting **Exit** from the **File** menu closes the application. The current configuration database is automatically saved.

Database Connection Properties

Selecting **Connection Properties** from the **File** menu opens the **Database Connection Properties** dialog box, shown below, which lists the initialization properties for the current database connection.

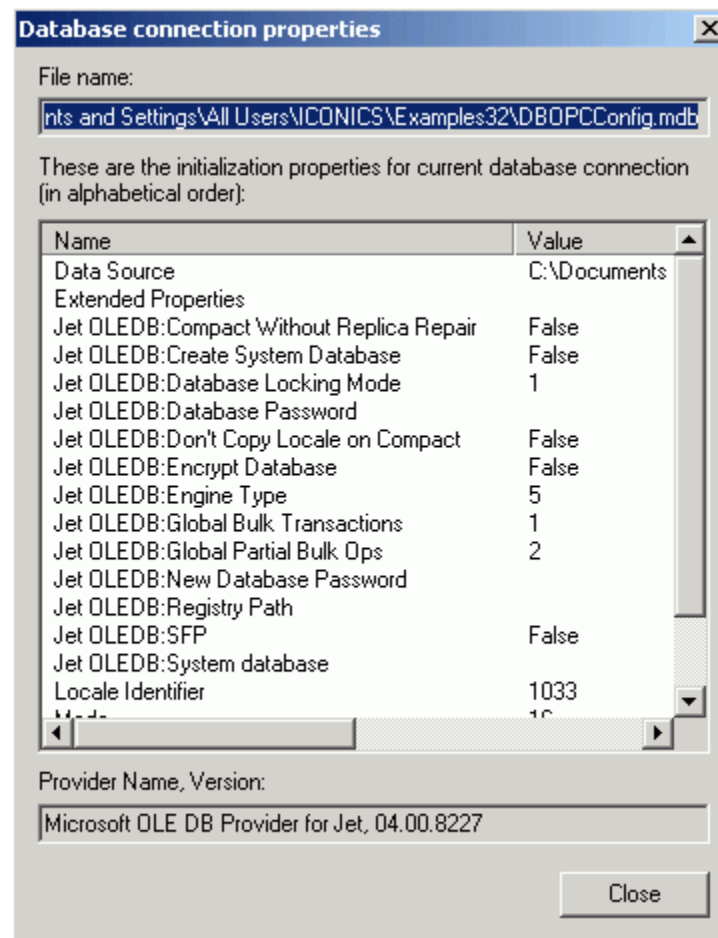

Database Connection Properties Dialog Box


Data Mining Configuration Wizard

The Data Mining Configurator provides a **Data Mining Configuration Wizard** that helps you create and configure your database connections.

Note: You can also configure your data mining settings in the **Database Access** tab in the Unified Data Browser. For more information, please see the Unified Data Browser help documentation.


To run the **Data Mining Configuration Wizard**:

1. Select **Configuration Wizard** from the **File** menu, as shown in the figure below.

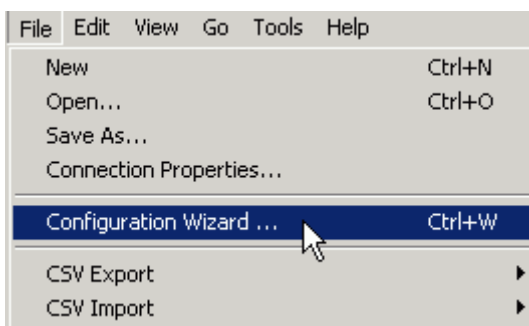


Starting the Data-Mining Configuration Wizard

2. The introduction screen for the Data Mining Wizard appears. Click the **Next** button to continue.

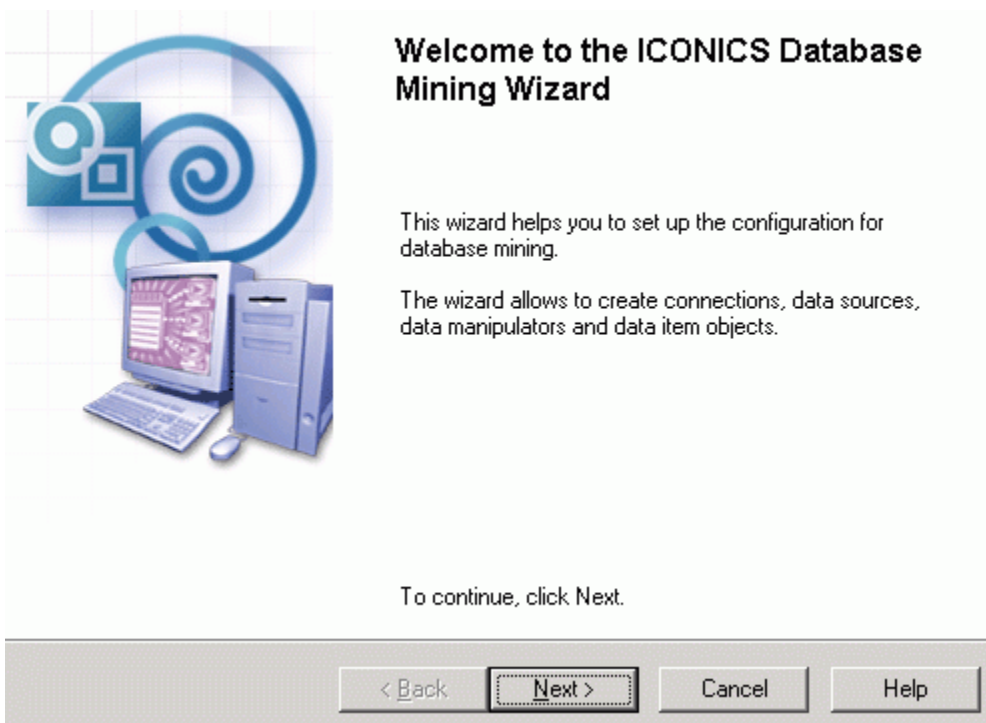

Data-Mining Wizard: Welcome Screen

3. You have two options: **Create a New Data Source** or **Create a New Data Manipulator**, as shown in the figure below. A **data source** can be used to read data from a database. It can access a specific database table directly or use a SQL *read* command to get data. A **data manipulator**, which is intended for processing data stored in a connected database, manipulates data using a SQL *write* command or by executing a stored procedure. Choose an option, and then click the **Next** button to continue.

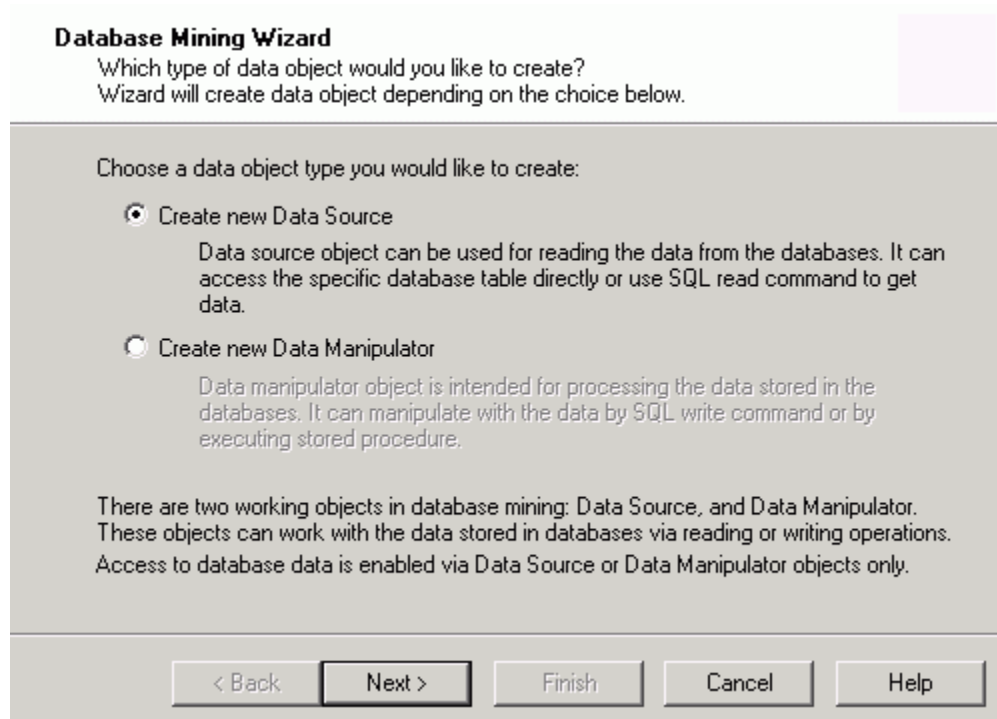

Data-Mining Wizard: Data Object Options

See Also

Example Configuration Using Data Mining Configuration Wizard


Basic Steps in the Data Mining Configuration Wizard

Example Configuration Using Data Mining Configuration Wizard

The following example walks you through the steps in creating a simple Microsoft Access database connection using the Data Mining Configuration Wizard.


To run the **Data Mining Wizard**:

1. Select **Configuration Wizard** from the **File** menu, as shown in the figure below.

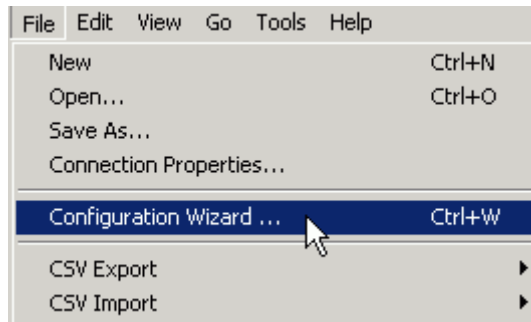

Starting the Data-Mining Configuration Wizard

2. The introduction screen for the Data Mining Wizard appears. Click the **Next** button to continue.

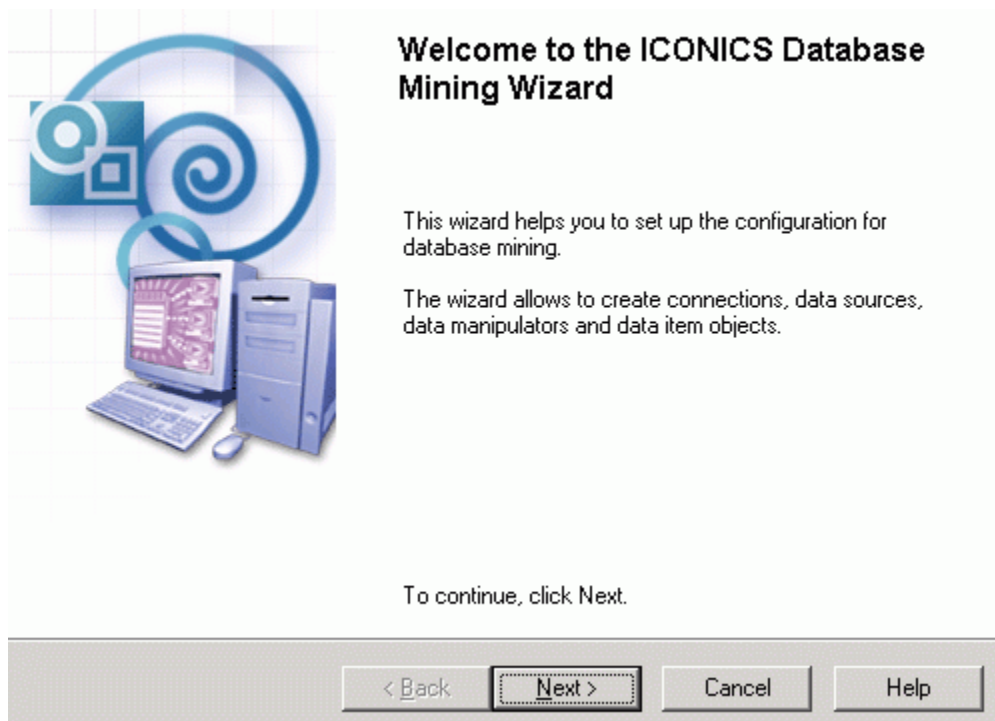

Data-Mining Wizard: Welcome Screen

3. You have two options: **Create a New Data Source** or **Create a New Data Manipulator**, as shown in the figure below. A **data source** can be used to read data from a database. It can access a specific database table directly or use a SQL *read* command to get data. A **data manipulator**, which is intended for processing data stored in a connected database, manipulates data using a SQL *write* command or by executing a stored procedure. Choose an option, and then click the **Next** button to continue.

Database Mining Wizard

Which type of data object would you like to create?
Wizard will create data object depending on the choice below.

Choose a data object type you would like to create:

☒ Create new Data Source
Data source object can be used for reading the data from the databases. It can access the specific database table directly or use SQL read command to get data.

☐ Create new Data Manipulator
Data manipulator object is intended for processing the data stored in the databases. It can manipulate with the data by SQL write command or by executing stored procedure.

There are two working objects in database mining: Data Source, and Data Manipulator. These objects can work with the data stored in databases via reading or writing operations. Access to database data is enabled via Data Source or Data Manipulator objects only.

< Back Next > Finish Cancel Help

Data-Mining Wizard: Data Object Options

4. The next step in the Data Mining Wizard is to connect to a database (i.e. where to get the data). You have two options for database connection: **Create a New Connection** or **Use an Existing Connection**, as shown in the figure below. Choose an option, and then click the **Next** button to continue.

Connection object wizard

Please select whether you want to create a new connection or use an existing connection

Choose a new database connection or use an existing connection for your new Data Object:

☒ Create new connection
This will create a new connection object in the configuration. You can select the type of the connection and set its properties.

☐ Use existing connection
Select the name of the connection that you want to use for your data object:

<Select connection name>

< Back Next > Finish Cancel Help

Data-Mining Wizard: Database Connection Options

5. In the **Connection Name** field, enter a name for the new database connection. Then select the type of database (e.g. Microsoft Access, Microsoft SQL Server, Microsoft Excel, or Oracle) you would like to use from the drop-down list, as shown in the figure below. Click the **Next** button to continue.

The screenshot shows a dialog box titled "Connection object" with a subtitle "This wizard will create the connection object depending on the choice below." The dialog is divided into two main sections. The first section, labeled "1. Enter Connection name (it will be used as a part of tag identification)", contains a text field labeled "Connection Name:" with the value "New Database Connection". The second section, labeled "2. Choose the type of database you would like to use:", contains a dropdown menu labeled "Database Type:". The dropdown menu is open, showing a list of database types: "MS Access MDB database", "MS Excel XLS data source", "MS SQL Server database", "Oracle SQL Server database", "ODBC data source", "Generic OLE DB", and "SAP R/3 System". A mouse cursor is pointing at the "MS Access MDB database" option. At the bottom of the dialog, there are four buttons: "< Back", "Next >", "Cancel", and "Help".

Data-Mining Wizard: Creating New Database Connection

6. Specify the database, as shown in the figure below (which shows a Microsoft Access database connection). The example below uses the Northwind.mdb database, which is installed with Microsoft Access. Click the **Next** button to continue.

Microsoft Access Database Connection
Please select a file name for MS Access File

Select or enter a MS Access Database Name:

:\\Documents and Settings\\All Users\\ICONICS\\Examples32\\Northwind.mdb ...

< Back Next > Cancel Help

Data-Mining Wizard: Specifying Database

- The Wizard displays the database connection information that you specified, as shown in the figure below. Click the **Next** button to complete the database connection.

Note: You cannot go back after this step.

Connection object
The wizard will create the new Connection object with the following attributes.

Database Mining Wizard creates the following Connection for you:

Attribute	Value
Name	New Database Connection
Provider	Microsoft.Jet.OLEDB.4.0
Data Source	C:\\Documents and Settings\\All Users\\


⚠ Database Mining Wizard cannot go back after this step.
The connection part of the wizard will be finished.

< Back Next > Cancel Help

Data-Mining Wizard: Confirming Database Connection

8. Now you will configure the data source properties, as shown in the figure below. Select **Database Table** or **SQL Command**. In the example below, **Database Table** is selected. Click the **Next** button.
Note: You cannot go back after this step.

Data Source wizard
Please specify the following data source object properties

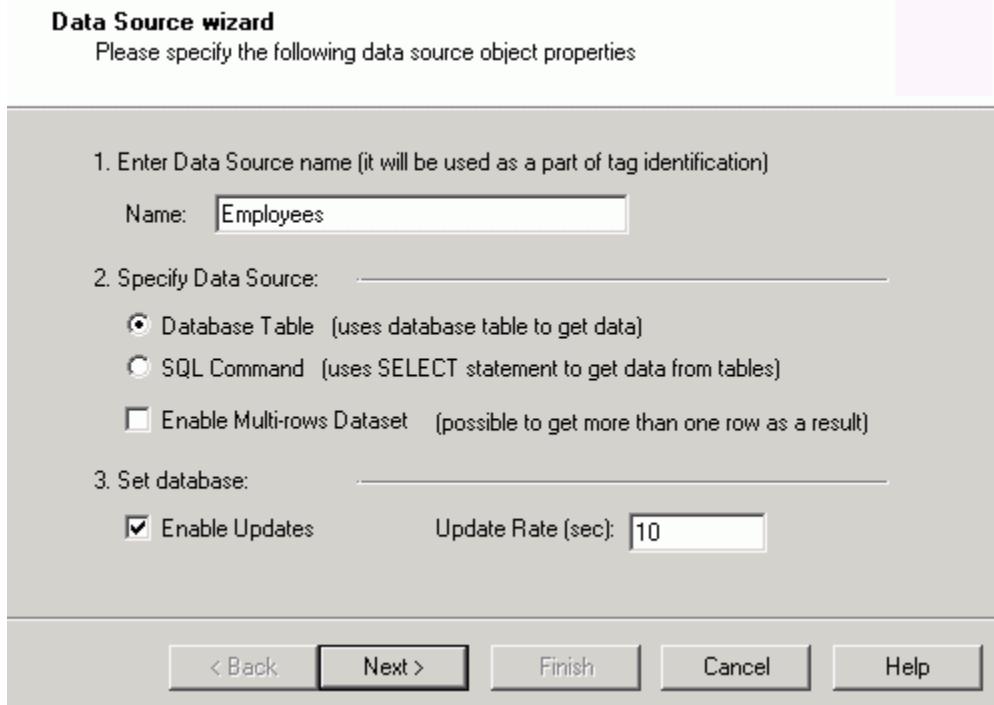

1. Enter Data Source name (it will be used as a part of tag identification)
Name:

2. Specify Data Source:

☒ Database Table (uses database table to get data)
☐ SQL Command (uses SELECT statement to get data from tables)
☐ Enable Multi-rows Dataset (possible to get more than one row as a result)

3. Set database:

☒ Enable Updates Update Rate (sec):

< Back Next > Finish Cancel Help

Data-Mining Wizard: Data Source Properties

9. In the **Table Name** field, click the ... button, as shown in the figure below.

Data Source object
Please specify the following Table properties of Data Source object

Specify Database Table properties of your Data Source: _____

1. Table Name: ...


2. Table Parameters:

Index	Parameter Name
0	EmployeeID

☐ Enable Writes
 ☐ Enable Inserts
 ☐ Enable Deletes

Data-Mining Wizard: Selecting a Database Table

10. This opens the Unified Data Browser, which lists all the tables in the database, as shown in the figure below. Select a table (e.g. Employees), and then click **OK**.

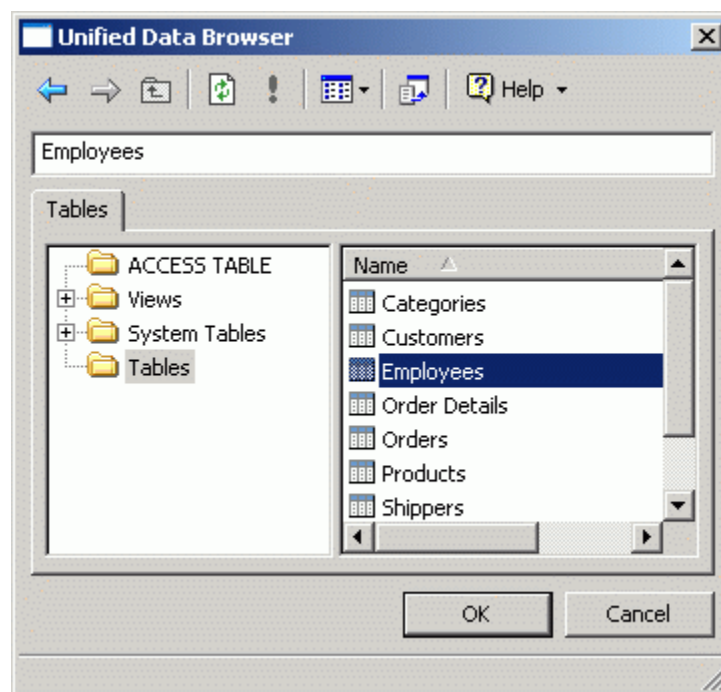

Selecting a Database Table

11. If you view the database table in Microsoft Access, you can see the column names (e.g. **Employee ID**, **Last Name**, **First Name**, etc.) in the Employees table, as shown in the figure below. The next step is to select a column name from which to read the data. For example, we will use the **First Name** column, which lists several employee names (e.g. Nancy, Andrew, Janet, etc.).




	Employee ID	Last Name	First Name	Title
▶ +	1	Davolio	Nancy	Sales Representative
+	2	Fuller	Andrew	Vice President, Sales
+	3	Leverling	Janet	Sales Representative
+	4	Peacock	Margaret	Sales Representative
+	5	Buchanan	Steven	Sales Manager
+	6	Suyama	Michael	Sales Representative
+	7	King	Robert	Sales Representative
+	8	Callahan	Laura	Inside Sales Coordinator
+	9	Dodsworth	Anne	Sales Representative
*	(AutoNumber)			

Record: 1 of 9

Employees Table in Northwind Database

12. Click the **Add** button in the wizard. This opens the Unified Data Browser, which lists all the columns in the database table, as shown in the figure below. Select the column name (e.g. **FirstName**) from the database table.

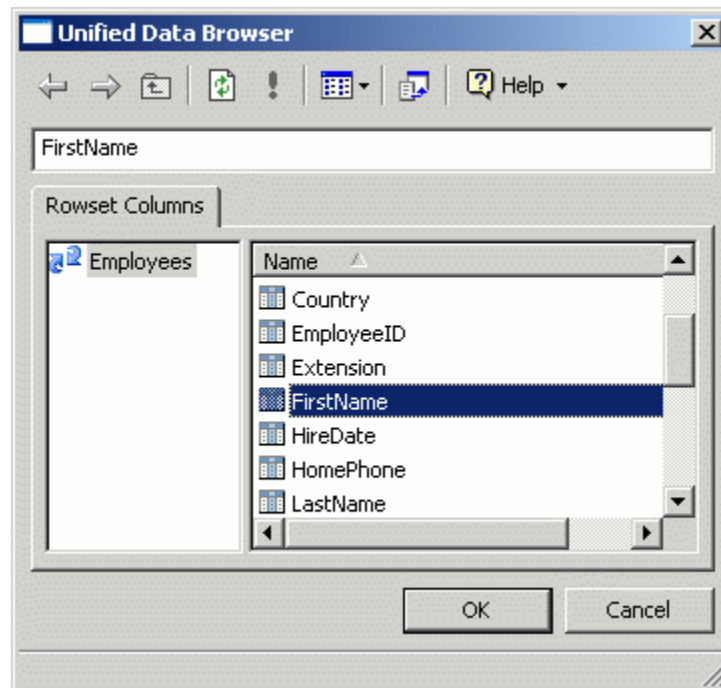

Selecting Column From Database Table

13. The Wizard displays the data source information that you specified, as shown in the figure below. Click the **Next** button to complete the data source

connection. The next step is to define data items (values) to read from the data source. You have the option of creating a static data item or a dynamic data item (option depends on the type of database connection). A **static** data item simply displays data values from the connected database. A **dynamic** data item allows you to manipulate data values from the connected database. **Note:** You cannot go back after this step.

Data object
The wizard will create the new Data object with the following attributes.

Database Mining Wizard creates the following Data Object for you:

Attribute	Value
Object type	Data Source
Name	Employees
Description	
Update rate	10
Data source type	Database table
Table name	Employees
Enable writes	FALSE

 Database Mining Wizard cannot go back after this step.
The data object part of the wizard will be finished.

< Back Next > Cancel Help

Data-Mining Wizard: Confirming Data Source Connection

14. To configure a static data item, check the **Create Static Tag Under This Data Source** check box.

Data item objects
Dynamic and Static DataItem objects of Data Source object

Data Item objects

- Dynamic data items (automatically preconfigured). It is strongly recommended to use dynamic data items wherever possible.
These dynamic items will be automatically preconfigured:
@@Column
@@Recordset
@@Refresh
@@LastScanTime
- Statically configured data items. These data items (if necessary) must be manually configured.

☒ Create static Data Item(s) under this Data Source object

< Back Next > Cancel Help

Data-Mining Wizard: Confirming Data Source Connection

15. Now you will define a data item (value) to read from the data source (e.g. the **FirstName** column). Give the data item a name (e.g. **FirstName_1**), as shown in the figure below.

Static Tag wizard
Please specify the following static tag object properties

Specify Data Item properties:

- Data Item Name:
- Data Source parameters to bind:

Index	Value	Data Type


Add ...
Remove
Edit ...
Move Up
Move Down

Data Item returns complete table rowset as an array.

< Back Next > Cancel Help

Data-Mining Wizard: Defining a Value to Read

16. Now you need to specify a value to read from the selected column in the database table. The value corresponds to the record number in the database. For example, in the **First Name** column in the database, record number **1** is the value **Nancy**.

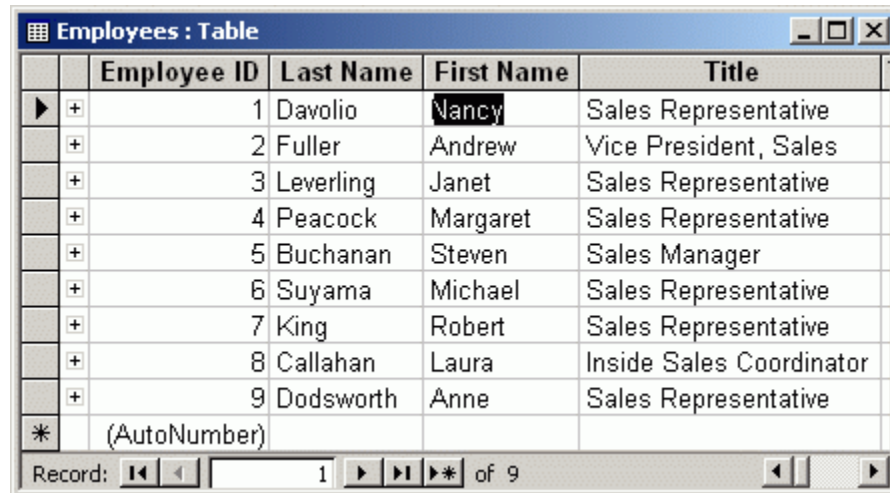


	Employee ID	Last Name	First Name	Title
▶ +	1	Davolio	Nancy	Sales Representative
+	2	Fuller	Andrew	Vice President, Sales
+	3	Leverling	Janet	Sales Representative
+	4	Peacock	Margaret	Sales Representative
+	5	Buchanan	Steven	Sales Manager
+	6	Suyama	Michael	Sales Representative
+	7	King	Robert	Sales Representative
+	8	Callahan	Laura	Inside Sales Coordinator
+	9	Dodsworth	Anne	Sales Representative
*	(AutoNumber)			

Record: 1 of 9

Employees Table in Northwind Database

17. Click the **Add** button in the Wizard. To read the value **Nancy**, enter **1** as the **Parameter Value**, as shown in the figure below.

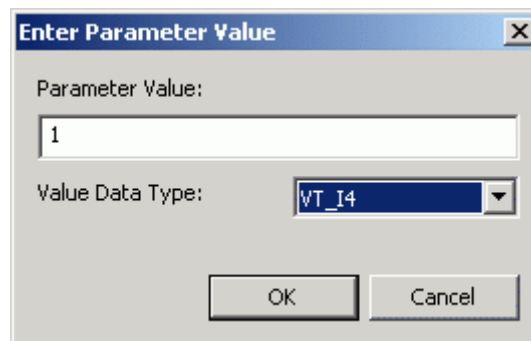

Enter Parameter Value

Parameter Value:

1

Value Data Type: VT_I4

OK Cancel

Data-Mining Wizard: Defining a Value to Read

18. The value is added to the **parameters to bind** section, as shown in the figure below. To read the value **Nancy**, enter **1** as the **Parameter Value**, as shown in the figure below.

Static Tag wizard
Please specify the following static tag object properties

Specify Data Item properties:

1. Data Item Name:

2. Data Source parameters to bind:

Index	Value	Data Type
0	1	VT_I4

Data Item returns complete table rowset as an array.

Data-Mining Wizard: Defining a Value to Read

19. The Wizard displays the data item information that you specified, as shown in the figure below. You have the option of creating additional data items (tags). In this case, we will click the **Finish** button to complete the configuration.

Static Tag object
The wizard will create the new Static Tag object with the following attributes.

Database Mining Wizard creates the following Data Item for you:


Attribute	Value
Name	FirstName_1

☐ Create another Data Item

 Database Mining Wizard cannot go back after this step. The Data Item part of the wizard will be finished.

Data-Mining Wizard: Confirming Data Item Value

20. The new configuration that you created using the Wizard appears in the Data Mining Configurator, as shown in the figure below.

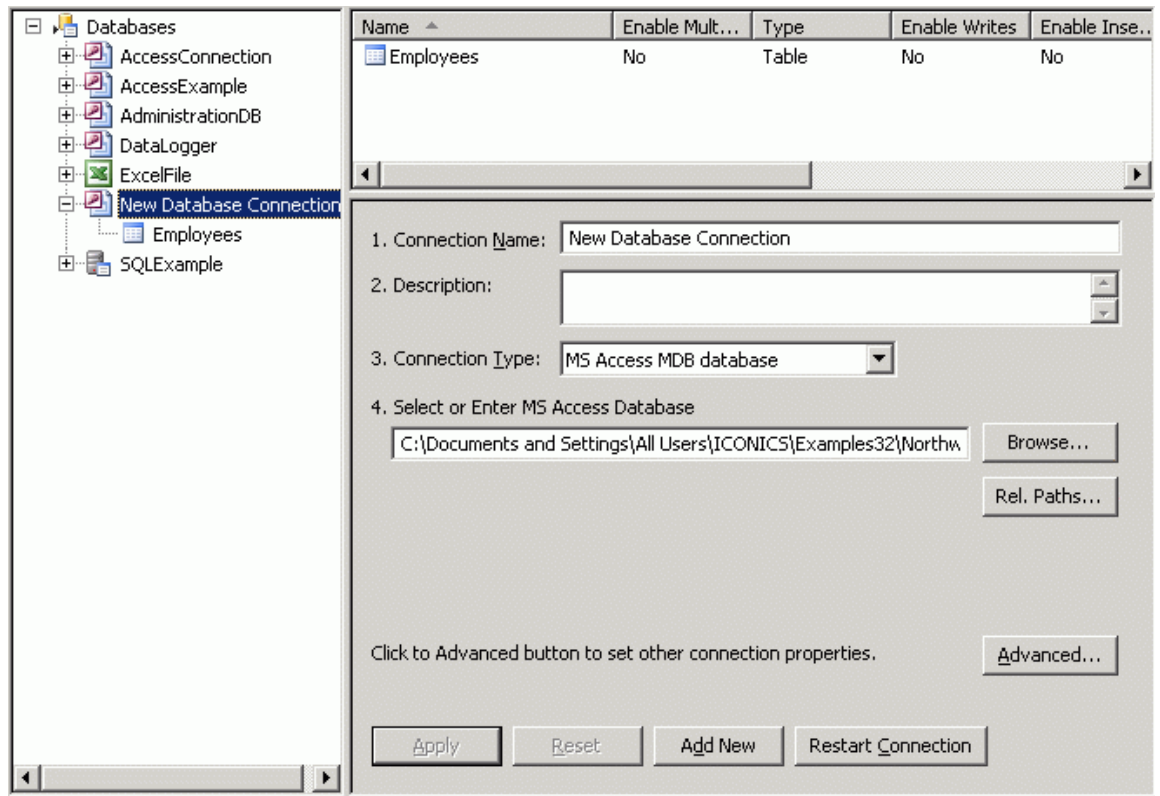


New Wizard Configuration in Data Mining Configurator

21. The next step is to connect to the new data item and visualize the data in a GraphWorX32 display. To a new GraphWorX32 display, select **Start > Programs > ICONICS GENESIS32 > GraphWorX32 > GraphWorX32**.


Note: Before you can visualize the data, you must activate the data mining configuration database by selecting **Make Active** from the **File** menu.

22. You need to configure your data mining connections so you can view data coming from the database. Create a process point in GraphWorX32 by selecting **Intrinsics > Process Point** from the **Dynamics** menu, as shown in the figure below.

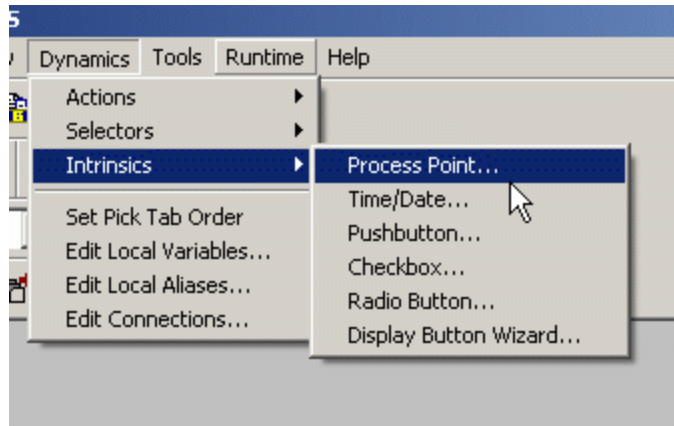

Creating a Process Point in GraphWorX32


23. This opens the **Property Inspector** for the data item. Click on the **PPT/DE** tab, as shown in the figure below. Click the **Data Tags** button.

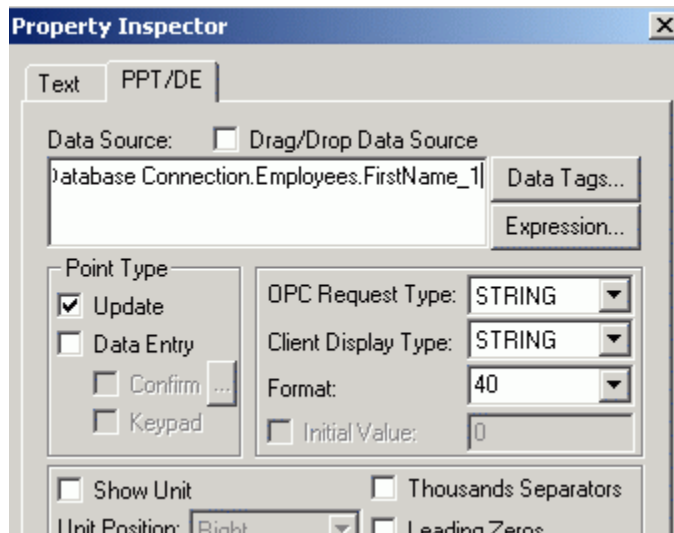

Property Inspector for FirstName_1 Data Item

24. The Unified Data Browser opens to the **Database Access** tab, as shown in the figure below. You can see that the browser tree control is similar to the tree control in the Data Mining Configurator; you can choose from configured data items from the **Employees** data source connection. Select the **FirstName_1** data item. Notice that the **FirstName_1** item ID (e.g. **ICONICS.DatabaseOPCServer.3\New Database Connection.Employees.FirstName_1**) contains the following information:

- Server name (e.g. **ICONICS.DatabaseOPCServer.3**)
- Database connection name (e.g. **New Database Connection**)
- Data source name (e.g. **Employees**)
- Data item name (e.g. **FirstName_1**)

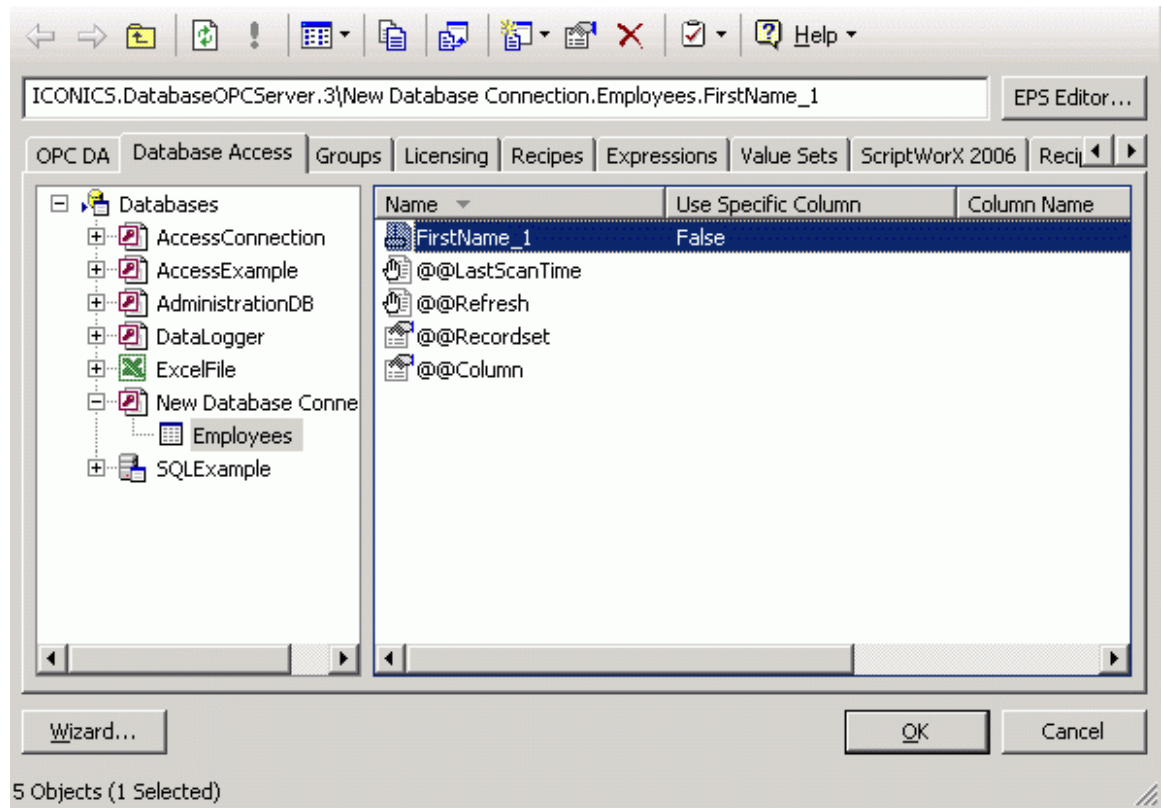

New Database Connection Shown in Unified Data Browser

25. Close out of the Unified Data Browser and the Property Inspector dialog box.
26. Enter the GraphWorX32 display into runtime mode. You can see the data coming from the **Employees** database table. The **Parameter Value** for data item **FirstName_1** is resolved as **Nancy** in the visualization display.

Basic Steps in the Data Mining Configuration Wizard

Using the **Data Mining Configuration Wizard** to configure your database connections involves the following basic steps:

- Step 1: Start the **Data Mining Configuration Wizard**.
- Step 2: Choose a data object (data source or data manipulator) you would like to create.
- Step 3: Create a new database connection or choose an existing database connection.
- Step 4: Configure data source or data manipulator properties.
- Step 5: Configure data item properties (for a data source only).

The new configuration that you created using the Wizard appears in the Data Mining Configurator. Before you can visualize the data, you must activate the data mining configuration database by selecting **Make Active** from the **File** menu.


Get started with...

Step 1: Starting the Data Mining Configuration Wizard

Step 1: Starting the Data Mining Configuration Wizard


To start the **Data Mining Configuration Wizard**:

1. Select **Configuration Wizard** from the **File** menu, as shown in the figure below.

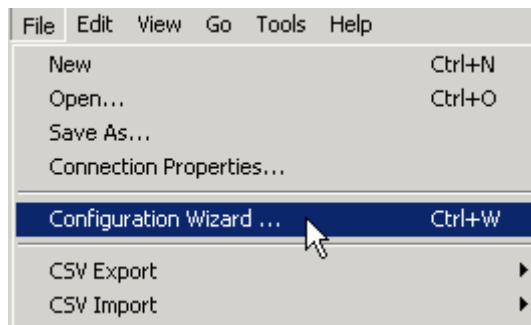

Starting the Data-Mining Configuration Wizard

2. The introduction screen for the Data Mining Wizard appears. Click the **Next** button to continue.

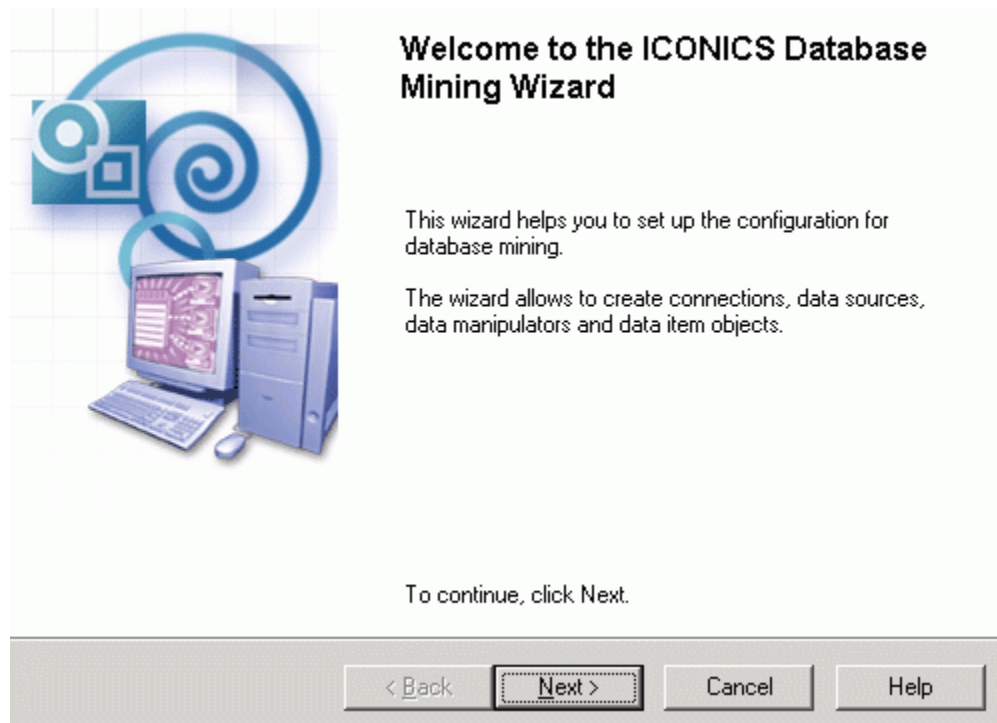


Data-Mining Wizard: Welcome Screen

Now go to...

Step 2: Choosing a Data Object

Step 2: Choosing a Data Object

In the **Data Mining Configuration Wizard**, you have two options for the data object type: **Create a New Data Source** or **Create a New Data Manipulator**, as shown in the figure below. A **data source** can be used to read data from a database. It can access a specific database table directly or use a SQL *read* command to get data. A **data manipulator**, which is intended for processing data stored in a connected database, manipulates data using a SQL *write* command or by executing a stored procedure. Choose an option, and then click the **Next** button to continue.

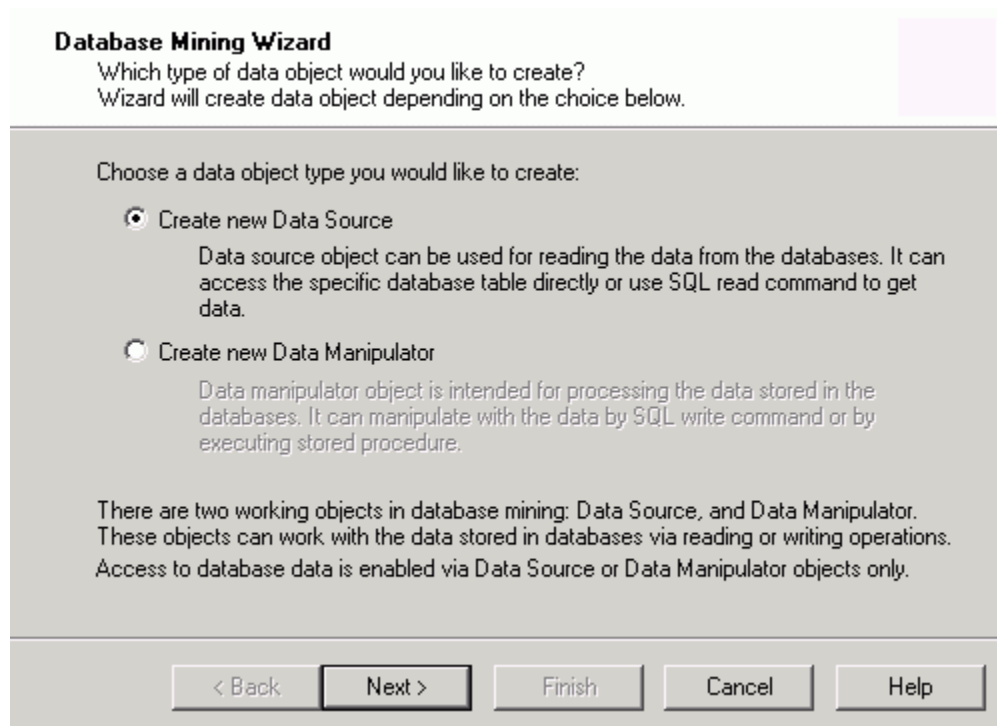

Data-Mining Wizard: Data Object Options

Now go to...

Step 3: Connecting to a Database

See Also


Data Sources and Data Manipulators

Step 3: Connecting to a Database

After you select a data object (data source or data manipulator), the next step in the Data Mining Wizard is to connect to a database (i.e. where to get the data).

Note: For additional information about configuring database connections, please see the Database Connections section later in this document.

1. You have two options for database connection: **Create a New Connection** or **Use an Existing Connection**, as shown in the figure below. Choose an option, and then click the **Next** button to continue.

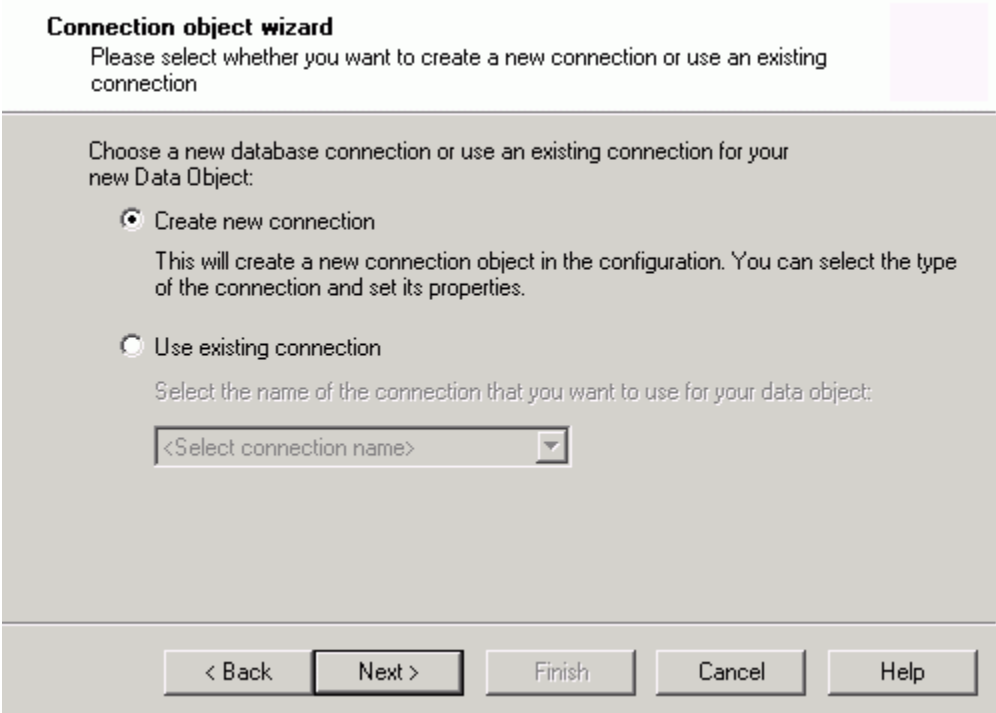

Connection object wizard

Please select whether you want to create a new connection or use an existing connection

Choose a new database connection or use an existing connection for your new Data Object:

☒ Create new connection

This will create a new connection object in the configuration. You can select the type of the connection and set its properties.

☐ Use existing connection

Select the name of the connection that you want to use for your data object:

<Select connection name>

< Back Next > Finish Cancel Help

Data-Mining Wizard: Database Connection Options

2. In the **Connection Name** field, enter a name for the new database connection. Then select the type of database (e.g. Microsoft Access, Microsoft SQL Server, Microsoft Excel, or Oracle) you would like to use from the drop-down list, as shown in the figure below. Click the **Next** button to continue.

Connection object
This wizard will create the connection object depending on the choice below.

1. Enter Connection name (it will be used as a part of tag identification)

Connection Name:

2. Choose the type of database you would like to use:

Database Type:

- MS Access MDB database
- MS Excel XLS data source
- MS SQL Server database
- Oracle SQL Server database
- ODBC data source
- Generic OLE DB
- SAP R/3 System

< Back Next > Cancel Help

Data-Mining Wizard: Creating New Database Connection

3. Specify the database, as shown in the figure below (which shows a Microsoft Access database connection). The example below uses the Northwind.mdb database, which is installed with Microsoft Access. Click the **Next** button to continue.

Microsoft Access Database Connection
Please select a file name for MS Access File

Select or enter a MS Access Database Name:

...

< Back Next > Cancel Help

Data-Mining Wizard: Specifying Database

- The Wizard displays the database connection information that you specified, as shown in the figure below. Click the **Next** button to complete the database connection.

Note: You cannot go back after this step.

Connection object

The wizard will create the new Connection object with the following attributes.

Database Mining Wizard creates the following Connection for you:

Attribute	Value
Name	New Database Connection
Provider	Microsoft.Jet.OLEDB.4.0
Data Source	C:\Documents and Settings\All Users\

Database Mining Wizard cannot go back after this step.
The connection part of the wizard will be finished.

< Back Next > Cancel Help

Data-Mining Wizard: Confirming Database Connection

Now go to...

Step 4: Configuring the Data Object

See Also

Microsoft Access Wizard

Microsoft Excel Wizard

Microsoft SQL Server Wizard

Oracle Wizard


ODBC Wizard

Generic OLE DB Wizard

SAP/R3 System Connection Wizard

Microsoft Access Wizard

To create a Microsoft Access database connection in the Data Mining Wizard, click the ... button and select an Access (.mdb) file, as shown in the figure below. Click the **Next** button to continue.

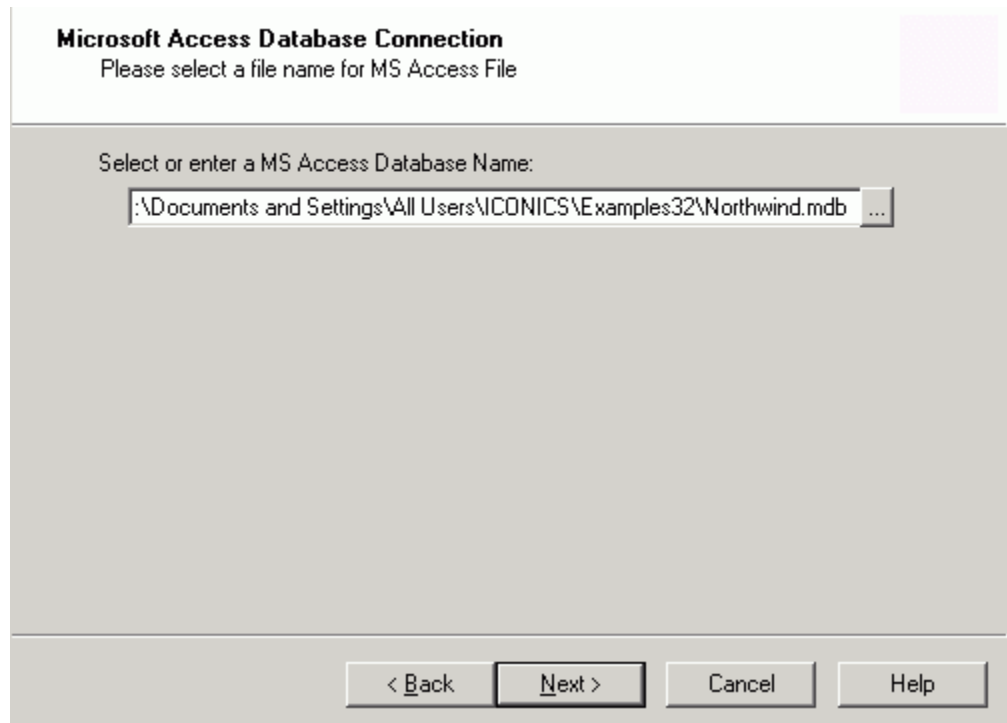


Data-Mining Wizard: Microsoft Access Connection

See Also

Microsoft Access Connection

Microsoft Excel Wizard

To create a Microsoft Excel database connection in the Data Mining Wizard, click the ... button and select an Excel (.xls) file, as shown in the figure below. Click the **Next** button to continue. If the first row of your Excel data source (e.g. spreadsheet) contains column headings, you can choose to use the column headings as field names by checking the **Use First Row as Field Names** check box, as shown in the figure below. Click the **Next** button to continue.

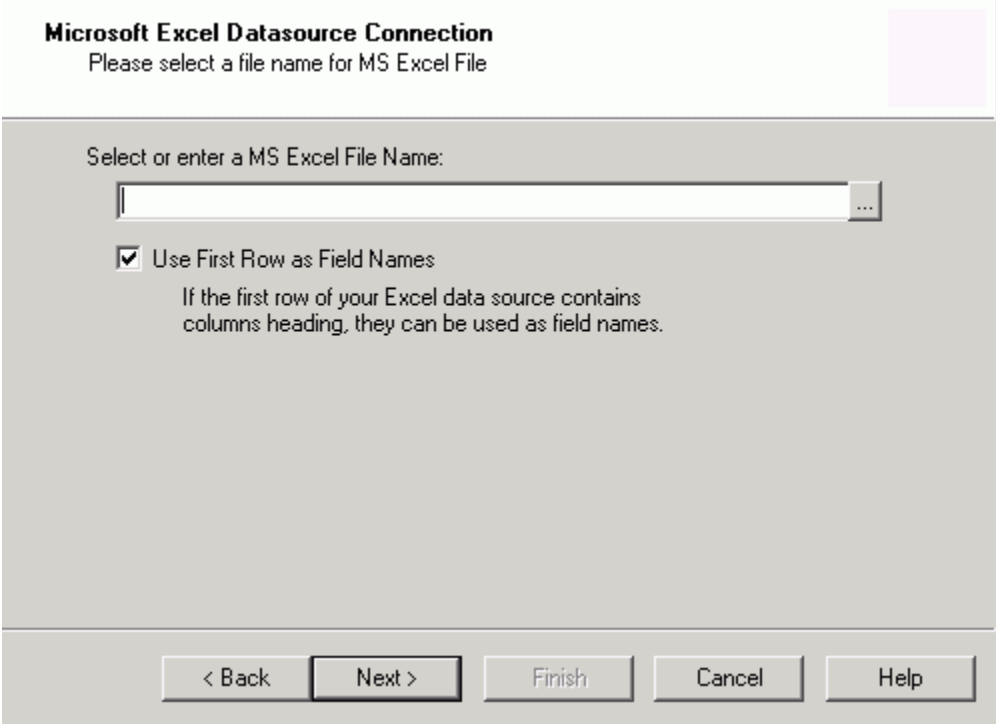

The screenshot shows a dialog box titled "Microsoft Excel Datasource Connection". Below the title bar, it says "Please select a file name for MS Excel File". The main area of the dialog has a light gray background. It contains a text box with the label "Select or enter a MS Excel File Name:" and a browse button "...". Below this, there is a checked checkbox labeled "Use First Row as Field Names". Underneath the checkbox, a note states: "If the first row of your Excel data source contains columns heading, they can be used as field names." At the bottom of the dialog, there are five buttons: "< Back", "Next >", "Finish", "Cancel", and "Help".

Data-Mining Wizard: Microsoft Excel Connection

See Also

Microsoft Excel Connection

Microsoft SQL Server Wizard

To create a Microsoft SQL Server database connection in the Data Mining Wizard, select a SQL Server from the drop-down list. The default SQL server is "(local)." Then select the database on the specified SQL Server file, as shown in the figure below. By default, SQL Server database connections use Windows integrated security. Click the **Next** button to continue.

Microsoft SQL Server Database Connection
Please specify the following to connect SQL server

1. Select or enter a database name:
Northwind Simple <<

2. Select or enter a server name:
(local) Refresh

3. Enter information to log on to the server:
☒ Use Windows NT integrated security (recommended)
☐ Use a specific user name and password:
User name:
Password: ☐ Blank Password

< Back Next > Finish Cancel Help


Data-Mining Wizard: Microsoft SQL Server Connection

See Also

Microsoft SQL Server Connection

Oracle Wizard

To create an Oracle database connection in the Data Mining Wizard, specify an Oracle database name. Then supply the **User Name** and **Password** required to log on to the specified Oracle database, as shown in the figure below. Click the **Next** button to continue.

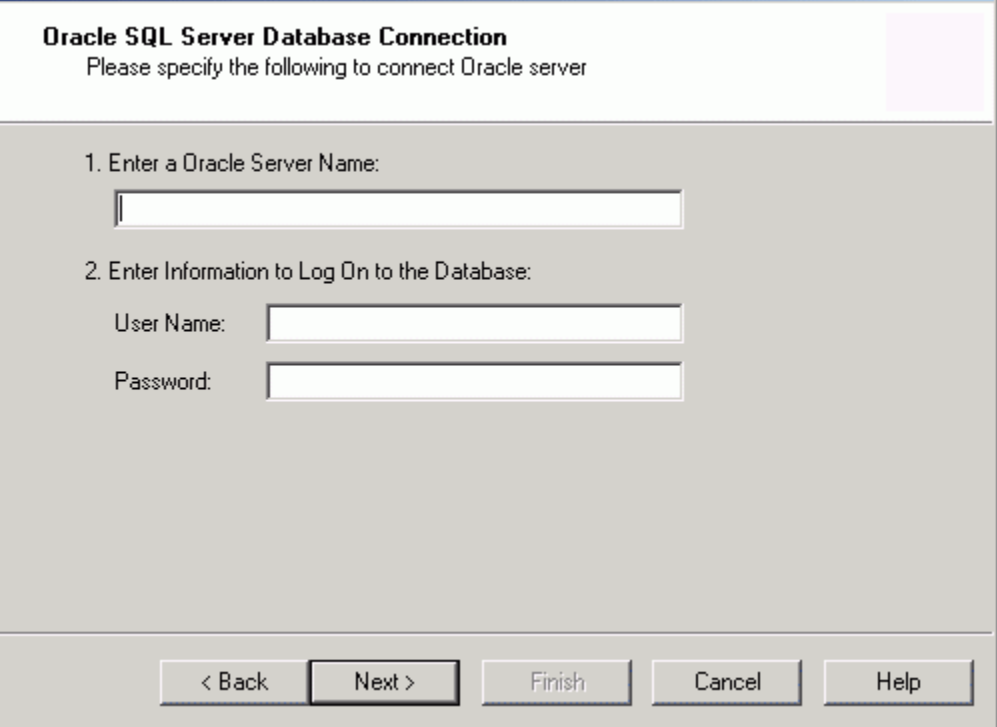

Oracle SQL Server Database Connection
Please specify the following to connect Oracle server

1. Enter a Oracle Server Name:

2. Enter Information to Log On to the Database:
User Name:
Password:

< Back Next > Finish Cancel Help

Data-Mining Wizard: Oracle Connection

See Also

Oracle Connection

ODBC Wizard

To create an ODBC database connection in the Data Mining Wizard, click the **Advanced** button to establish database connections through the Windows **Data Link Properties**. Click the **Next** button to continue.

ODBC Datasource Connection
Please specify connection attributes

ODBC datasource attributes:

Attribute	Value
Name	Oracle Database
Type	ODBC datasource
Provider	MSDASQL.1
Persist Security Info	False

Click the Advanced button to change attributes.

Advanced

< Back Next > Finish Cancel Help

Data-Mining Wizard: ODBC Connection

See Also

ODBC Connection

Generic OLE DB Wizard

To create a Generic OLE database connection in the Data Mining Wizard, click the **Advanced** button to establish database connections through the Windows **Data Link Properties**. Click the **Next** button to continue.

Generic OLE DB Datasource Connection
Please specify connection attributes

Generic OLE DB datasource attributes:

Attribute	Value
Name	New Database Connection1
Type	Generic OLE DB

Click the Advanced button to change attributes.

Advanced

< Back Next > Cancel Help

Data-Mining Wizard: Generic OLE DB Connection

SAP/R3 System Connection Wizard

To create an SAP /R3 System database connection in the Data Mining Wizard, specify the Client, User, Password, Host Name, and System Number information, and click the **Advanced** button to establish database connections through the Windows **Data Link Properties**. Click the **Next** button to continue.

Note: For more information about connecting to SAP/R3 systems, please see the SAP Connector whitepaper on the GENESIS32 Product CD.

SAP R/3 Connection
Please specify the following to connect to SAP R/3 system

Client: Host Name:
User: System Number:
Password:

Click the Advanced button to change additional attributes.

Data-Mining Wizard: SAP/R3 System Connection

Step 4: Configuring the Data Object

After you connect to a database, the next step in the Data Mining Wizard is to configure the data source or data manipulator:

- Δατα Σουρχε Ωιζαρδ: Δαταβασε Ταβλε
- Δατα Σουρχε Ωιζαρδ: ΣΘΛ Χομμανδ
- Δατα Μανιπυλατορ Ωιζαρδ: ΣΘΛ Χομμανδ
- Δατα Μανιπυλατορ Ωιζαρδ: Στορεδ Προχεδυρε

Note: For additional information about configuring data sources, please see the Data Source Properties section later in this document. For additional information about configuring data manipulators, please see the Data Manipulator Properties section later in this document.

Now go to...

Step 5: Configuring Data Items

Data Source Wizard: Database Table

To configure the data source properties in the Data Mining Wizard:

1. Select **Database Table**, as shown in the figure below. Click the **Next** button.
Note: You cannot go back after this step.

The screenshot shows the 'Data Source wizard' dialog box. At the top, it says 'Please specify the following data source object properties'. The dialog is divided into three sections:

- 1. Enter Data Source name (it will be used as a part of tag identification)**
Name:
- 2. Specify Data Source:**
☒ Database Table (uses database table to get data)
☐ SQL Command (uses SELECT statement to get data from tables)
☐ Enable Multi-rows Dataset (possible to get more than one row as a result)
- 3. Set database:**
☒ Enable Updates
Update Rate (sec):

At the bottom, there are five buttons: '< Back', 'Next >', 'Finish', 'Cancel', and 'Help'. The 'Next >' button is highlighted with a black border.

Data-Mining Wizard: Data Source Properties

2. In the **Table Name** field, click the ... button, as shown in the figure below.

Data Source object
Please specify the following Table properties of Data Source object

Specify Database Table properties of your Data Source: _____

1. Table Name: ...


2. Table Parameters:

Index	Parameter Name
0	EmployeeID

☐ Enable Writes
 ☐ Enable Inserts
 ☐ Enable Deletes

Data-Mining Wizard: Selecting a Database Table


3. This opens the Unified Data Browser, which lists all the tables in the database, as shown in the figure below. Select a table (e.g. Employees), and then click **OK**.

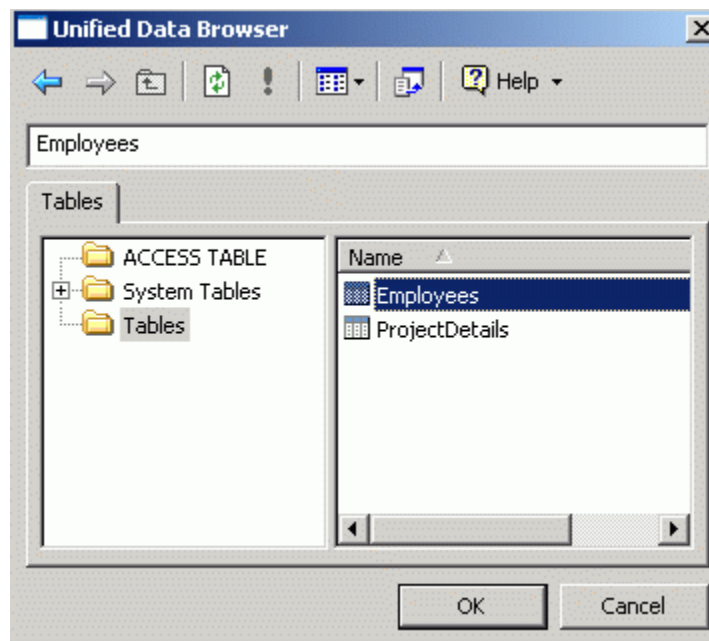

Selecting a Database Table

4. If you view the database table in Microsoft Access, you can see the column names (e.g. **Employee ID**, **Last Name**, **First Name**, etc.) in the Employees

table, as shown in the figure below. The next step is to select a column name from which to read the data. For example, we will use the **First Name** column, which lists several employee names (e.g. Nancy, Andrew, Janet, etc.).

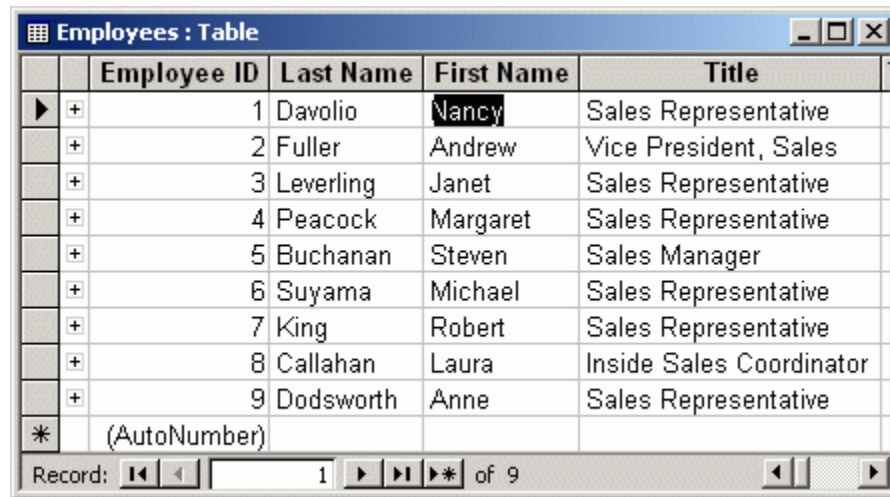


	Employee ID	Last Name	First Name	Title
▶ +	1	Davolio	Nancy	Sales Representative
+	2	Fuller	Andrew	Vice President, Sales
+	3	Leverling	Janet	Sales Representative
+	4	Peacock	Margaret	Sales Representative
+	5	Buchanan	Steven	Sales Manager
+	6	Suyama	Michael	Sales Representative
+	7	King	Robert	Sales Representative
+	8	Callahan	Laura	Inside Sales Coordinator
+	9	Dodsworth	Anne	Sales Representative
*	(AutoNumber)			

Record: 1 of 9

Employees Table in Northwind Database

- Click the **Add** button in the wizard. This opens the Unified Data Browser, which lists all the columns in the database table, as shown in the figure below. Select the column name (e.g. **FirstName**) from the database table.

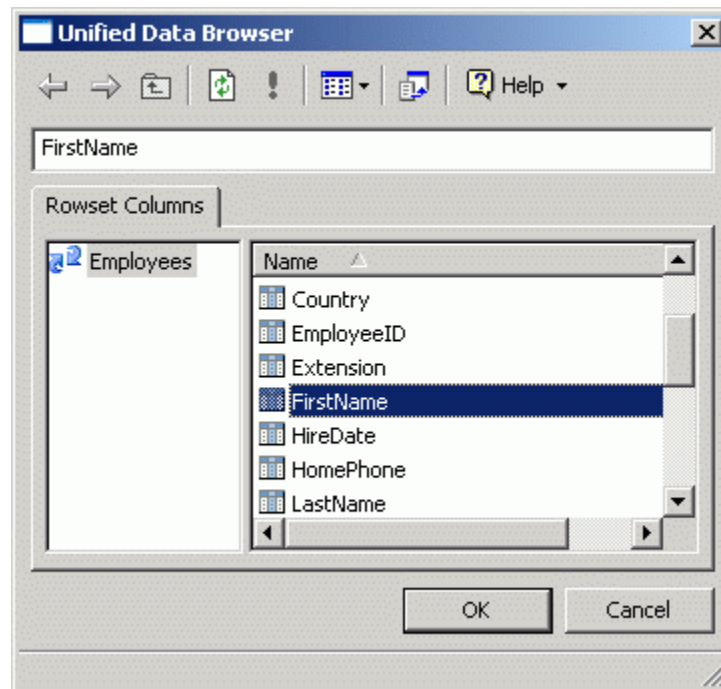

Selecting Column From Database Table

- The Wizard displays the data source information that you specified, as shown in the figure below. Click the **Next** button to complete the data source connection. The next step is to define data items (values) to read from the data source. You have the option of creating a static data item or a dynamic

data item (option depends on the type of database connection). A **static** data item simply displays data values from the connected database. A **dynamic** data item allows you to manipulate data values from the connected database. **Note:** You cannot go back after this step.

Data object
The wizard will create the new Data object with the following attributes.

Database Mining Wizard creates the following Data Object for you:

Attribute	Value
Object type	Data Source
Name	Employees
Description	
Update rate	10
Data source type	Database table
Table name	Employees
Enable writes	FALSE

 Database Mining Wizard cannot go back after this step.
The data object part of the wizard will be finished.

< Back

Next >

Cancel

Help

Data-Mining Wizard: Confirming Data Source Connection

Data Source Wizard: SQL Command

To configure the data source properties in the Data Mining Wizard:

1. Select **SQL Command**, as shown in the figure below. Click the **Next** button.
Note: You cannot go back after this step.

Data Source wizard
Please specify the following data source object properties

1. Enter Data Source name (it will be used as a part of tag identification)
Name:

2. Specify Data Source:

☐ Database Table (uses database table to get data)
☒ SQL Command (uses SELECT statement to get data from tables)
☐ Enable Multi-rows Dataset (possible to get more than one row as a result)

3. Set database:

☒ Enable Updates Update Rate (sec):

< Back Next > Cancel Help

Data-Mining Wizard: Data Source Properties

2. In the **SQL Command Parameters** field, click the **Add** button. Enter a **Parameter Name** (i.e. column name) and choose a **Parameter Data Type** from the drop-down list. To view or modify the SQL query, click the **Edit** button. This opens the **SQL Command Editor**, which enables you to manually edit the query string. Click the **Next** button.

Data Source object
Please specify the following SQL command properties of Data Source object

Specify SQL Command properties of your DataSource: _____

1. SQL Command: Edit ...

2. SQL Command Parameters:

Index	Parameter Name	Data Type
0	EmployeeID	VT_BSTR

Add ...
Remove
Edit ...
Move Up
Move Down

< Back Next > Cancel Help

Data-Mining Wizard: SQL Command Parameters

- The Wizard displays the data source information that you specified, as shown in the figure below. Click the **Next** button to complete the data source connection. The next step is to define data items (values) to read from the data source. You have the option of creating a static data item or a dynamic data item (option depends on the type of database connection). A **static** data item simply displays data values from the connected database. A **dynamic** data item allows you to manipulate data values from the connected database.

Note: You cannot go back after this step.

Data object
The wizard will create the new Data object with the following attributes.

Database Mining Wizard creates the following Data Object for you:

Attribute	Value
Object type	Data Source
Name	Employees
Description	
Update rate	10
Data source type	SQL command
SQL read command	EmployeeID

 Database Mining Wizard cannot go back after this step.
The data object part of the wizard will be finished.

< Back Next > Cancel Help

Data-Mining Wizard: Confirming Data Source Connection

Data Manipulator Wizard: SQL Command

To configure the data manipulator properties in the Data Mining Wizard:

1. Select **SQL Command**, as shown in the figure below. Click the **Next** button.
Note: You cannot go back after this step.

The screenshot shows a 'Data Manipulator wizard' dialog box. The title bar is light blue. The main area has a light gray background. At the top, the title 'Data Manipulator wizard' is in bold, followed by the instruction 'Please specify the following data manipulator object properties'. Below this, step 1 is 'Enter Data Manipulator name (it will be used as a part of tag identification)'. There is a text field labeled 'Name:' containing the word 'Employees'. Step 2 is 'Specify Data Manipulator Type:'. There are two radio button options: 'SQL Command' (selected) and 'Stored Procedure'. Below 'SQL Command' is the description 'Executes SQL UPDATE or INSERT statement to change the data in already existing database tables.' Below 'Stored Procedure' is the description 'Calls stored procedure to change the data in already existing database tables.' At the bottom, there are four buttons: '< Back', 'Next >', 'Cancel', and 'Help'.

Data Manipulator wizard
Please specify the following data manipulator object properties

1. Enter Data Manipulator name (it will be used as a part of tag identification)

Name:

2. Specify Data Manipulator Type:

☒ SQL Command
Executes SQL UPDATE or INSERT statement to change the data in already existing database tables.

☐ Stored Procedure
Calls stored procedure to change the data in already existing database tables.

< Back Next > Cancel Help

Data-Mining Wizard: Data Manipulator Properties

2. In the **SQL Command Parameters** field, click the **Add** button. Enter a **Parameter Name** (i.e. column name) and choose a **Parameter Data Type** from the drop-down list. To view or modify the SQL query, click the **Edit** button. This opens the **SQL Command Editor**, which enables you to manually edit the query string. Click the **Next** button.

Note: When the **Bind Results** check box is checked, it executes "binding" of a SQL query in the same transaction and returns its rowset as output parameters. This allows you to read some database data immediately after executing a data manipulation SQL command (e.g. you can read the ID of a newly created record).

Data Manipulator object

Please specify the following SQL command properties of Data Manipulator object

Specify SQL Command properties of your Data Manipulator: _____

1. SQL Command Parameters:

Index	Parameter Name	Data Type
0	EmployeeID	VT_BSTR

2. Execute SQL Command:

☒ Bind Results

3. Read SQL Command:

Data-Mining Wizard: SQL Command Parameters

3. The Wizard displays the data manipulator information that you specified, as shown in the figure below. Click the **Finish** button to complete the data source connection.

Data object

The wizard will create the new Data object with the following attributes.

Database Mining Wizard creates the following Data Object for you:

Attribute	Value
Object type	Data Manipulator
Name	Employees
Description	
Data manipulator type	SQL command
SQL execute command	EmployeeID
Bind results	TRUE
SQL read command	EmployeeID

 Database Mining Wizard cannot go back after this step.
 The data object part of the wizard will be finished.

Data-Mining Wizard: Confirming Data Manipulator Connection

Data Manipulator Wizard: Stored Procedure

To configure the data manipulator properties in the Data Mining Wizard:

1. Select **Stored Procedure**, as shown in the figure below. Click the **Next** button.

Note: You cannot go back after this step.

Data Manipulator wizard
Please specify the following data manipulator object properties

1. Enter Data Manipulator name (it will be used as a part of tag identification)

Name:

2. Specify Data Manipulator Type:

☐ SQL Command
Executes SQL UPDATE or INSERT statement to change the data in already existing database tables.

☒ Stored Procedure
Calls stored procedure to change the data in already existing database tables.

< Back Next > Finish Cancel Help

Data-Mining Wizard: Data Manipulator Properties

2. In the **Stored Procedure Name** field, click the ... button. This opens the Unified Data Browser, which lists all the stored procedures in the database. Select a procedure (e.g. "Sales by Year"), and then click **OK**.

Data Manipulator object
Please specify the following Store Procedure properties of Data Manipulator object

Specify Stored Procedure of your Data Manipulator: _____

Stored Procedure Name: ...

< Back Next > Finish Cancel Help

Data-Mining Wizard: Selecting a Stored Procedure

- The Wizard displays the data manipulator information that you specified, as shown in the figure below. Click the **Finish** button to complete the data manipulator connection.

Data object
The wizard will create the new Data object with the following attributes.

Database Mining Wizard creates the following Data Object for you:

Attribute	Value
Object type	Data Manipulator
Name	Sales
Description	
Data manipulator type	Stored procedure
Stored procedure name	dbo.Sales by Year;1

⚠ Database Mining Wizard cannot go back after this step.
The data object part of the wizard will be finished.

< Back Next > Finish Cancel Help

Data-Mining Wizard: Confirming Data Manipulator Connection

Step 5: Configuring Data Items

When you complete a data source configuration using the Data Mining Wizard, the Wizard displays the data source information that you specified, as shown in the figure below. Click the **Next** button to complete the data source connection. The next step is to define data items (values) to read from the data source. You have the option of creating a static data item or a dynamic data item (option depends on the type of database connection). A **static** data item simply displays data values from the connected database. A **dynamic** data item allows you to manipulate data values from the connected database. **Note:** You cannot go back after this step.

Data object

The wizard will create the new Data object with the following attributes.

Database Mining Wizard creates the following Data Object for you:

Attribute	Value
Object type	Data Source
Name	Employees
Description	
Update rate	10
Data source type	SQL command
SQL read command	EmployeeID

⚠ Database Mining Wizard cannot go back after this step. The data object part of the wizard will be finished.

< Back
Next >
Cancel
Help

Data-Mining Wizard: Confirming Data Source Connection

Note: For additional information about configuring data items, please see the Data Item Properties section later in this document.

1. To configure a static data item, check the **Create Static Tag Under This Data Source** check box.

Data item objects
Dynamic and Static DataItem objects of Data Source object

Data Item objects

- Dynamic data items (automatically preconfigured). It is strongly recommended to use dynamic data items wherever possible.
These dynamic items will be automatically preconfigured:
 @@Column
 @@Recordset
 @@Refresh
 @@LastScanTime
- Statically configured data items. These data items (if necessary) must be manually configured.

☒ Create static Data Item(s) under this Data Source object

< Back Next > Cancel Help

Data-Mining Wizard: Confirming Data Source Connection

- Now you will define a data item (value) to read from the data source (e.g. the **FirstName** column). Give the data item a name (e.g. **FirstName_1**), as shown in the figure below.

Static Tag wizard
Please specify the following static tag object properties

Specify Data Item properties:

- Data Item Name:
- Data Source parameters to bind:


Index	Value	Data Type

Data Item returns complete table rowset as an array.

< Back Next > Cancel Help

Data-Mining Wizard: Defining a Value to Read

- Now you need to specify a value to read from the selected column in the database table. The value corresponds to the record number in the database. For example, in the **First Name** column in the database, record number **1** is the value **Nancy**.

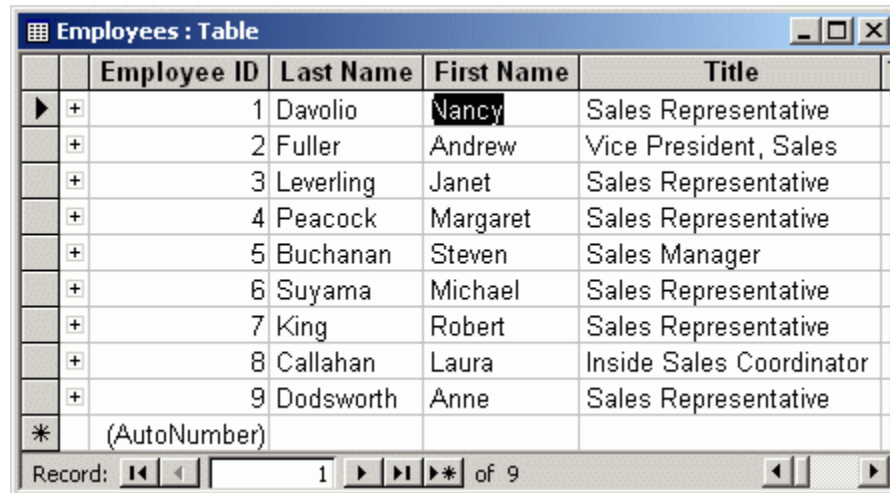


	Employee ID	Last Name	First Name	Title
▶ +	1	Davolio	Nancy	Sales Representative
+	2	Fuller	Andrew	Vice President, Sales
+	3	Leverling	Janet	Sales Representative
+	4	Peacock	Margaret	Sales Representative
+	5	Buchanan	Steven	Sales Manager
+	6	Suyama	Michael	Sales Representative
+	7	King	Robert	Sales Representative
+	8	Callahan	Laura	Inside Sales Coordinator
+	9	Dodsworth	Anne	Sales Representative
*	(AutoNumber)			

Record: 1 of 9

Employees Table in Northwind Database

- Click the **Add** button in the Wizard. To read the value **Nancy**, enter **1** as the **Parameter Value**, as shown in the figure below.

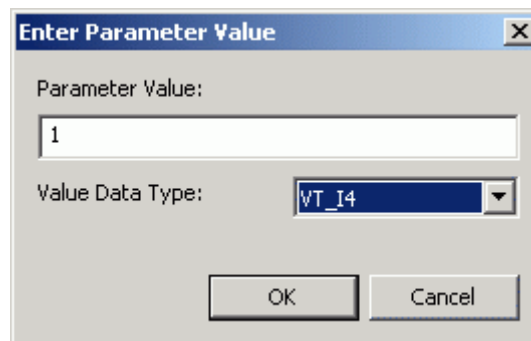

Enter Parameter Value

Parameter Value:

1

Value Data Type: VT_I4

OK Cancel

Data-Mining Wizard: Defining a Value to Read

- The value is added to the **parameters to bind** section, as shown in the figure below. To read the value **Nancy**, enter **1** as the **Parameter Value**, as shown in the figure below.

Static Tag wizard
Please specify the following static tag object properties

Specify Data Item properties:

1. Data Item Name:

2. Data Source parameters to bind:

Index	Value	Data Type
0	1	VT_I4

Data Item returns complete table rowset as an array.

Data-Mining Wizard: Defining a Value to Read

6. The Wizard displays the data item information that you specified, as shown in the figure below. You have the option of creating additional data items (tags). Click the **Finish** button to complete the configuration.

Static Tag object
The wizard will create the new Static Tag object with the following attributes.

Database Mining Wizard creates the following Data Item for you:

Attribute	Value
Name	FirstName_1

☐ Create another Data Item

 Database Mining Wizard cannot go back after this step.
The Data Item part of the wizard will be finished.


Data-Mining Wizard: Confirming Data Item Value

When you finish your configuration, you are ready to visualize your data.

Exporting Configuration Data

Exporting Data to a Text or CSV File

The Configurator offers the flexibility of exporting data from your configuration database to a text (.txt) file or a Microsoft Excel (.csv) file. To export data, select **Export** from the **File** menu. This opens the **Export Configuration Data to File** dialog box, as shown in the figure below. You can then specify the delimiters for exporting the data. Unless you specify delimiters in the **Export Configuration Data to File** dialog box, the file uses **Commas** as delimiters by default. Each group contains headings and columns that provide information about each item, such as descriptions and associated translations and expressions. It also provides the "tree" pathway for each item. Choose the directory to which you want to export the data from your database. In the **Save As Type** field, choose the file type (.txt or .csv) that you would like to save.

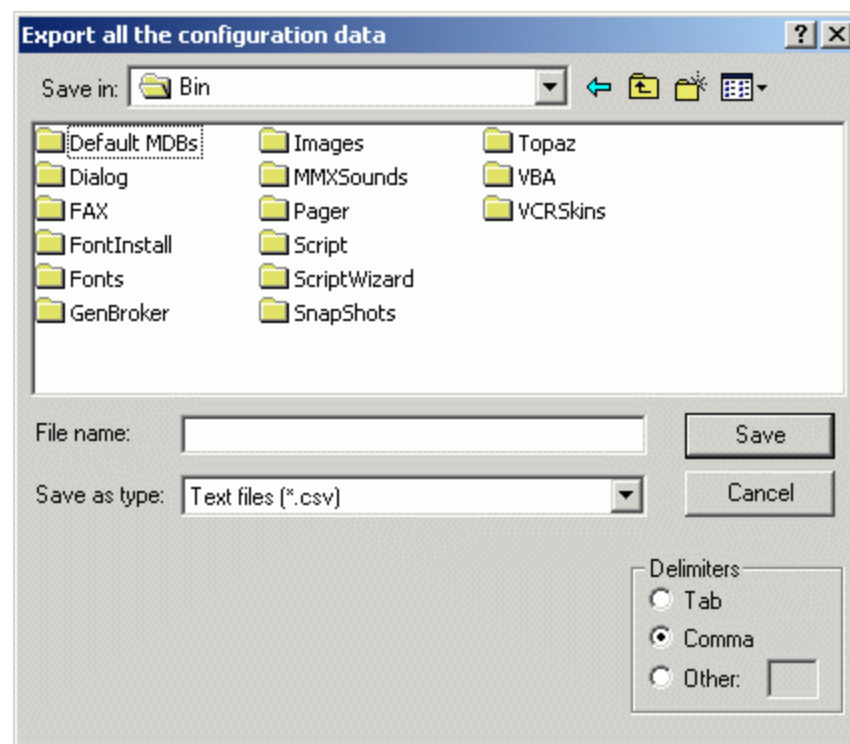

Exporting Configuration Data

Exporting Data to an XML File


The Configurator also allows you to export data from your configuration database to an XML file. The XML export/import functionality was mainly developed for Windows platforms that do not support databases (e.g. Windows

CE and Windows Embedded). XML has the following advantages over the CSV import/export function:

- XML has a standardized format, unlike the text/CSV format, which uses various delimiters (e.g. TAB instead of commas, strings could not accept all characters, etc.)
- XML is language-independent, whereas CSV converts date/time, floats, and currency fields according to local settings in Windows. For example, using CSV, you cannot export data on German Windows and import it on English windows without making changes
- Windows has an installed automation object that has the capability to work with XML. Thus, programmers can create/modify their configurations outside the Configurator using Visual Basic, if desired.
- XML supports schemas. A **schema** is a special XML file that specifies the data structure of an XML data file.

To export data, select **XML Export** from the **File** menu. This opens the **Export XML File** dialog box, as shown in the figure below. Give the file a name, and then choose the directory to which you want to export the data from your database. Click **Save**.

Note: You can also export configuration data to an XML Scheme file by selecting **XML Export** from the **File** menu.

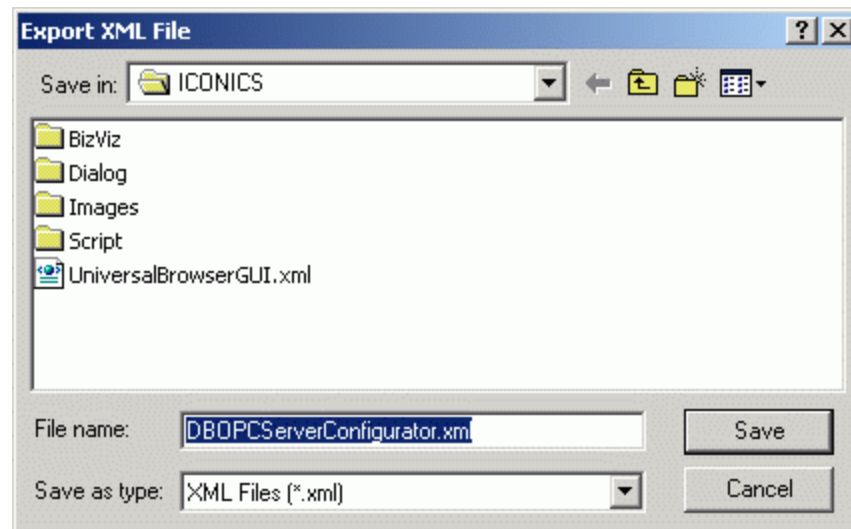

Exporting Configuration Data to an XML File

Importing Configuration Data


Importing Data From a Text or CSV File

The Configurator offers the flexibility of importing data from a text (.txt) file or a Microsoft Excel (.csv) file to your configuration database. To import data, select **Import CSV** from the **File** menu. This opens the **Import Configuration Data From File** dialog box, shown below. You can then specify the delimiters and choose from the following import settings:

- **Create new items.** When the import file contains items that are not yet in the configuration database, then it creates them. Otherwise it skips these items.
- **Update existing items.** When the import file contains items that are in the configuration database, then it updates them using data from the import file. Otherwise it skips these items.

Note: Either **Create new items** or **Update existing items** must be selected. Otherwise there is nothing to import.


- **Display errors.** When this item is checked, the Configurator shows a dialog box if an error occurs, and then asks you if you want to proceed with the import. When it is not checked, it skips all items where an error occurred.

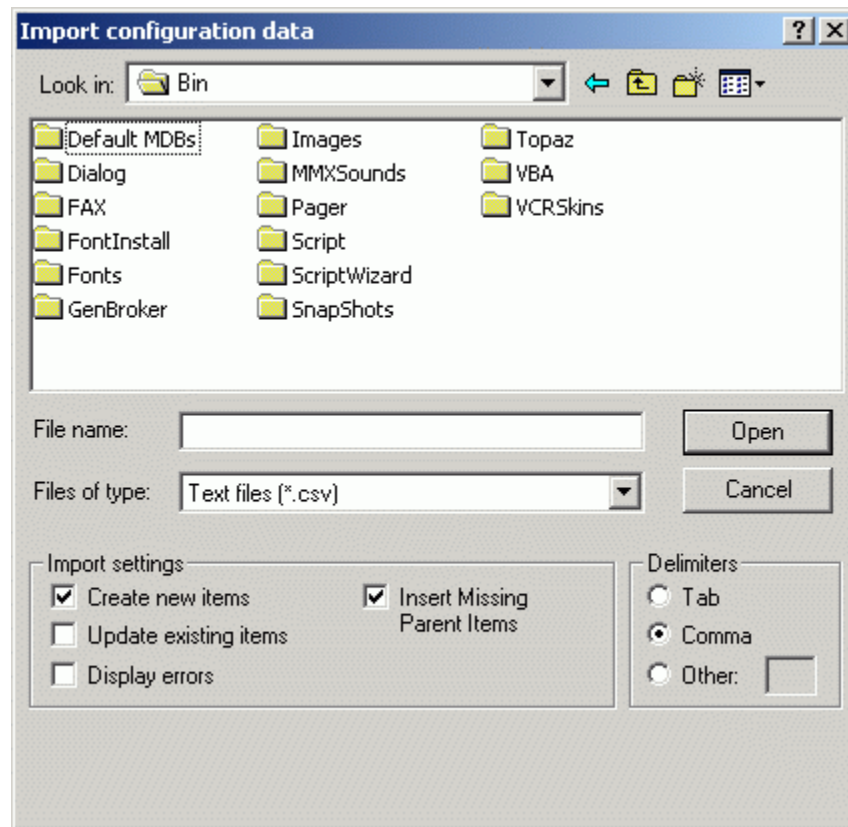

Importing Configuration Data

When you have selected a file to import, click **Open**. When the import is completed, the **File Import Results** dialog box opens, as shown below. This shows the import settings, including the input file name. It also provides a summary of the import, including how many items were inserted, updated, or rejected, and shows how many errors occurred.

Click the ... button to the right of each field to get the details view of the import results, as shown below. This view shows the specific items that were inserted, updated, or rejected, as well as a description of any errors that occurred.

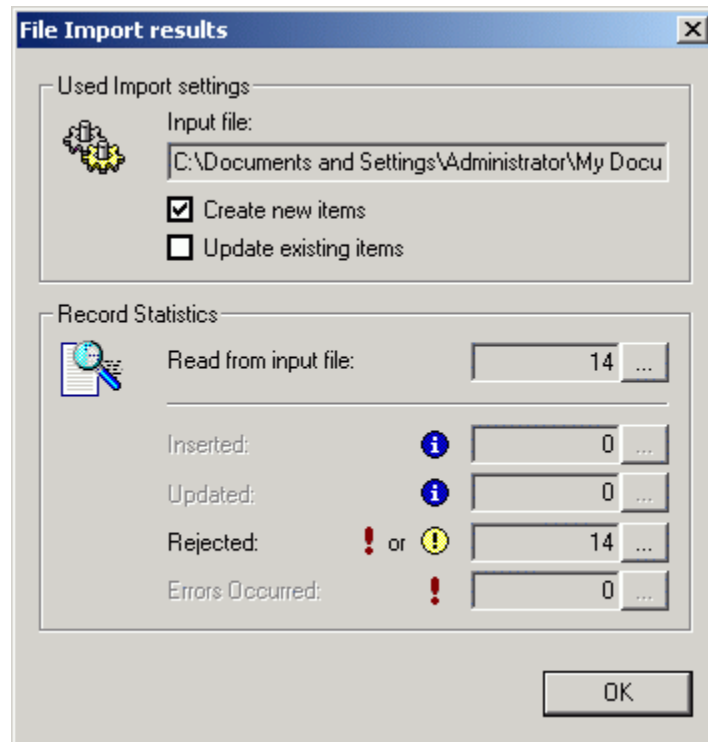

File Import Results Dialog Box

Importing Data From an XML File

The Configurator allows you to import data from your configuration database to an XML file. The XML export/import functionality was mainly developed for Windows platforms that do not support databases (e.g. Windows CE and Windows Embedded). XML has the following advantages over the CSV import/export function:

- XML has a standardized format, unlike the text/CSV format, which uses various delimiters (e.g. TAB instead of commas, strings could not accept all characters, etc.)
- XML is language-independent, whereas CSV converts date/time, floats, and currency fields according to local settings in Windows. For example, using CSV, you cannot export data on German Windows and import it on English windows without making changes
- Windows has an installed automation object that has the capability to work with XML. Thus, programmers can create/modify their configurations outside the Configurator using Visual Basic, if desired.
- XML supports schemas. A **schema** is a special XML file that specifies the data structure of an XML data file.


To import data, select **XML Import** from the **File** menu. This opens the **Import XML File** dialog box, as shown in the figure below. Give the file a name, and then choose the directory from which you want to import the data. You can then specify the delimiters and choose from the following import settings. Click **Open**.

- **Create new items.** When the import file contains items that are not yet in the configuration database, then it creates them. Otherwise it skips these items.

- **Update existing items.** When the import file contains items that are in the configuration database, then it updates them using data from the import file. Otherwise it skips these items.

Note: Either **Create new items** or **Update existing items** must be selected. Otherwise there is nothing to import.

Note: Selecting **XML Validate** from the **File** menu does not import an XML data file, but it will try to validate its structure using stored XML schema. Once it passes this validation, the XML file is acceptable for import by the Configurator.

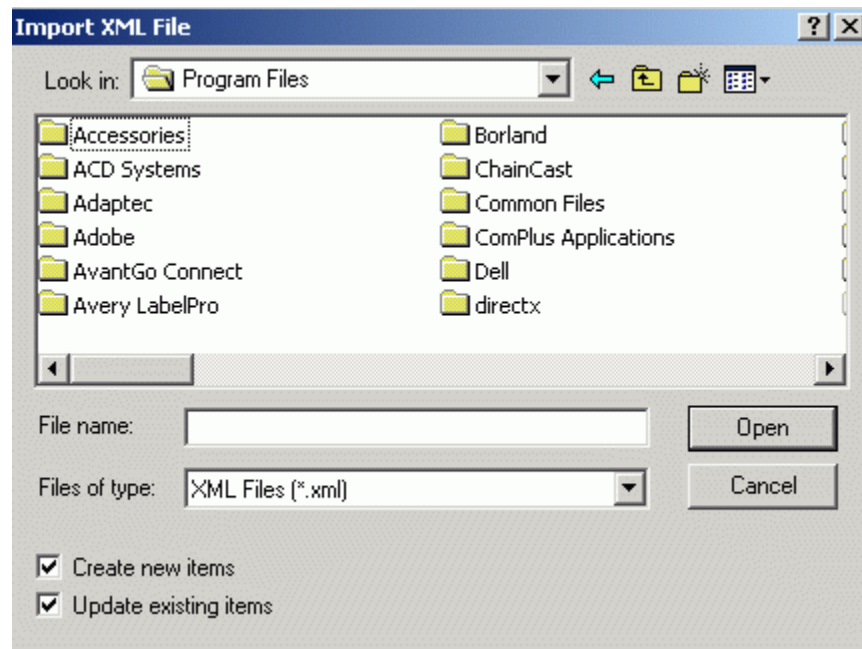


Importing Configuration Data From an XML File

See Also

File Import Results


File Import Results

When the import is completed, the **File Import Results** dialog box opens, as shown below. This shows the import settings, including the input file name. It also provides a summary of the import, including how many items were inserted, updated, or rejected, and shows how many errors occurred.

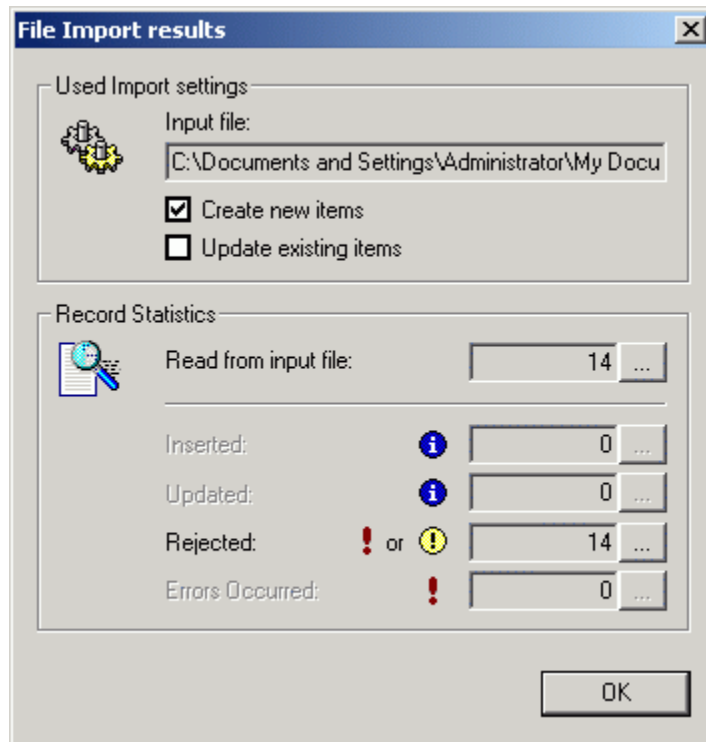

File Import Results Dialog Box

Click the ... button to the right of each field to get the details view of the import results, as shown in the figure below. This view shows the specific items that were inserted, updated, or rejected, as well as a description of any errors that occurred.

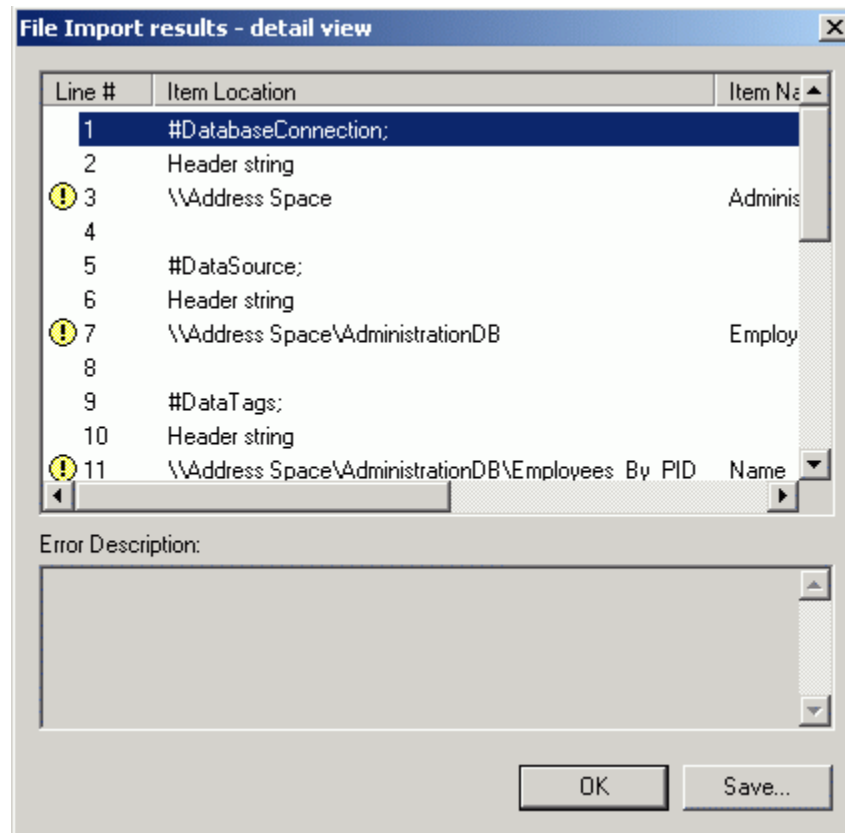


File Import Results Details

Activating the Database

Once your configuration is complete, you need to make sure that it is the active database. The database that is currently active is the one that the server uses. To make the current database active, select **Make Active...** from the **File** menu. If the **Make Active...** selection is grayed out, then the current database is already the active database.

A dialog box appears showing both the current active database and database that is currently being edited, as shown in the figure below. To set the edited database as the active database, click the **Yes** button.

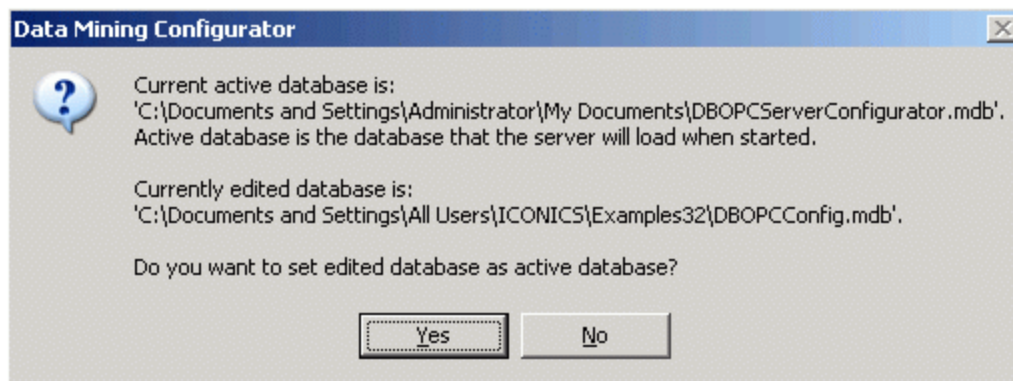

Activating the Database

Edit Menu

The **Edit** menu commands are listed in the table below.

Edit Menu Commands

Command	Shortcut Keys	Function
New		Creates a new item depending on what is selected in the tree control.
Rename	CTRL+R	Renames the selected item.
Multiply	CTRL+M	Opens the Multiply Item dialog box, which allows you to multiply an item in the tree control.
Delete	CTRL+DEL	Deletes the selected object.
Cut	CTRL+X	Cuts the selected object from the view and places it on the clipboard.
Copy	CTRL+C	Copies the selected object to the clipboard.
Paste	CTRL+V	Pastes the last object placed on the clipboard.
Select All	CTRL+A	Selects all objects in a list. The selection is shown in the upper-right-hand section of the viewer.
Invert Selection		Unselects all selected items and selects all unselected items in a list in the upper-right-hand section of

the viewer.

See Also

Multiplying Items

Edit-New

Selecting **New** from the **Edit** menu creates a new item depending on what is selected in the tree control.

See Also

Creating a New Configuration

Data Mining Configuration Wizard

Edit-Multiply

Selecting **Multiply** from the **Edit** menu opens the **Multiply Item** dialog box, which allows you to duplicate the selected item in the tree control.

See Also

Multiplying Items

Edit-Cut

Selecting **Cut** from the **Edit** menu cuts the selected object from the view and places it on the clipboard.

Edit-Copy

Selecting **Copy** from the **Edit** menu copies the selected object to the clipboard.

Edit-Paste

Selecting **Paste** from the **Edit** menu pastes the last object placed on the clipboard.

Edit-Select All

Selecting **Select All** from the **Edit** menu selects all objects in a list. The selection is shown in the upper-right-hand section of the viewer.

Edit-Invert Selection

Selecting **Invert Selection** from the **Edit** menu unselects all selected items and selects all unselected items.

Edit-Delete

Selecting **Delete** from the **Edit** menu deletes the selected object.

Edit-Rename

Selecting **Rename** from the tree control context menu allows you to change the name of the selected object.

Multiplying Items

The Configurator allows you to multiply items in the tree control. Multiplication provides a simple way of developing configurations where there are many similar items in a given category. To multiply an item:

1. Select the item in the tree control that you wish to multiply.
2. Either right-click the item and select **Multiply** from the pop-up menu, or select **Multiply** from the **Edit** menu. This opens the **Multiply Item** dialog box, shown below.

Multiply Item Dialog Box

3. When the items are multiplied, they are all given a base name followed by a number. The default base text is the name of the item selected for multiplication. To modify the base text, change the **Base Text** field appropriately.
4. In the **First Number** field, specify the number to appear next to the first multiplied item.
5. In the **Number of Items** field, specify how many items you wish to create.
6. In the **Numeric Places** field, specify the minimum length of each number to append. Values that take up less space than the specified amount of numeric places will have zeros before the number.
7. If you want to multiply all subfolders as well, check the **Including Subtree** check box.
8. Click the **OK** button to do the multiplication. The example configuration shown in the **Multiply Item** dialog box above creates three new items with the following names:
 - AdministrationDB001
 - AdministrationDB002
 - AdministrationDB003

All subfolders will also be multiplied.

View Menu

The **View** menu commands are listed in the table below.

View Menu Commands

Command	Shortcut Keys	Function
---------	---------------	----------

Toolbar		Toggles the toolbar.
Status Bar		Toggles the status bar.
List	F9	Displays items as a list.
Details	F10	Displays items as a list along with detailed information about the configuration of each item.
Dialog View	F11	Toggles the configuration window (right-hand pane).
Sort By		Displays a list of options for sorting the columns in the right-hand pane of the screen. The options listed depend on the level within the view.
Show/Hide Columns		Displays a list of options that you can choose to show or hide in the view.
Select Language		Opens the Select Language dialog box (see below). Choose the language you wish to use for your system (Unicode version only) and click OK . For navigation purposes, use the buttons and check boxes in the List section.
Global Refresh	F5	Refreshes the data for the entire Configurator screen.
Subtree Refresh	CTRL+F5	Refreshes only the data contained in the currently selected subtree.

See Also

Selecting Languages

View-Status Bar

Selecting **Status Bar** from the **View** menu toggles the status bar at the bottom of the Configurator window.

View-List

Selecting **List** from the **View** menu displays items as a list.

View-Details

Selecting **Details** from the **View** menu displays items as a list along with detailed information about the configuration of each item.

View-Sort By

Selecting **Sort By** from the **View** menu displays a list of options for sorting the columns in the right-hand pane of the screen. The options listed depend on the level within the view.

View-Show/Hide Columns

Selecting **Show/Hide Columns** from the **View** menu displays a list of options for sorting the columns in the right-hand pane of the screen. The options listed depend on the level within the view.

View-Global Refresh

Selecting **Global Refresh** from the **View** menu refreshes the data for the entire Configurator screen.

View-Subtree Refresh

Selecting **Subtree Refresh** from the **View** menu refreshes only the data contained in the currently selected subtree.

View-Select Language

Choosing **Select Language** from the **View** menu opens the **Select Language** dialog box, which allows you to choose which language to use in your display.

See Also

Selecting Languages


View-Dialog View

Selecting **Dialog View** from the **View** menu toggles the configuration window (right-hand pane).

Selecting Languages

The **Select Language** function on the **View** menu allows you to choose which language to use in your display. Choosing **Select Language** from the **View** menu opens the **Select Language** dialog box, shown in the figure below.

Note: A language resource .dll is required for language switching.

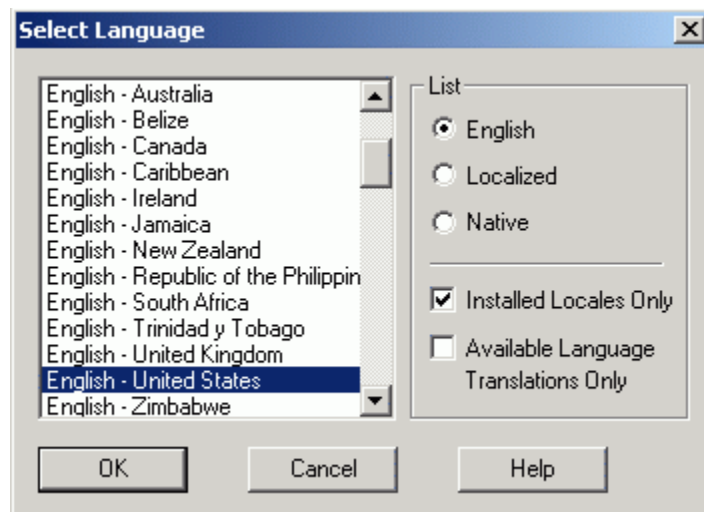

Select Language Dialog Box

Define the parameters listed in the table below. Then click **OK** to return to the work area.

Select Language Parameters

Parameter	Description
List	Lists available languages. Depending on which item you have selected, the view on the left will change. If English is checked, the languages will appear as their English

	name. If Localized is checked, the languages will appear with the native country in parentheses (for languages with several dialects only). When Native is checked, the languages are displayed the way they would be written in that language.
Installed Locales Only	If this is checked, local languages appear in the box.
Available Language Translations Only	Checking this box allows you to choose from available language translations only.

Go Menu

The **Go** menu commands are listed in the table below.

Go Menu Commands

Command	Shortcut Keys	Function
Back	CTRL+ALT+Left Arrow	Moves the cursor back to the previously selected item in the tree control.
Forward	CTRL+ALT+Right Arrow	Moves the cursor forward to the previously selected item in the tree control.
Up One Level		Moves the cursor up one level in the tree control.
Next Item	ALT+Down Arrow	Moves the cursor to the next item down in the tree control.
Previous Item	ALT+Up Arrow	Moves the cursor to the next item up in the tree view.
Expand Item	ALT+Right Arrow	Expands an item that contains a submenu.
Collapse Item	ALT+Left Arrow	Collapses an item that contains a submenu.
Page Up	ALT+PgUp	Moves the cursor up to the first item in the tree.
Page Down	ALT+PgDown	Moves the cursor down to the last visible item in the tree.
Home	ALT+Home	Moves the cursor up to the first item in

		the tree.
End	ALT+End	Moves the cursor down to the last visible item in the tree.
Next Pane	F6	Moves the cursor to the next pane.
Previous Pane	SHIFT+F6	Moves the cursor to the last pane used.

Go-Back

Selecting **Back** from the **Go** menu moves the cursor back to the previously selected item in the tree control.

Go-Forward

Selecting **Forward** from the **Go** menu moves the cursor forward to the previously selected item in the tree control.

Go-Up One Level

Selecting **Up One Level** from the **Go** menu moves the cursor up one level in the tree control.

Go-Next Item

Selecting **Next Item** from the **Go** menu moves the cursor to the next visible item in the tree control.

Go-Previous Item

Selecting **Previous Item** from the **Go** menu moves the cursor to the previous visible item in the tree control.

Go-Expand Item

Selecting **Expand Item** from the **Go** menu expands an item that contains a submenu.

Go-Collapse Item

Selecting **Collapse Item** from the **Go** menu collapses an item that contains a submenu.

Go-Page Up

Selecting **Page Up** from the **Go** menu moves the cursor up to the first item in the tree.

Go-Page Down

Selecting **Page Down** from the **Go** menu moves the cursor down to the last visible item in the tree.

Go-Home

Selecting **Home** from the **Go** menu moves the cursor up to the first item in the tree.

Go-End

Selecting **End** from the **Go** menu moves the cursor down to the last visible item in the tree.

Go-Next Pane

Selecting **Next Pane** from the **Go** menu moves the cursor to the next pane in the window.

Go-Previous Pane

Selecting **Previous Pane** from the **Go** menu moves the cursor to the last pane used.

Tools Menu

The **Tools** menu commands are listed in the table below.

Tools Menu Commands

Command	Function
Options	Launches the Options dialog box.
Compact/Repair MS Access Database	Opens the Compact/Repair MS Access Database dialog box.

Tools-Options

Selecting **Options** from the **Tools** menu opens the Options dialog box.


Tools-Compacting and Repairing Microsoft Access Databases

Selecting **Compact/Repair MS Access Database** from the **Tools** menu opens the Compacting and Repairing Microsoft Access Databases dialog box.

Options

To choose additional settings, select **Options** from the **Tools** menu. This opens the **Options** dialog box, as shown in the figure below. The **General** tab of the **Options** dialog box contains the following options:

- **Automatically apply changes when selection is changed:** Checking this option allows changes to the configuration database to be saved each time you switch dialogs without clicking on the **Apply** button or being shown a message asking if you would like to apply changes.
- **Enable hover selection:** Checking this option allows you to highlight an item by moving the mouse pointer over that item and keeping it there for a specified amount of time (in milliseconds).

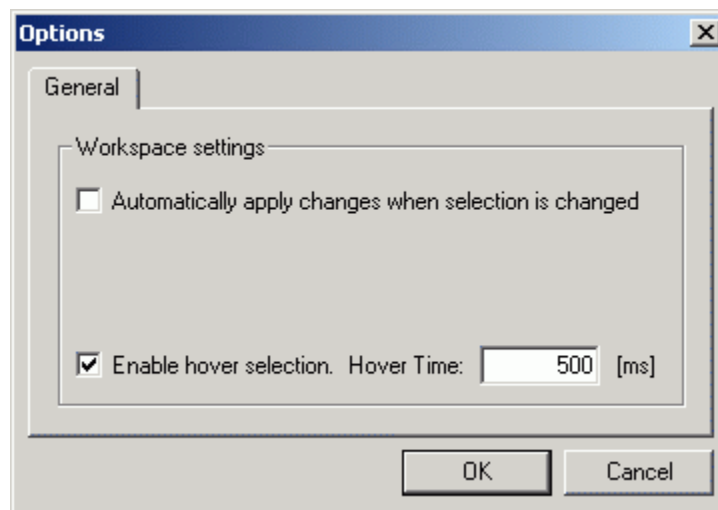


Options Dialog Box: General Tab

Compacting and Repairing Microsoft Access Databases

You can compact Microsoft Access databases, which can be either configuration databases or historical databases, using the **Compact/Repair MS Access Database** dialog box, shown in the figure below. To open this dialog box, select **Compact/Repair MS Access Database** from the **Tools** menu. Microsoft Access-based databases are subject to database fragmentation over time, and the support for the database will compact the target database, reclaim unused space, and drastically improve database performance.

Note: It is critical that no users or client applications are connected to the database at the time of compacting and that, if the **Backup Original Database** option is selected, there is plenty of available hard disk space.

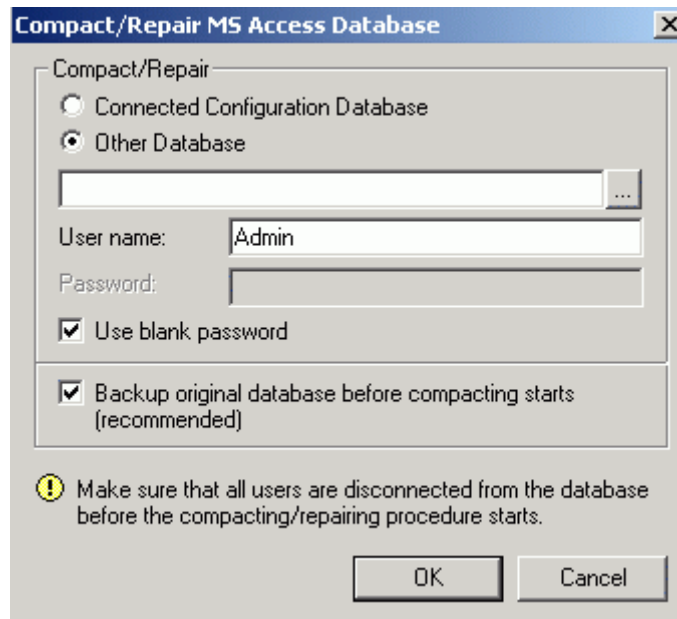

Compacting and Repairing Microsoft Access Databases

Help Menu

The **Help** menu commands are listed in the table below.

Command	Shortcut Key	Function
Help Topics	F1	Launches the online Help for the Configurator.
About Application		Launches the About Box , which contains information about the product version number, copyright, and available disk space. It also contains contact information.

Help-Help Topics

Selecting **Help Topics** from the **Help** menu launches the online Help for the Configurator. Press the F1 button for context-sensitive help topics.

Help-About Application

Selecting **About Application** from the **Help** menu launches the **About Box**, which contains information about the product version number and copyright.

Database Connections

The first step in data-mining configuration is to connect to a database (i.e. where to get the data). The **Databases** tree control is where you configure your connections to different types of databases, including Microsoft Access, Microsoft SQL Server, MySQL, Microsoft Excel, Oracle, SAP, Generic OLE DB, and other ODBC data sources. The Database Connection object is equivalent to a physical database connection. To correctly configure database connection, you need to specify a database type and fill in the appropriate number of connection parameters.

See Also


Creating a New Database Connection

Database Connection Properties

Creating a New Database Connection


To create a new database connection:

1. Right-click on the **Databases** tree control of the Configurator and select **New > Database Connection** from the pop-up menu, as shown in the figure below.

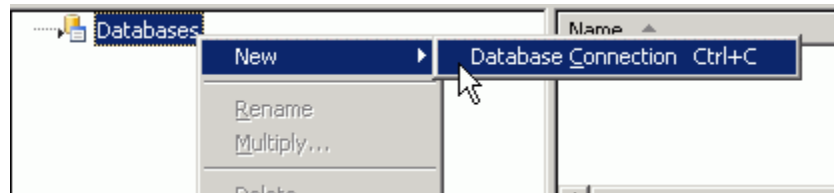

Creating a New Database Connection

2. The properties dialog box for the new database connection appears in the right-hand pane of the Configurator, as shown in the figure below.

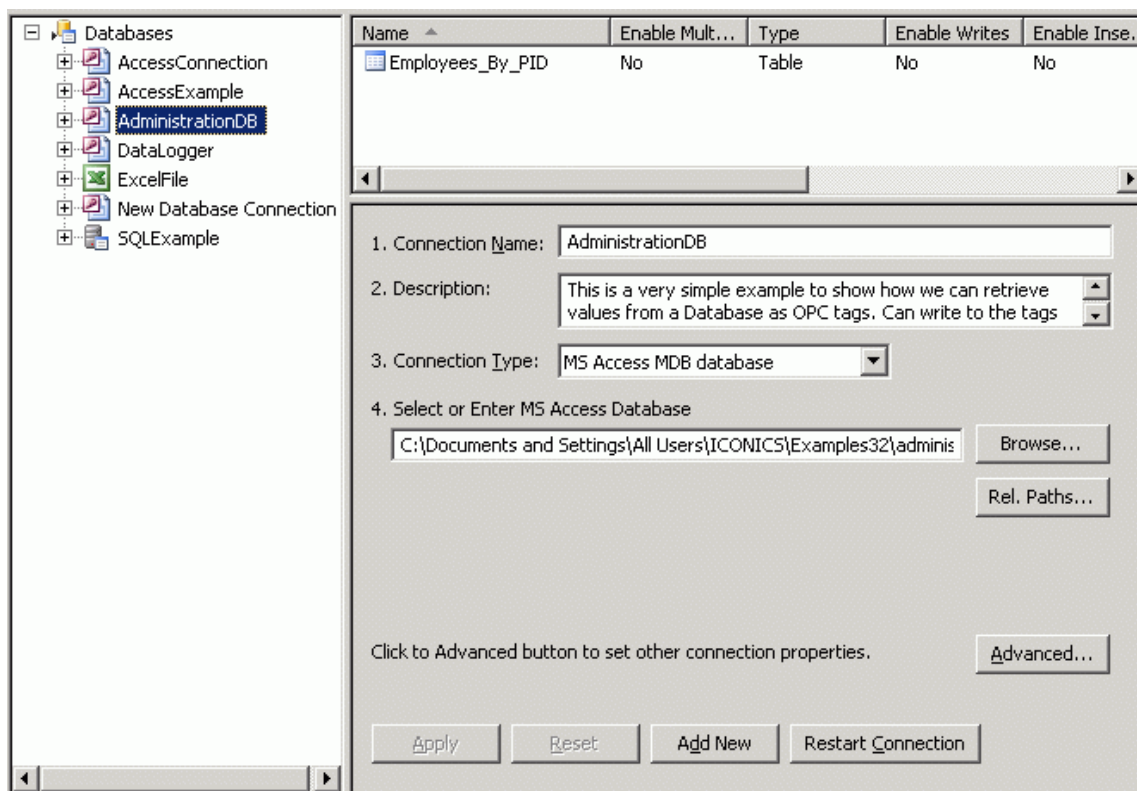

Setting the Properties for the New Database Connection

3. In the **Connection Name** field, type a name for the new connection.
4. Select a **Connection Type** from the drop-down list (Microsoft Access, Microsoft SQL Server, Microsoft Excel, Oracle, SAP R/3 System, or another ODBC or Generic OLE DB data source).
5. Specify the database or data source to which you want to connect.
6. When you have finished configuring the database connection properties, click the **Apply** button. The new connection appears under the **Databases** tree control.

See Also

Database Connection Properties


Database Connection Properties

Establishing a database connection requires the following basic steps, as shown in the figures below:

1. In the **Connection Name** field, type a name for the new connection
2. Select a **Connection Type** from the drop-down list (Microsoft Access, Microsoft SQL Server, Microsoft Excel, Oracle, SAP R/3 System, or another ODBC or Generic OLE DB data source).

3. Specify the database or data source to which you want to connect. You can click the **Rel. Paths** button to specify a relative directory path that points to the specified data base or data source.
4. Click the **Apply** button to save your settings.

Note: You can also click the **Advanced** button to establish database connections through the Windows **Data Link Properties** dialog box, as shown in the figure below.

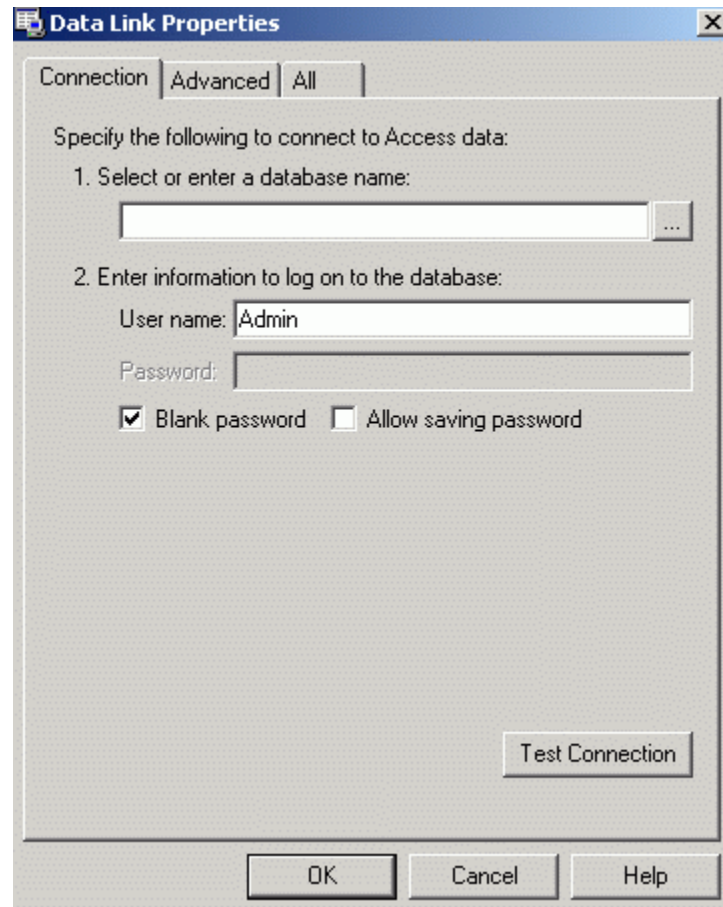


Connecting to Data Source Through the Data Link Properties

The database connection properties vary slightly with each connection type:

- Μιχροσοφτ Αχχεσσ Χοννεχτιον
- Μιχροσοφτ Εξχελ Χοννεχτιον
- Μιχροσοφτ ΣΘΛ Σερωερ Χοννεχτιον
- Οραχλε Χοννεχτιον
- ΟΔΒΧ Χοννεχτιον
- Γενεριχ ΟΛΕ ΔΒ Χοννεχτιον
- ΣΑΠ Ρ/3 Σψστεμ Χοννεχτιον

Microsoft Access Connection


In the Microsoft Access connection properties, click the **Browse** button and select an Access (.mdb) file, as shown in the figure below.

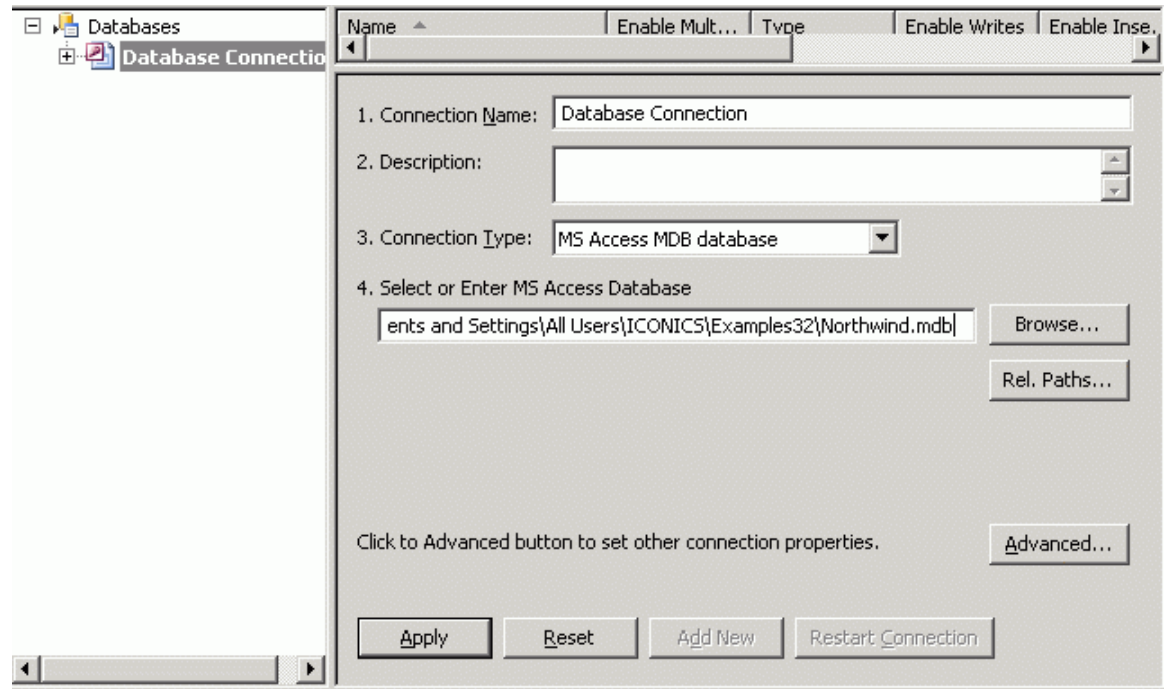

Database Connection Properties: Microsoft Access Connection

Microsoft Excel Connection

In the Microsoft Excel connection properties, click the **Browse** button and select an Excel (.xls) file, as shown in the figure below. If the first row of your Excel data source (e.g. spreadsheet) contains column headings, you can choose to use the column headings as field names by checking the **Use First Row as Field Names** check box, as shown in the figure below.

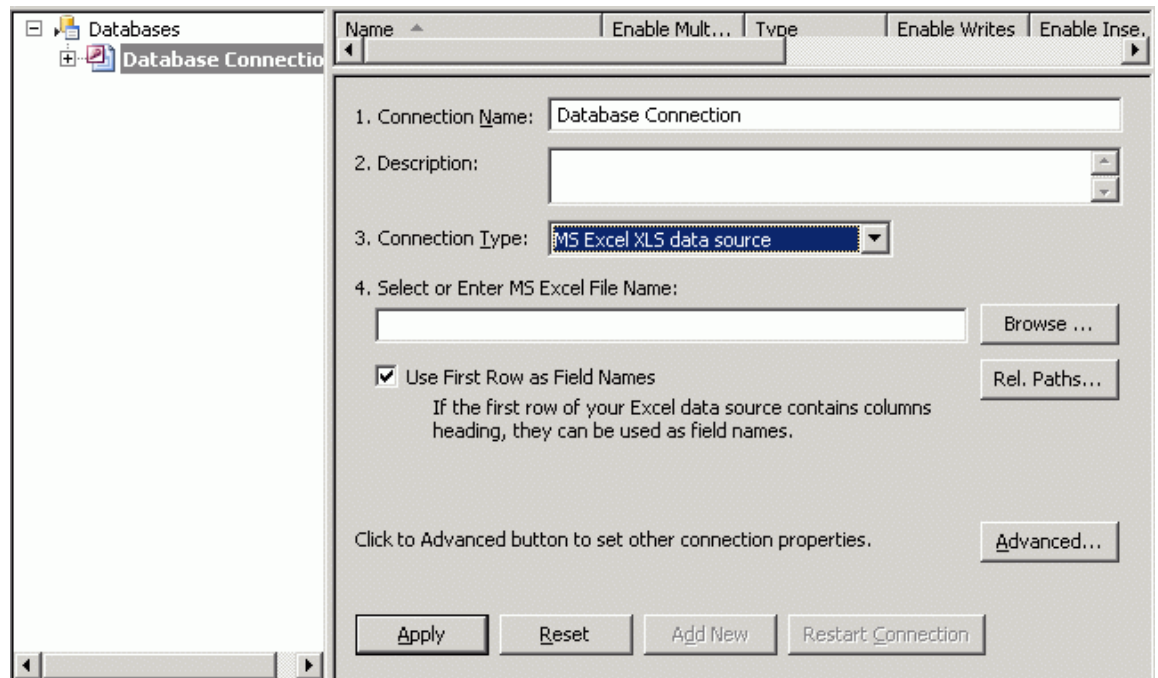

Database Connection Properties: Microsoft Excel Connection

Microsoft SQL Server Connection

In the Microsoft SQL Server connection properties, select a SQL Server from the drop-down list. The default SQL server is "(local)." Then select the database on the specified SQL Server file, as shown in the figure below. By default, SQL Server database connections use Windows integrated security.

The screenshot shows the 'Database Connection Properties' dialog box in the GENESIS32 Data Mining Configurator. The left pane shows a tree view with 'Databases' and 'Database Connection'. The right pane contains the following fields and options:

- 1. Connection Name: Database Connection
- 2. Description: (empty text box)
- 3. Connection Type: MS SQL Server database (dropdown menu)
- 4. Select a SQL Server Name: (local) (dropdown menu)
- 5. Select the Database on the Server: Northwind (dropdown menu)
- Log on to the server using Windows Integrated security. (checkbox, checked)
- Click to Advanced button to set other connection properties. (text)
- Advanced... (button)
- Apply (button)
- Reset (button)
- Add New (button)
- Restart Connection (button)

Database Connection Properties: Microsoft SQL Server Connection

Oracle Connection

In the Oracle connection properties, specify an Oracle database name. Then supply the **User Name** and **Password** required to log on to the specified Oracle database, as shown in the figure below.

The screenshot shows the 'Database Connection Properties' dialog box for an Oracle connection. The left pane shows a tree view with 'Databases' and 'Database Connection'. The right pane contains the following fields and controls:


- 1. Connection Name: Database Connection
- 2. Description: (empty text box)
- 3. Connection Type: Oracle SQL Server database (dropdown menu)
- 4. Enter a Oracle Server Name: (empty text box)
- 5. Enter Information to Log On to the Database:
 - User Name: (empty text box)
 - Password: (empty text box)

Below the fields, there is a text label: 'Click to Advanced button to set other connection properties.' and an 'Advanced...' button. At the bottom, there are four buttons: 'Apply', 'Reset', 'Add New', and 'Restart Connection'.

Database Connection Properties: Oracle Connection

ODBC Connection


An ODBC connection, shown in the figure below, is a connection to an open data source. Click the **Advanced** button to establish database connections through the Windows **Data Link Properties** dialog box.

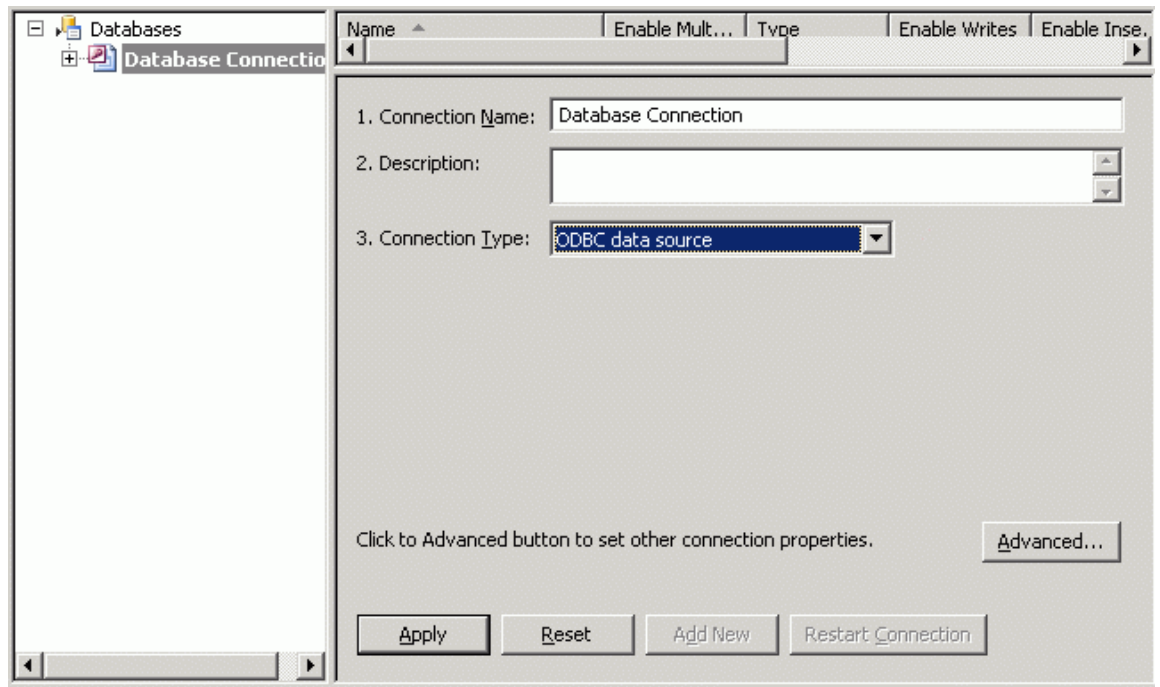

Database Connection Properties: ODBC Connection

Generic OLE DB Connection

A Generic OLE DB connection, shown in the figure below, is a connection to a generic, open data source. Click the **Advanced** button to establish database connections through the Windows **Data Link Properties** dialog box.

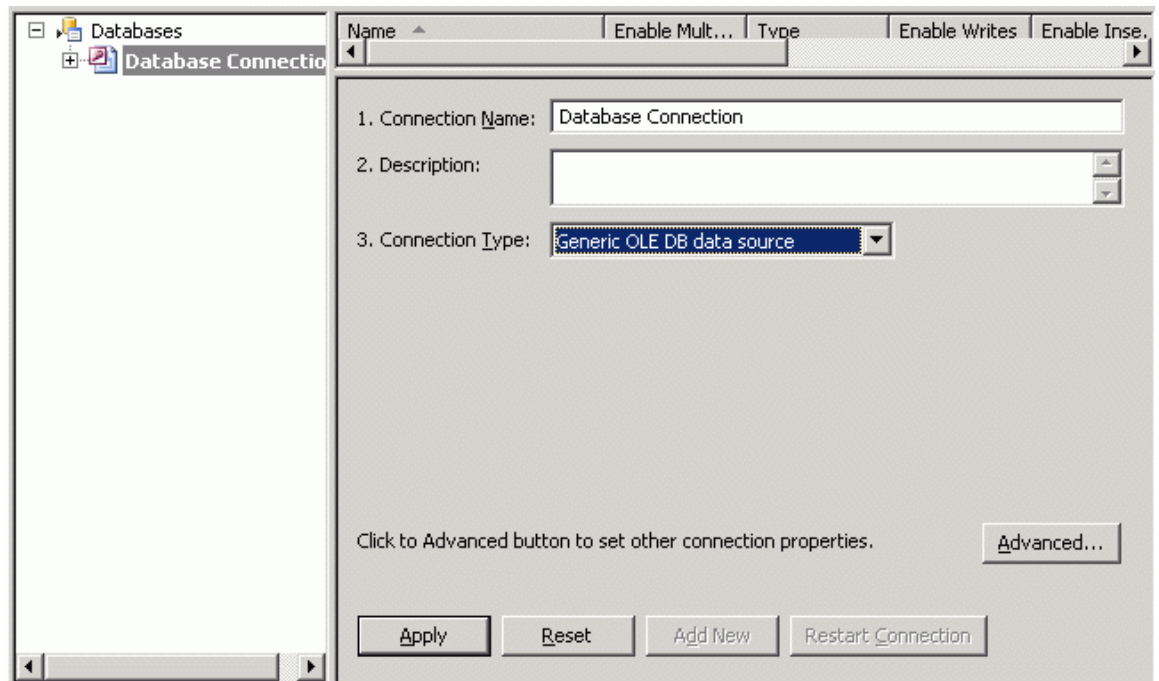

Database Connection Properties: Generic OLE DB Connection

MySQL ODBC Connection

Genesis32 version 9.x supports communication to MySQL databases. ICONICS has tested MySQL Server 5.0 and ODBC Driver 3.51.09 with version 9.x of Genesis32. You can download these MySQL components for the Windows platform from <http://dev.mysql.com/downloads>.


MySQL 5.0 is available as a service, and is configured that way by default using the MySQL Server Instance Config Wizard. You should run it as a service for GENESIS V9.x.

GENESIS32 requires the installation of the MySQL ODBC driver in order to connect to the MySQL Server. There is some variation of connectivity based on the MySQL server version you use. Genesis32 does use the MySQL client application to connect to the MySQL Server.

To establish an ODBC connection:


1. Click on **Start, Settings, Control Panel, Administrative Tools**, and then select the **Data Sources (ODBC)** to launch the ODBC Data Source Administrator.
2. Click on the **System DSN** tab and then on the **Add** button to add a new ODBC data source.

3. Select **MySQL ODBC 3.51 Driver** from the Select a driver list box (as shown below); then click on the **Finish** button.

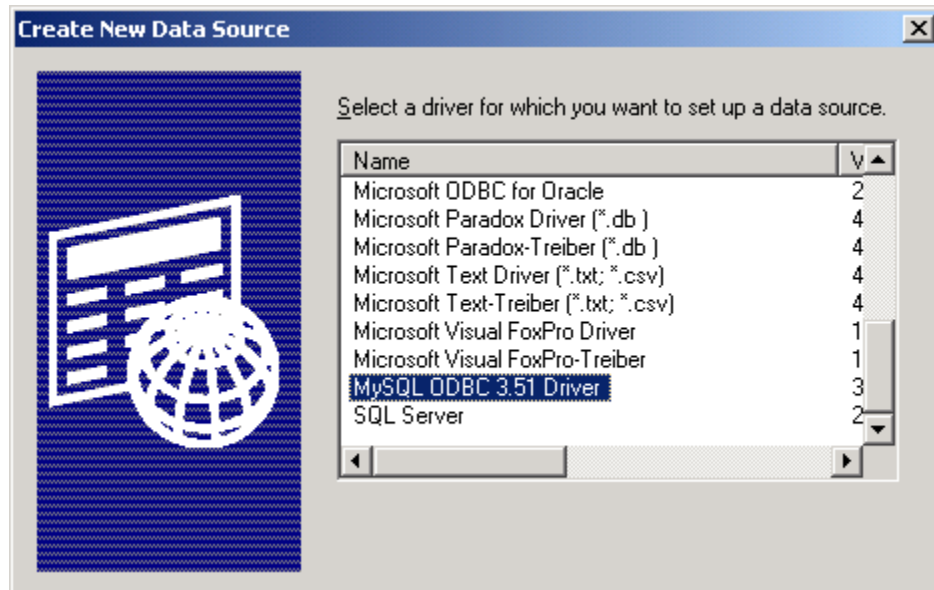

Adding a MySQL ODBC database driver

4. Enter a **name** for the data source and a **description** (optional) in the DSN Information section.
5. Enter the **Server Name (or IP)**, the **Database Name**, **User**, and the **Password** for the account into the text fields in the MySQL Connection Parameters section, as shown below.
6. Click the **Test Data Source** button to determine if your parameters are correct.
7. A message box should appear that says: "Data Source <sourcename> connected successfully to <servername>".
8. If your connection attempt is unsuccessful check to see if the **Port** number used needs to be modified and enter it.
9. Click the **OK** button when your connection is successful.

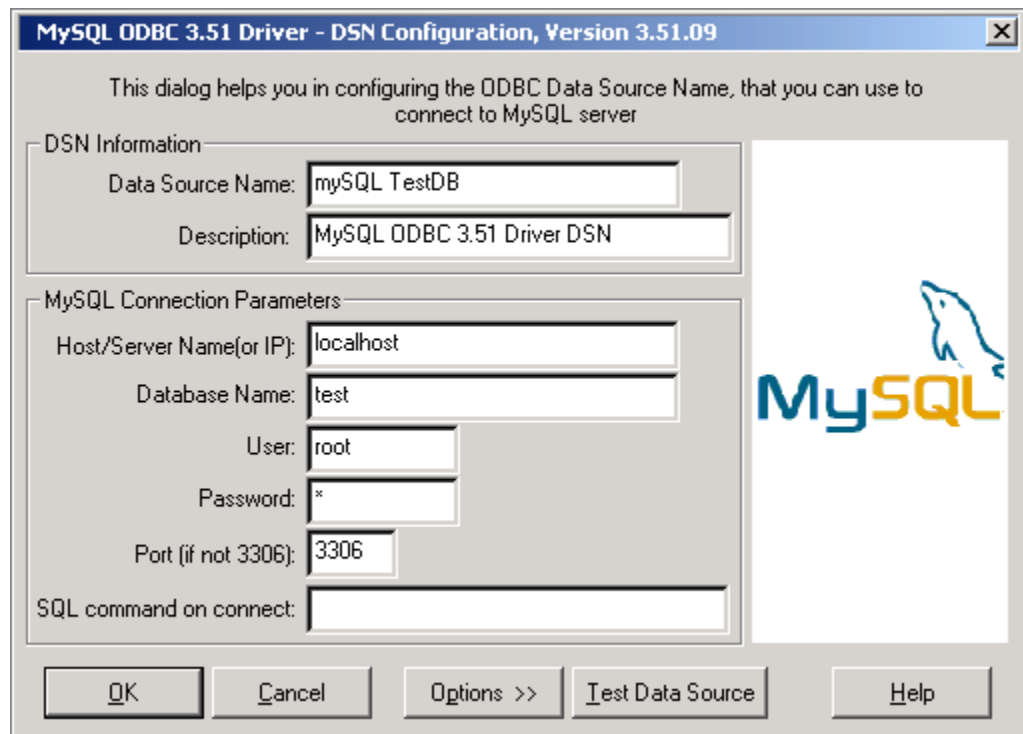


A MySQL ODBC driver configuration dialog box with sample settings.

Note: If you receive a failure message after Step 6 above saying that the client does not support the authentication protocol, refer to <http://dev.mysql.com/doc/refman/5.0/en/old-client.html> for possible solutions.

Alternatively install MySQL Administrator and check the user account permissions for you connection as described below.


To use old passwords:

1. Open the **MySQL Administrator** utility from the MySQL folder on the **Start, All Programs** menu.
2. Click on the **Startup Variables** icon in the left hand pane.
3. Click to enable the **Use old passwords** check box` as shown in the figure below.

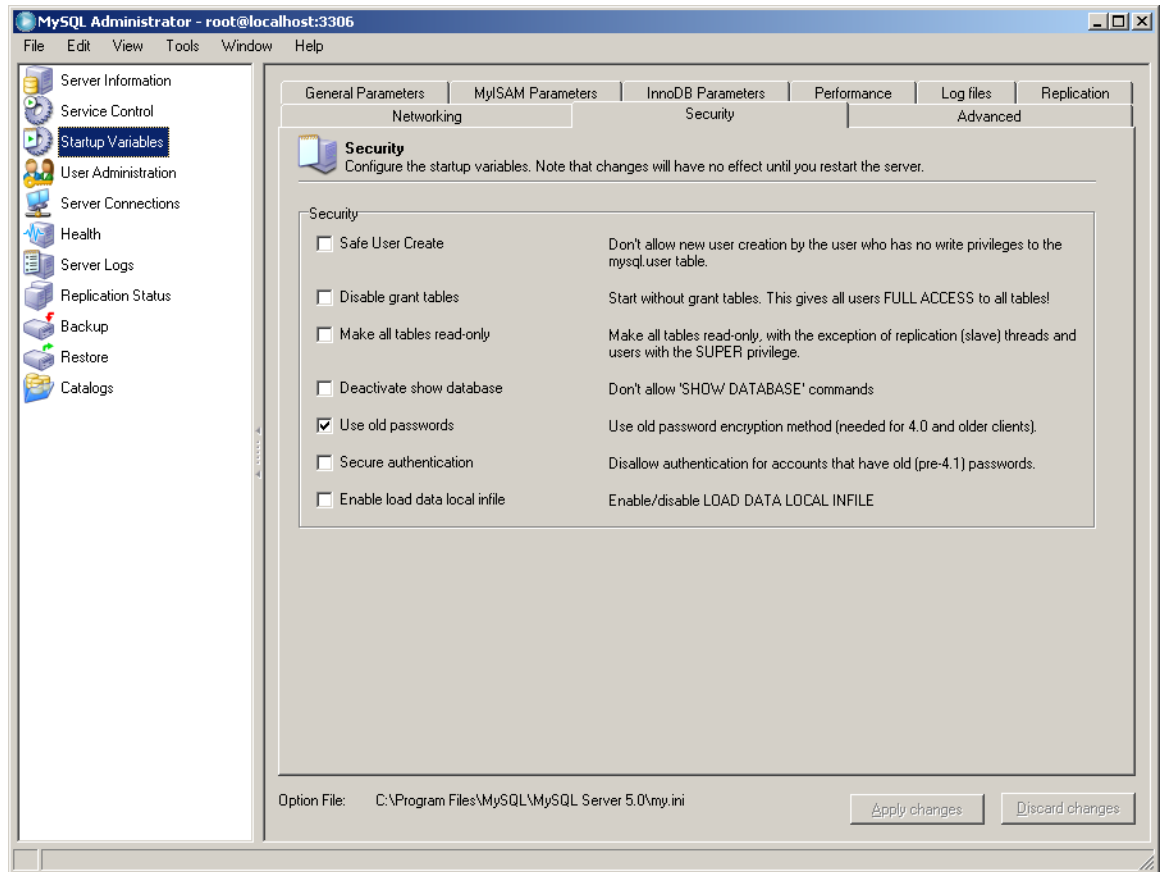

Setting Old password support in MySQL Administrator

4. Click on the **Service Control** icon in the left hand pane.
5. Click to enable the **Support for InnoDB** check box.

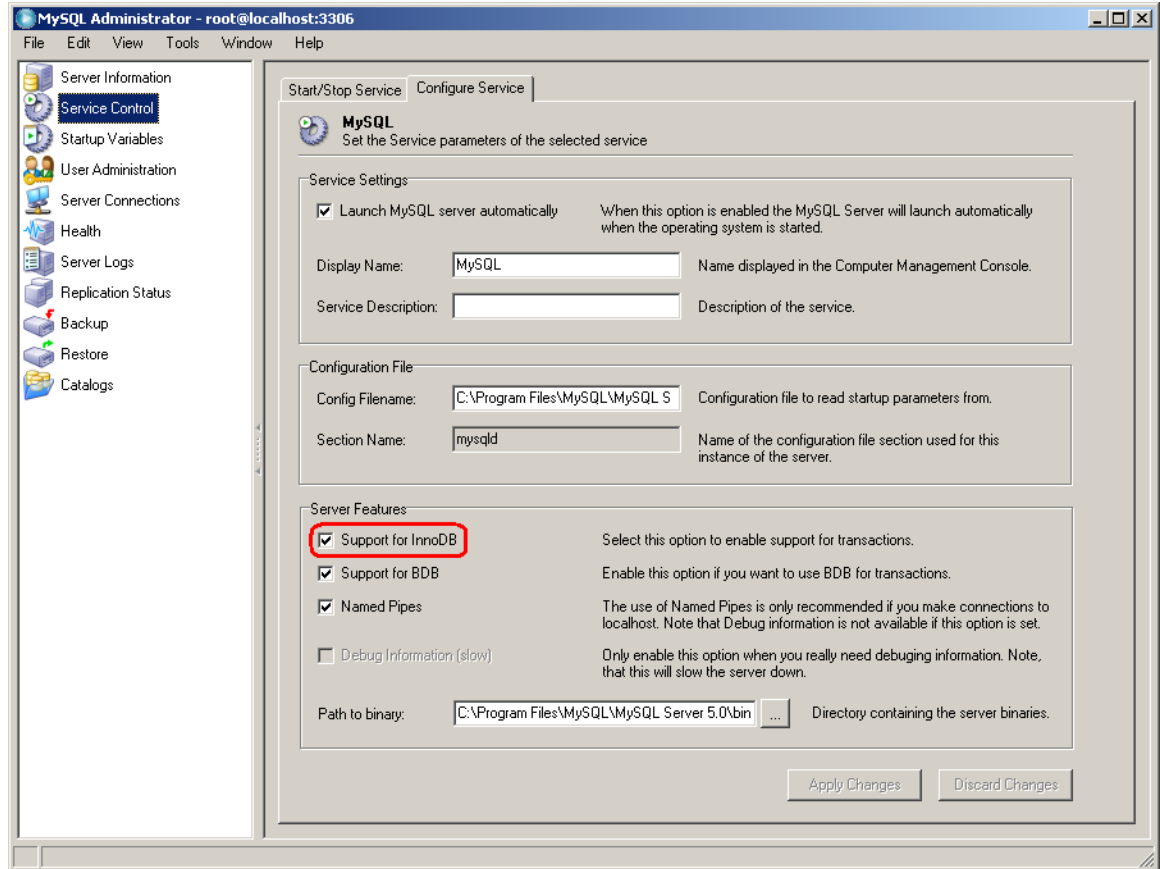

Enabling InnoDB support for greater compatibility with old passwords.

ICONICS recommends that MySQL be configured to utilize the InnoDB Database type because it ensures data integrity and reliability.

SAP R/3 System Connection

For an SAP R/3 connection, shown in the figure below, click the **Advanced** button to establish database connections through the Windows **Data Link Properties** dialog box. Specify the Client, User, Password, Host Name, and System Number information, and click the **Advanced** button to establish database connections through the Windows **Data Link Properties**.

Note: For more information about connecting to SAP/R3 systems, please see the SAP Connector whitepaper on the GENESIS32 Product CD.

The screenshot shows the 'Database Connection Properties' dialog box for an SAP R/3 System. The left pane shows a tree view with 'Databases' and 'Database Connection'. The right pane contains the following fields and controls:

- 1. Connection Name:** A text box containing 'Database Connection'.
- 2. Description:** A text box with a vertical scrollbar.
- 3. Connection Type:** A dropdown menu showing 'SAP R/3 System'.
- 4. Enter SAP R/3 User and Connection Information:**
 - Client:** A text box.
 - Host Name:** A text box.
 - User:** A text box.
 - System Number:** A text box.
 - Password:** A text box.
- Advanced...** button: A button to open the advanced connection properties dialog.
- Buttons:** At the bottom, there are four buttons: 'Apply', 'Reset', 'Add New', and 'Restart Connection'.

Database Connection Properties: SAP R/3 System Connection

Data Sources and Data Manipulators

Once you have established a connection to a database, the next step is to select a data source or data manipulator to mine within the connected database (i.e. which group of data within the connected database). Data sources and data manipulators work with the data stored in databases via read/write operations.

See Also

Data Sources

Data Manipulators

Do's and Don'ts for Data Mining

Troubleshooting Data Sources and Data Manipulators

Creating a New Data Source

Data Source Properties

Creating a New Data Manipulator

Data Manipulator Properties

Data Sources

A **data source** can be used to read data from a database. Every data source is connected to a particular database connection. Data sources are designed to periodically read database tables and display them in an OPC Data Access client. A data source supports two different ways to read data from a database:

- Direct access to database table (view)
- SQL *read* command based on SELECT statement

Data Manipulators

A **data manipulator**, which is intended for processing data stored in a connected database, manipulates data using a SQL *write* command or by executing a stored procedure. Every data manipulator is connected to a particular database connection. Data manipulator objects are designed to manipulate database data and structure using stored procedures or simple SQL commands when the database server or engine does not support stored procedures. In comparison with data sources, a data manipulator should not return any cursor variables (row sets). Data manipulation actions are executed upon user request only (there is no polling mechanism).

Note: SQL queries in a data manipulator object should be used only for databases that do not support stored procedures (e.g. Excel, MS Jet). In all other cases, stored procedures/functions should be used to manipulate database data. The reason for this is that stored procedures offer wider functionality, and because they are precompiled on the server, execution is much faster.

Do's and Don'ts for Data Mining

Do not use:

- Stored procedures in data manipulators with Microsoft Access databases.
- Spaces in stored procedures names.
- CREATE, INSERT, UPDATE statements in data source SQL command.
- Data manipulator stored procedures to view data.

Do use:

- Stored procedures in data manipulators with Microsoft SQL and Oracle.

- SQL queries when connecting to Microsoft Excel or Microsoft Jet connections.
- Data manipulator stored procedures to manipulate data only.

Troubleshooting Data Sources and Data Manipulators

When I select 'SQL Command' under Data Source, what should it do?

SQL command will behave similarly to a table-based data source; it will send data from a record set returned by this command. You can parameterize it using data item parameters.

When I select enable 'Multi-rows Dataset,' what should it do (what should I expect as the result)?

You will get multiple rows from a SQL query or table. In the case of a single column, it will return a single-dimensional array of values where each value represents one row. When you use **@@Recordset**, then you will get a two-dimensional array (like table content) - all columns and rows.

Note: One limitation is that 'Multi-rows Datasets' is read-only.

What are SQL Command parameters, and why should I provide more than one of these?

SQL command parameters specify a set of parameters used by a SQL command; the SQL command can use more than one parameter.

Why and when should I give more than one table parameter?

You may want to locate a table row using different criteria (e.g. if you have an "Employees" table, you can index it using "name, mid-name, surname," or you can use "personal ID."

When should I check 'Enable Writes'? How are the writes possible (for example, from GraphWorX32)?

If you will use a table-based data source with a single-row as output, then every column-oriented data item will return a single value. In this case, you can request it as a process point and modify it.

After I check 'Enable Writes', when should I check 'Enable Inserts'?

In case the related table row is missing from the table; then after writing it will create this table row using a combination of known parameters and database default values.

What is a data manipulator?

A data manipulator object allows you to execute stored procedures or stand-alone SQL queries and get results from them (if there are any). There are two special data items to manipulate it:

- **@@Execute**
- **@@Results**

You can execute stored procedures by writing into the **@@Execute** data item, where the value should be a safe array of VARIANT values. The first value is "request identification," and the rest of the values are input parameters for this

procedure. You will get results from @@**Result** data item. The values have a structure similar to the execute data item. It is again an array of VARIANT values where the very first value is the "request identification" and the rest of the values are output parameters.

What does 'Bind Results' for SQL Command do, and why is the 'Edit' button available? What should I be able to do with this button?

The **SQL Command** section in the data manipulator configuration was designed for databases (such as Microsoft Access) that do not have stored procedures support implemented (or have very poor support). Then the only way to manipulate the data is to use SQL commands. One command is used to do specific action, and a resulting SQL command is used to get output values in the same database transaction. For example, when you insert a new table row into a Microsoft Access database, you can then read an auto-generated value from the table using the **SELECT @@identity** command. Another example is if you will insert/update something; then you can get back a sum of certain column(s). The range of its use is very wide and depends on specific implementation.

Where should stored procedures be written? (For example if I connect to SQL Server, should the stored procedure be written in SQL and already available for us to use it?)

Stored procedures are stored in the database server and allow you to manipulate database content. They are usually faster than using SQL commands from the client side. To get more information, you will need to study the documentation for the specific database server.


What should I expect when I check 'Complete Rowset'?

When you check the **Complete Rowset (returned as an array)** check box, it will return a single row of data (all columns) in a single-dimensional array. When "Enable Multi-rows Dataset" is checked, you will get a multi-dimensional array as a result (similar to the @@**Recordset** data item).

Creating a New Data Source

To create a new data source:

1. Right-click on a database connection in the tree control of the Configurator and select **New > Data Source** from the pop-up menu, as shown in the figure below.

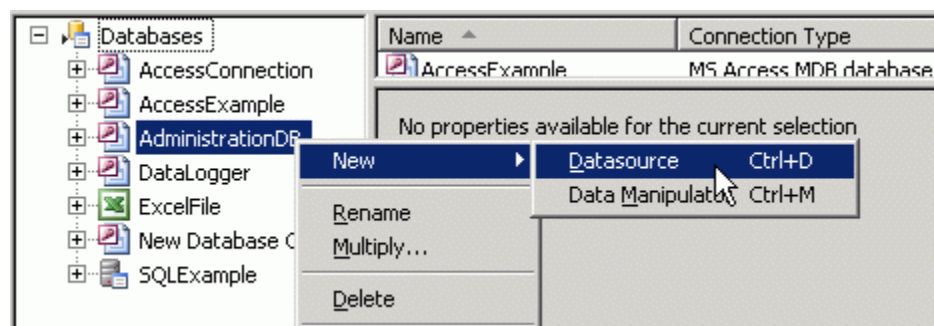

Creating a New Data Source

- The properties dialog box for the new data source appears in the right-hand pane of the Configurator, as shown in the figure below.

The screenshot shows the GENESIS32 Data Mining Configurator interface. On the left is a tree control under 'Databases' containing: AccessConnection, AccessExample, AdministrationDB, Employees_By_PID (selected), DataLogger, ExcelFile, New Database Connect, and SQLExample. The right pane displays the configuration for 'Employees_By_PID'.

Name: Employees_By_PID
Desc.: Connected to the employees table and retrieve each cell of the database as an OPC tag.

1. Specify Dataset

☒ Database Table ☐ Enable Multi-rows Dataset
☐ SQL Command/Stored Procedure

Table Name: Employees

Table Parameters:

Index	Parameter Name
0	PID

☐ Enable Writes
☐ Enable Inserts
☐ Enable Deletes (on VT_EMPTY value)

2. Set Database Polling

☒ Enable Updates **Update Rate (sec):** 1

Buttons: Add..., Remove, Edit..., Move Up, Move Down, Test SQL..., Apply, Reset, Add New

Setting the Properties for the New Data Source

- In the **Name** field, type a name for the new data source.
- Specify a **Data Set (Database Table or SQL Command/Stored Procedure)** to mine within the connected database.
- Specify an **Update Rate** (in seconds) to poll for updates from the database.
- When you have finished configuring the data source properties, click the **Apply** button. The new data source appears under the database connection in the tree control.

See Also

Data Source Properties

Data Source Properties

A **data source** can be used to read data from a database. It can access a specific database table directly or use a SQL *read* command to get data. Configuring a data source requires the following basic steps, as shown in the figures below:

1. In the **Name** field, type a name for the new data source.
2. Specify a **Data Set (Database Table or SQL Command)** to mine within the connected database.
3. Database polling properties should be specified for any data source object. Specify an **Update Rate** (in seconds) to poll for updates from the database. The **Enable Update** check box must also be checked in order to specify an updated rate. When updates are disabled, then the data mining server scans the database only once when the first data item is requested or on the user request invoked by refreshing the data item.
4. When you have finished configuring the data source properties, click the **Apply** button. The new data source appears under the database connection in the tree control.

The screenshot shows the 'Data Source Properties' dialog box. On the left is a tree view under 'Databases' containing: AccessConnection, AccessExample, AdministrationDB, **Employees_By_PID** (selected), DataLogger, ExcelFile, New Database Connect, and SQLExample. The right pane is titled 'Name' and 'Type' at the top. Below this, the 'Name' field contains 'Employees_By_PID' and the 'Desc.' field contains 'Connected to the employees table and retrieve each cell of the database as an OPC tag.' The main configuration area is divided into two sections: '1. Specify Dataset' and '2. Set Database Polling'. In the 'Specify Dataset' section, 'Database Table' is selected, and 'Table Name' is 'Employees'. A table of 'Table Parameters' shows one parameter: Index 0, Parameter Name PID. There are buttons for 'Add...', 'Remove', 'Edit...', 'Move Up', and 'Move Down'. Below this are checkboxes for 'Enable Writes', 'Enable Inserts', and 'Enable Deletes (on VT_EMPTY value)'. In the 'Set Database Polling' section, 'Enable Updates' is checked, and 'Update Rate (sec)' is set to 1. At the bottom are 'Apply', 'Reset', and 'Add New' buttons.

Index	Parameter Name
0	PID

Data Source Properties

Database Tables

To configure a data source object with direct table access, you must fill in the fully qualified database table name (or view). To locate specific table row(s), table parameters can be used. **Parameters** define a subset of table columns used together as a filter for returned table row(s). Parameter values are specified by data items.

To get data from a specific table in the database:

1. Select the **Database Table** option under the **Specify Data Set** section, as shown in the figure below.

The screenshot shows the 'Database Table' configuration window. On the left, a tree view under 'Databases' shows 'Employees_By_PID' selected. The main window has the following fields and sections:


- Name:** Employees_By_PID
- Desc.:** Connected to the employees table and retrieve each cell of the database as an OPC tag.
- 1. Specify Dataset**
 - ☒ Database Table ☐ Enable Multi-rows Dataset
 - ☐ SQL Command/Stored Procedure
 - Table Name:** Employees
 - Table Parameters:**

Index	Parameter Name
0	PID
 - ☐ Enable Writes
 - ☐ Enable Inserts
 - ☐ Enable Deletes (on VT_EMPTY value)
- 2. Set Database Polling**
 - ☒ Enable Updates
 - Update Rate (sec): 1

Buttons at the bottom: Apply, Reset, Add New. Buttons on the right: Add..., Remove, Edit..., Move Up, Move Down, Test SQL...

Data Source Properties: Database Table

2. In the **Table Name** field, click the ... button. This opens the Unified Data Browser, which lists all the tables in the database, as shown in the figure below. Select a table (e.g. "Employees"), and then click **OK**.

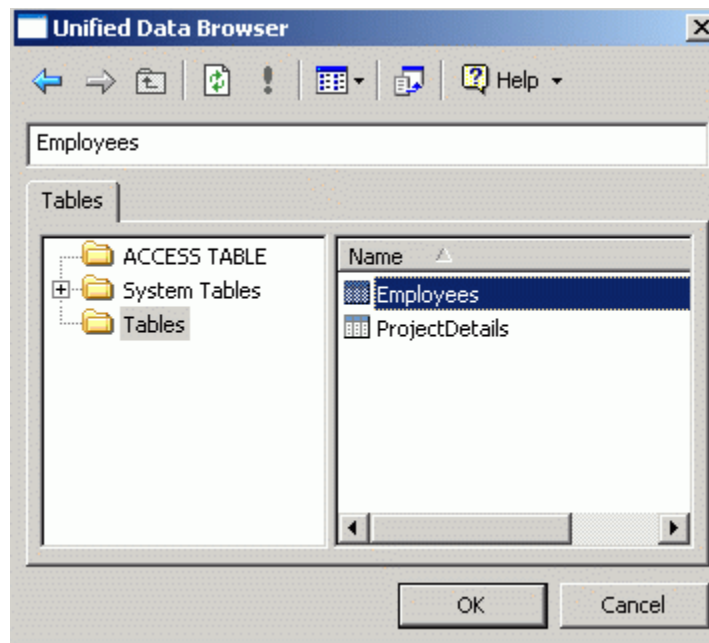


Selecting a Database Table

3. In the **Table Parameters** field, click the **Add** button. This opens the Unified Data Browser, which lists all columns in the selected table. Select the desired columns from the specified table as shown in the figure below, and then click **OK**.

Note: If you want to read more than one row from the selected database table, check the **Enable Multi-rows Dataset** check box. This way you do not need to add individual rows to the **Table Parameters** field.

Note: You can also change the column ordering in the data source configuration by selecting a column and clicking the **Move Up** or **Move Down** buttons. Click the **Remove** button to delete the selected column(s).

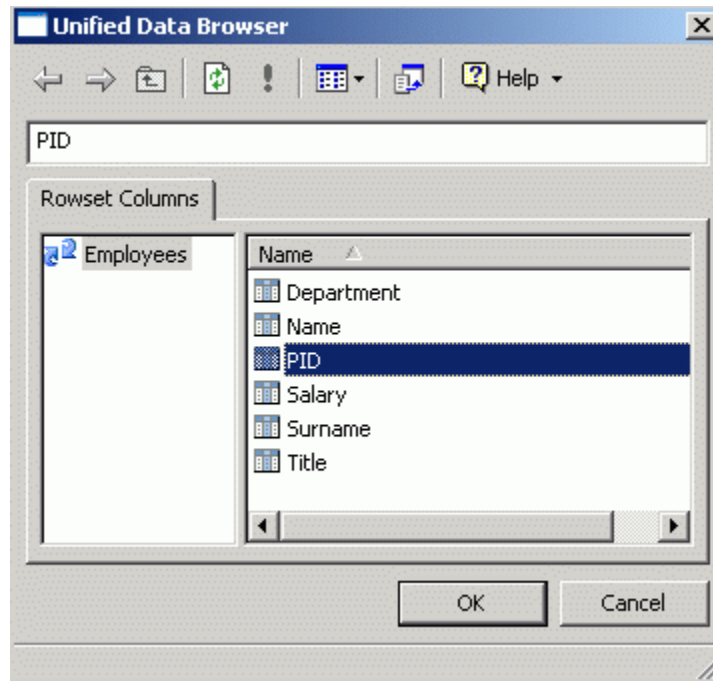

Selecting a Database Column

Enable Writes

Direct database access allows users to make modifications in the specified database table (may work for views with limitations given by the connected database server or engine). When the **Enable Writes** check box is checked, you can write a value to OPC tags and it will update related records in the database table. This works for table-based data sources only.

Note: Writes are disabled for multi-row datasets.

Enable Inserts

The **Enable Inserts** check box is available only when the **Enable Writes** check box is checked. In case the record is missing in the database table (data tags return VT_EMPTY and Bad quality) then writing to this tag will create a new record in the database table. Since the table may have more columns than just the one requested in the data tag, it uses the following criteria to fill in other values:

- It uses tag parameters and the actual value to create the record; the rest of the columns use database defaults.
- If the data tag is record-based, then it uses all the values passed during the write.

Enable Deletes

The **Enable Deletes (on VT_EMPTY value)** check box is available only when the **Enable Writes** check box is checked. It works for record-based data tags only. If you write VT_EMPTY value, then it will delete related records from the database table.

SQL Command

The **SQL Command** data source is designed to access database data using SQL commands based on SELECT statements. The SQL command can be parameterized by SQL command parameters. Parameters in a SQL command are represented by question marks (?) and they are filled in the same order as configured in **SQL Command Parameters** section of the configuration dialog.

Database stored procedures returning cursor variables (row sets) can be also accessed using a SQL command based on EXECUTE or CALL statements.

To enter a SQL command to read from the database:

1. Select the **SQL Command/Stored Procedure** option under the **Specify Data Set** section, as shown in the figure below.

Databases

- AccessConnection
 - DataSource01
 - DataSource02
 - DataSource03
 - DataSource04
 - DataSource05
 - DataSource06
 - DataSource07
 - DataSource09**
 - DataSource10
 - DataSource11
 - DataSource12
 - WriteValue
- AccessExample
- AdministrationDB
 - Employees_By_PID
- DataLogger
- ExcelFile
- New Database Connect
- SQLExample

Name: DataSource09

Desc.: SQL Command Example with complete recordset

1. Specify Dataset

☐ Database Table ☐ Enable Multi-rows Dataset

☒ **SQL Command/Stored Procedure:**

Read SQL Command:

select * from Customers where CustomerID =?

SQL Command Parameters:

Index	Parameter Name	Data Type
0	CustomerID	VT_BSTR

2. Set Database Polling

☒ Enable Updates **Update Rate (sec):** 1

Buttons: Edit..., Get Params, Browse Proc..., Test SQL..., Add..., Remove, Edit..., Move Up, Move Down, Apply, Reset, Add New

Data Source Properties: SQL Command

2. In the **SQL Command Parameters** field, click the **Add** button. Enter a **Parameter Name** (i.e. column name) and choose one of the following **Parameter Data Types** from the drop-down list, as shown in the figure below. Click **OK**.

Note: You can also click the **Get Params** button to select a parameter from the database..

- **VT_I4:** 4-byte integer

- **VT_R8:** 8-byte floating-point number (double)
- **VT_DATE:** Date in OleDateTime format; the DATE type is implemented using an 8-byte floating-point number. Days are represented by whole number increments starting with 30 December 1899, midnight as time zero. Hour values are expressed as the absolute value of the fractional part of the number.
- **VT_BSTR:** String
- **VT_BOOL:** Boolean

1. Specify Dataset

☐ Database Table ☐ Enable Multi-rows Dataset

☒ SQL Command/Stored Procedure

Read SQL Command:

select * from Customers where CustomerID =?

Enter Parameter Name And Type

Parameter Name: CustomerID

Parameter Data Type: VT_BSTR

OK Cancel

2. Set Database Polling

☒ Enable Updates Update Rate (sec): 1


Apply Reset Add New

Edit... Get Params Browse Proc... Test SQL... Add... Remove Edit... Move Up Move Down

Specifying SQL Parameter Name

3. To view or modify the SQL query, click the **Edit** button. This opens the **SQL Command Editor**, which enables you to manually edit the query string, as shown in the figure below. Click **OK**.

Note: If you want to read more than one row from the selected database table, check the **Enable Multi-rows Dataset** check box. This way you do not need to add individual rows to the **Table Parameters** field.

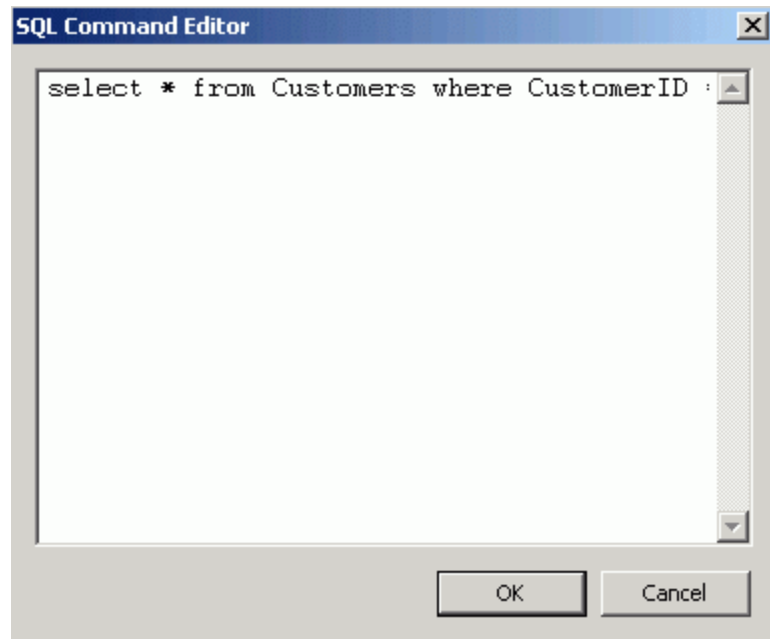

SQL Command Editor


Note: You can also change the column ordering in the data source configuration by selecting a column and clicking the **Move Up** or **Move Down** buttons. Click the **Remove** button to delete the selected column(s).

Creating a New Data Manipulator

Data manipulators allow you to create and edit custom SQL queries as well as use stored procedures to modify data in a connected database.


To create a new data manipulator:

1. Right-click on a database connection in the tree control of the Configurator and select **New > Data Manipulator** from the pop-up menu, as shown in the figure below.

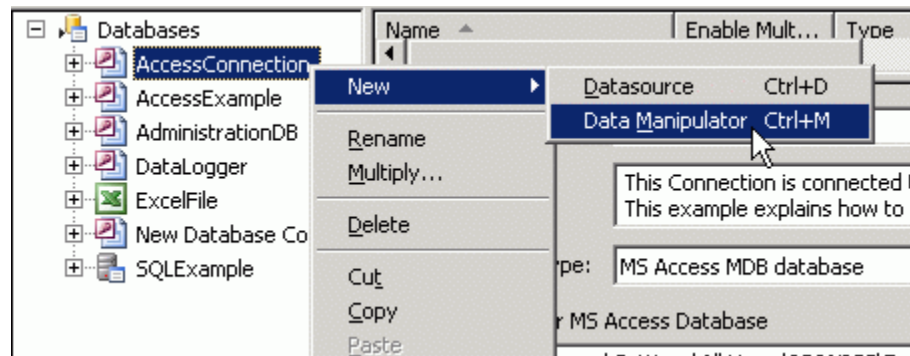

Creating a New Data Manipulator

- The properties dialog box for the new data manipulator appears in the right-hand pane of the Configurator, as shown in the figure below.

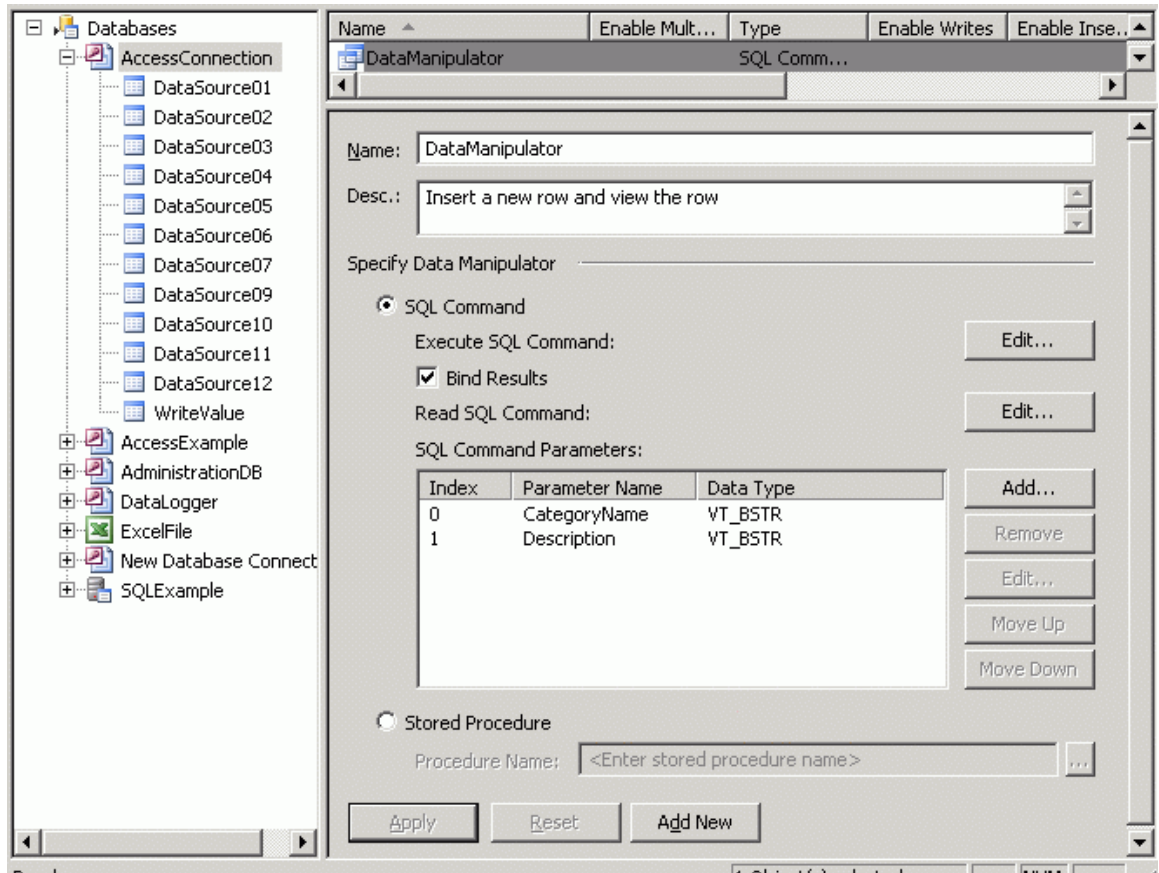

Setting the Properties for the New Data Manipulator

- In the **Name** field, type a name for the new data manipulator.
- Specify the type of data manipulator to use (**SQL Command** or **Stored Procedure**). If you use a SQL command, click the **Edit** buttons to create/edit your SQL queries. If you choose stored procedure, click the ... button to select a stored procedure.

Note: SQL queries in a data manipulator object should be used only for databases that do not support stored procedures (e.g. Excel, MS Jet). In all other cases, stored procedures/functions should be used to manipulate database data. The reason for this is that stored procedures offer wider functionality, and because they are precompiled on the server, execution is much faster.

- When you have finished configuring the data manipulator properties, click the **Apply** button. The new data manipulator appears under the database connection in the tree control.

See Also

Data Manipulator Properties

Data Manipulator Properties

A **data manipulator**, which is intended for processing data stored in a connected database, manipulates data using a SQL *write* command or by executing a stored procedure. Configuring a data manipulator requires the following basic steps, as shown in the figures below:

1. In the **Name** field, type a name for the new data manipulator.
2. Specify the type of data manipulator to use (**SQL Command** or **Stored Procedure**). If you use a SQL command, click the **Edit** buttons to create/edit your SQL queries. If you choose stored procedure, click the ... button to select a stored procedure.

Note: SQL queries in a data manipulator object should be used only for databases that do not support stored procedures (e.g. Excel, MS Jet). In all other cases, stored procedures/functions should be used to manipulate database data. The reason for this is that stored procedures offer wider functionality, and because they are precompiled on the server, execution is much faster.

3. When you have finished configuring the data manipulator properties, click the **Apply** button. The new data manipulator appears under the database connection in the tree control.


SQL Commands

The SQL command data manipulators are mainly designed for databases that don't support stored procedures (MS Excel, partly MS Access, etc.). It allows configuring two SQL commands – one for actual data manipulation action, the second for getting results (if needed). Setting the parameters is similar to SQL commands in the data source configuration. Result SQL command is using the same set of parameters as Execute SQL command in data manipulation action.

SQL queries/commands in a data manipulator object are mainly designed for databases that do not support stored procedures (e.g. Excel, MS Jet). You can configure two SQL commands: one for the actual data manipulation action; the second for getting results (if needed). Setting the parameters is similar to SQL commands in the data source configuration. The Result SQL command uses the same set of parameters as the Execute SQL command in a data manipulation action. In all other cases, stored procedures/functions should be used to manipulate database data. The reason for this is that stored procedures offer wider functionality; and because they are precompiled on the server, execution is much faster.

To enter a SQL command to read from the database:

1. Select the **SQL Command** option under the **Specify Data Manipulator** section, as shown in the figure below.

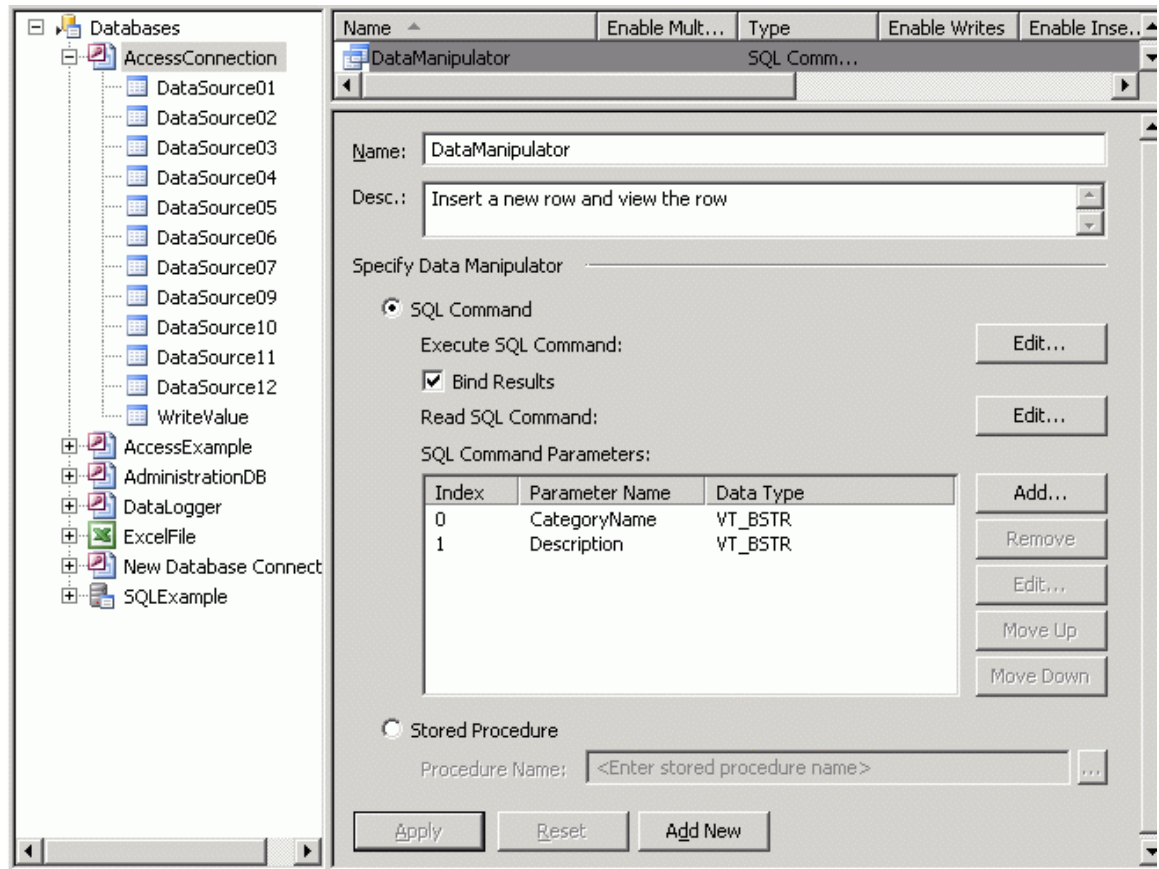

Data Manipulator Properties: SQL Command

2. In the **SQL Command Parameters** field, click the **Add** button. Enter a **Parameter Name** (i.e. column name) and choose one of the following **Parameter Data Types** from the drop-down list, as shown in the figure below. Click **OK**.

Note: If you have multiple values (parameters) you can bind them by checking the **Bind Results** check box.

- **VT_I4:** 4-byte integer
- **VT_R8:** 8-byte floating-point number (double)
- **VT_DATE:** Date in OleDateTime format; the DATE type is implemented using an 8-byte floating-point number. Days are represented by whole number increments starting with 30 December 1899, midnight as time zero. Hour values are expressed as the absolute value of the fractional part of the number.
- **VT_BSTR:** String
- **VT_BOOL:** Boolean

Name: DataManipulator

Desc.: Insert a new row and view the row

Specify Data Manipulator

☒ SQL Command

Execute SQL Command:

☒ Enter Parameter Name And Type

Parameter Name: CategoryName

Parameter Data Type: VT_BSTR

OK Cancel

☐ Stored Procedure

Procedure Name: <Enter stored procedure name>

Apply Reset Add New

Edit... Edit... Add... Remove Edit... Move Up Move Down

Specifying SQL Parameter Name

- To view or modify the SQL query, click the **Edit** button. This opens the **SQL Command Editor**, which enables you to manually edit the query string, as shown in the figure below. Click **OK**.

SQL Command Editor

insert into Categories (CategoryName, Desc)

OK Cancel

SQL Command Editor

Note: You can also change the column ordering in the data source configuration by selecting a column and clicking the **Move Up** or **Move Down** buttons. Click the **Remove** button to delete the selected column(s).

Bind Results


When the **Bind Results** check box is checked, it executes "binding" of a SQL query in the same transaction and returns its rowset as output parameters. This allows you to read some database data immediately after executing a data manipulation SQL command (e.g. you can read the ID of a newly created record).

Stored Procedure

Stored procedures are the preferred way of using data manipulators. They are much more flexible than SQL commands and usually are faster in processing. Their wide range of capabilities allows for complex database data manipulation.


To get data from a stored procedure in the database:

1. Select the **Stored Procedure** option under the **Specify Data Manipulator** section, as shown in the figure below.

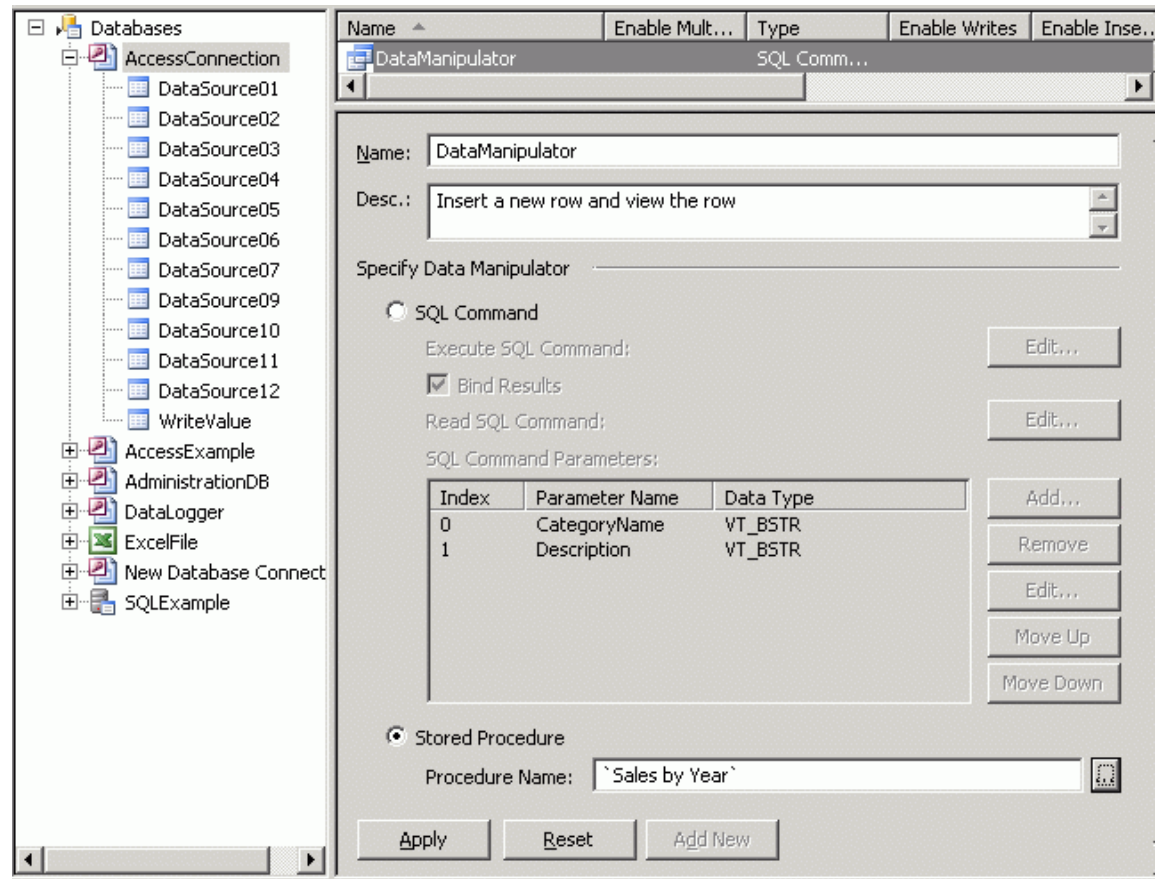

Data Manipulator Properties: Stored Procedure

2. In the **Procedure Name** field, click the ... button. This opens the Unified Data Browser, which lists all the stored procedures in the database, as shown in the figure below. Select a procedure (e.g. "Sales by Year"), and then click **OK**.

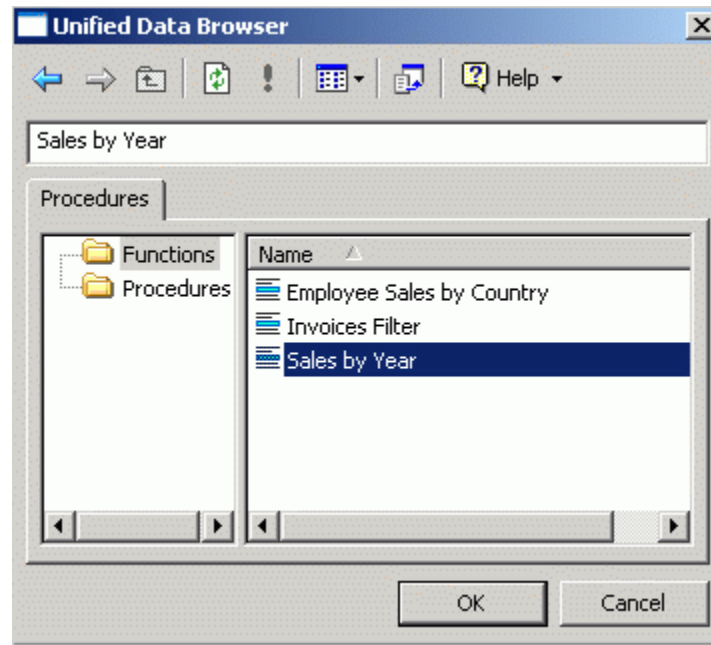

Selecting a Stored Procedure

Data Items

Once you have selected a data set or data manipulator to mine within the connected database, the next step is to specify which data items to monitor within the chosen data set (i.e. which values to read from the selected group of data). A data item represents a single value in a data set. There are two general types of data items:

- Δατα ιτεμς φορ δατα σουρχεσ
- Δατα ιτεμς φορ δατα μανιπυλατορς

See Also

Creating a New Data Item

Data Item Properties

Data Items for Data Sources

Two types of data items are used for data sources:

- Statically defined (preconfigured)
- Dynamically requested (parameter values are set in runtime)

Note: Data items are also accessible as OPC Data Access tags; i.e. they are visible in OPC DA browsers as ordinary OPC DA tags. The ProgID of the Data Mining server is **ICONICS.DatabaseOPCServer.3**.

Static Data Items

Static data items must be preconfigured and cannot be changed in runtime mode. Basically there are used two types of static data items:

- **Column-oriented data item:** Gets value(s) from the table column specified in the configuration
- **Record-set oriented data item:** Gets the whole table row(s) as an array of VARIANT values (single or multi-dimensional array).

Dynamic Data Items

Dynamic data items are available under every data source object without being configured. The syntax of a fully qualified OPC DA tag ID is as follows:

ICONICS.DatabaseOPCServer.3\DataSourceName<ParameterValues>.DataItemName

where

- **DataSourceName** is the name of the data source object in the server configuration.
- **ParameterValues** are values for data source parameters delimited with semicolons (see the tables below).
- **DataItemName** can be one of "<Column Name>", "@@Recordset", "@@Refresh", "@@LastScanTime" (see the tables below).

Data Type	Description	Value Syntax
String (VT_BSTR)	String	"text"
Integer (VT_I4)	4-bytes integer	123
Real (VT_R8)	8-bytes floating-point number (double)	3.14 or -1.82E-3
Boolean (VT_BOOL)	Boolean	BOOL (True) or BOOL (False)
VT_DATE	8-byte floating-point number	DATETIME(date value)

Note: The DATE type is implemented using double-precision numbers. Days are represented by whole number increments starting with 30 December 1899, midnight as time zero. Hour values are expressed as the absolute value of the fractional part of the number.

Data Item Name	Access Rights	Description
@@Column	Read/Write	Can address the only one table column identified

		by its name placed into the last section of OPC DA tag name; delimited by <>.
@@Recordset	Read/Write	Addresses the whole table row.
@@Refresh	Write	Any write forces the data source to re-read data from connected data source.
@@LastScanTime	Read	Returns time of the last data source update.

Dynamic data items can be indexed by parameters configured at the data source level. It allows changing parameter values dynamically in runtime, e.g. using aliases, variables or scripting.

This works fine as connection parameter in the data mining active x:

```
ICONICS.DatabaseOPCServer.3\Twx32SQL.ListBatchLot<10>.@@Recordset
ICONICS.DatabaseOPCServer.3\Twx32SQL.ListBatchLot<<#myGASdays#>>.@@Recordset
```

This doesn't work in the following case:

```
ICONICS.DatabaseOPCServer.3\Twx32SQL.ListBatchLot<~~days~~>.@@Recordset
ICONICS.DatabaseOPCServer.3\Twx32SQL.ListBatchLot<"<<localaliasdays>>">.@@Recordset
```

Note: Alias names should have quotation marks around them. If you are using aliases, the aliases and quotes should use the following syntax:

```
<"<<Alias1>>">;"<<Alias2>>">;"<<Alias3>>">
```

Examples

Suppose you have a database table "Sample" with columns "PID," "Name," "Description" and data source with name "Sample_by_PID," referring to this table with one parameter "PID." The table does not contain any rows with PID greater than 5.

1. The OPC DA tag
"ICONICS.DatabaseOPCServer.3\Sample_by_PID<1>.<Name>" accesses the "Name" column for row with PID = 1.
2. The OPC DA tag
"ICONICS.DatabaseOPCServer.3\Sample_by_PID<1>.@@Recordset" accesses the whole table row with PID = 1. Table row(s) values are returned in array of VARIANT values (one or two dimensional - depends on data source configuration).
3. Inserts into column-oriented data item configured to access table column "Name" with PID set 10:

Writing string "John" into this data item will create a new table row with the following values: PID = 10, Name = "John," Description = database default value.

4. Inserts into record set oriented OPC tag with PID set 11:

Writing array of VARIANTs will create a new table row using all values from passed array (overrides database default values and parameter values).

5. Deletes table row with PID = 11:

Writing VT_EMPTY value into data item used in previous example will delete row with PID = 11.

Data Items for Data Manipulators

There are two types of data items that can access data manipulator objects:

- Execute data item
- Result data item

The data manipulator object executes its action asynchronously; unique request identification is needed to pair requests and responses, as shown in the table below.


Note: GENESIS32 includes two components for accessing data manipulator objects synchronously: DBOPCManipulatorWrapper and the Data Manipulator ActiveX control.

Data Item Name	Access Rights	Description
@@Execute	Write	Writing to this data item executes a data manipulator action (stored procedure or SQL command). The actual value written to this tag must conform to the following rules: It must be an array of VARIANTS. The first value in this array is the unique request identification. The rest of the values are used as input parameters for data manipulator.
@@Result	Read	Returned values represent responses for execute requests. All the returned values are stored in an array of VARIANTS. Similar to the @@Execute data item, the first value in this array is the unique request identification used in execute data item. The rest of the values are output parameters (if there are any).

Creating a New Data Item


To create a new data item:

1. Right-click on a data source in the tree control of the Configurator and select **New > Data Item** from the pop-up menu, as shown in the figure below.

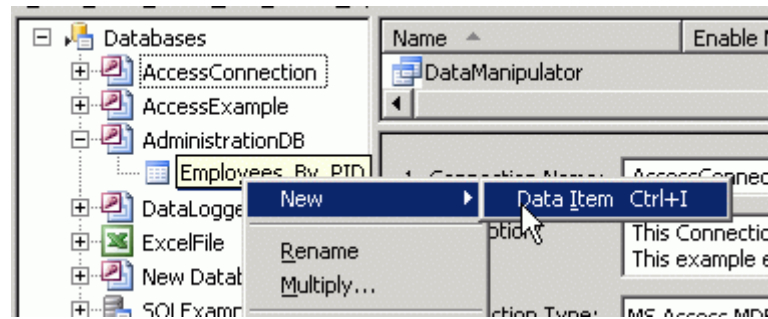

Creating a New Data Item

2. The properties dialog box for the new data item appears in the right-hand pane of the Configurator, as shown in the figure below.

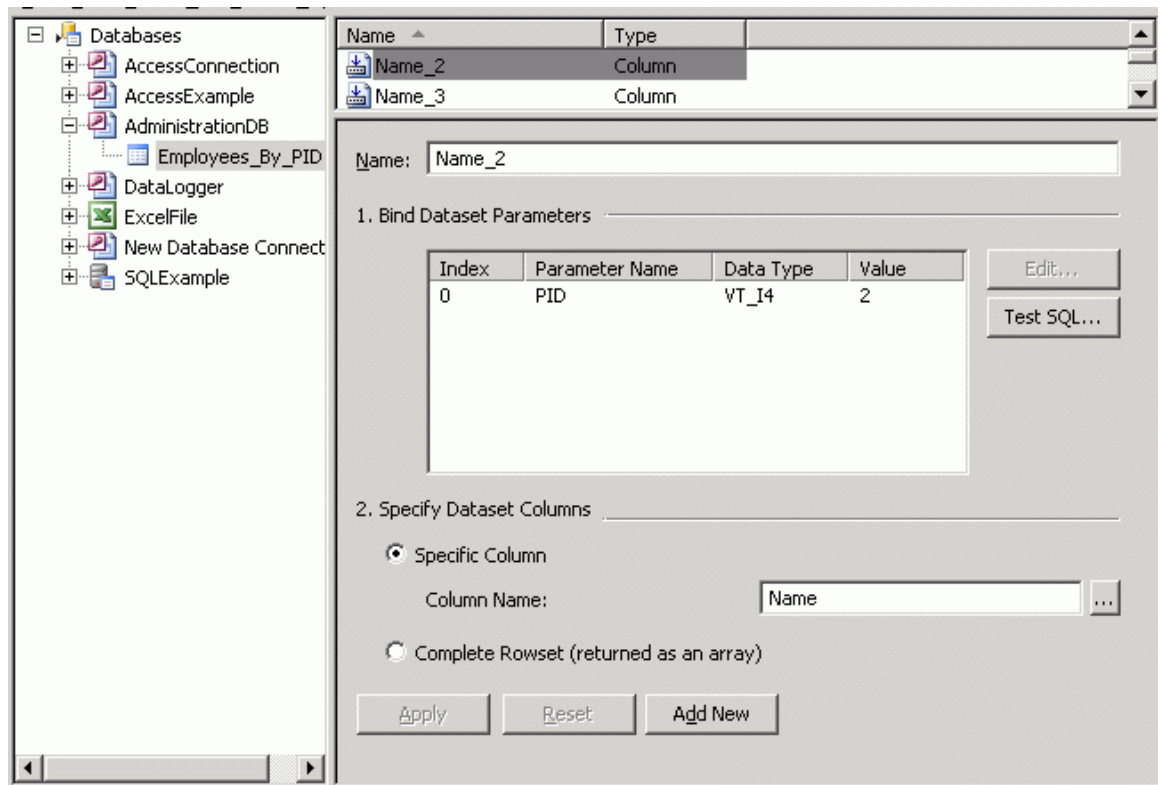


Setting the Properties for the New Data Item

3. In the **Name** field, type a name for the new data item.
4. Click the **Add** button to enter data set parameter values.
5. Select the data set columns (table) for the data item. You can select a **Specific Column**, or use a **Complete Rowset**.
6. When you have finished configuring the data item properties, click the **Apply** button. The new data item appears under the data source in the tree control.

Data Item Properties


Configuring a data source requires the following basic steps, as shown in the figure below:

1. In the **Name** field, type a name for the new data item.

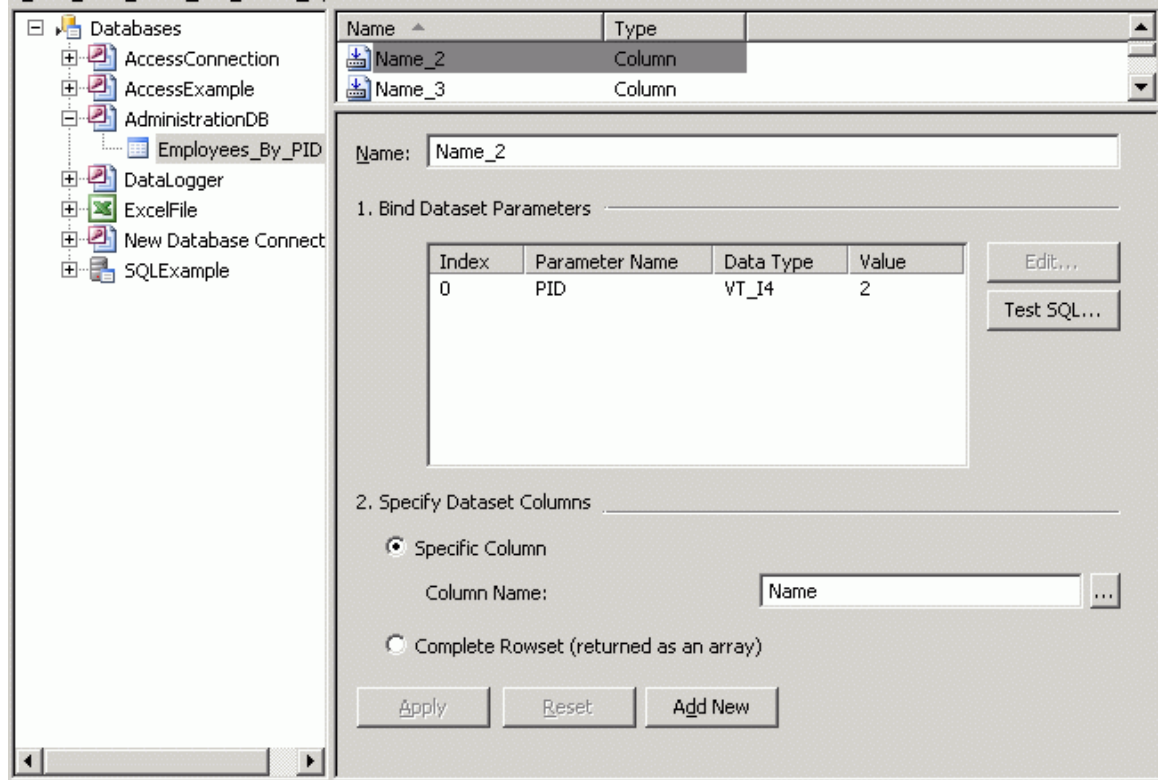


Data Item Properties

2. In the **Bind Data Set Parameters** field, click the **Add** button to enter data set parameter values, as shown in the figure below. Enter a **Parameter Value** (i.e. column name) and choose one of the following **Value Data Types** from the drop-down list.
 - **VT_I4:** 4-byte integer
 - **VT_R8:** 8-byte floating-point number (double)
 - **VT_DATE:** Date in OleDateTime format; the DATE type is implemented using an 8-byte floating-point number. Days are represented by whole number increments starting with 30 December 1899, midnight as time zero. Hour values are expressed as the absolute value of the fractional part of the number.
 - **VT_BSTR:** String
 - **VT_BOOL:** Boolean

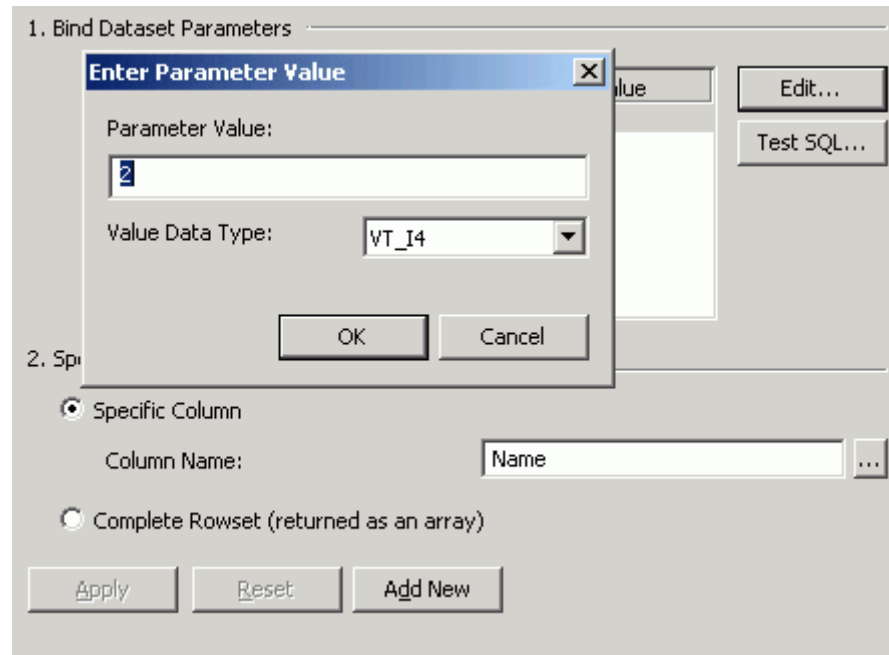

Entering Parameter Value for Data Item

3. Select the data set columns (table) for the data item. You can select a **Specific Column**, or use a **Complete Rowset**. To choose a specific column, click the ... button and browse for a column name (e.g. "Name") from the list of columns in the database table, as shown in the figure below.

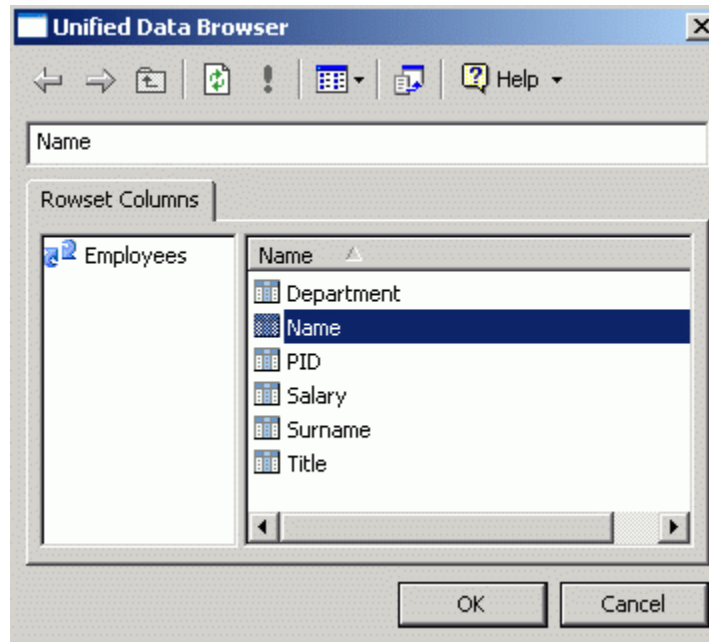

Specifying Column Name in Data Item

4. The **Parameter Value** corresponds to the record number in the database table. For data item **Name_2**, the **Parameter Value** is "2," as shown in the figure above. As you can see in the figure below, in the **Name** column, record number "2" corresponds to the second value in the column. Thus, the value

for record number "2" is **Russel**, which is highlighted in the figure below.
Thus, the **Parameter Value** for data item **Name_2** is resolved as "Russel."

Employees : Table						
	PID	Name	Surname	Title	Department	Salary
+	1	Bob	Richards	Applications Engineer	Product Development	4500
▶	2	Russel	Smith	Applications Engineer	Product Development	2100
+	3	Dave	Jones	QA Engineer	Product Development	1500
+	4	Arthor	Anderson	Sales Representative	Sales and Marketing	10000
*	0					100

Record: ⏮ ⏪ 2 ⏩ ⏭ ⏴ of 4


Record Number in Database Table

- When you have finished configuring the data item properties, click the **Apply** button. The new data item appears under the data source in the tree control.

Testing Your Data Tags


Before you try to connect to data sources and view your data tags, it is highly recommended that you verify if the tags present inside the display are well configured from the server side. To do that you have to check the quality of your data tags using OPC DataSpy:

- Start OPC DataSpy from the Windows **Start** menu by selecting **Programs > ICONCS Tools > OPC DataSpy**.
- In OPC DataSpy, expand the tree control and browse to your data tag. Right-click on the data tag(s) and select **Monitor** from the pop-up menu, as shown in the figure below.

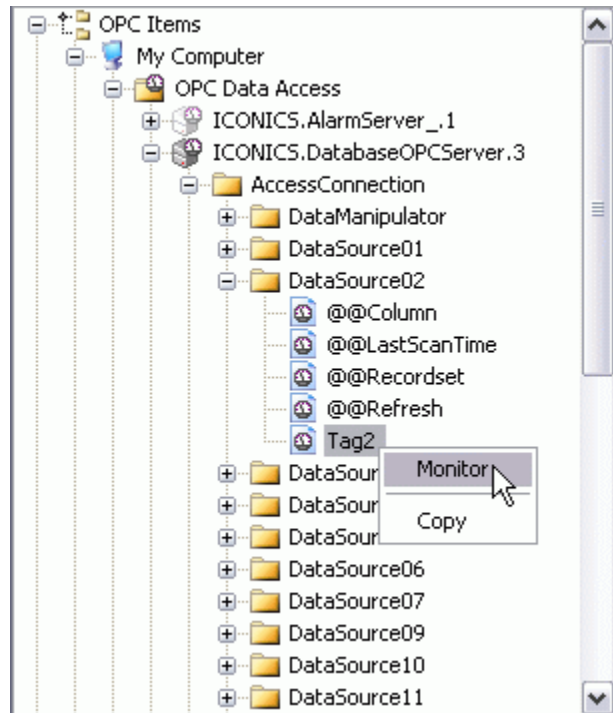

Browsing for Data Tags in OPC DataSpy

3. The data tag(s) now appear in under the Data Monitor tree control, as shown in the figure below. The tag quality is indicated in the right-hand pane. If the tag quality is good, then the tag is ready for data mining. If the tag quality is bad, go back to the Data Mining Configurator and check your data source and data item configurations.

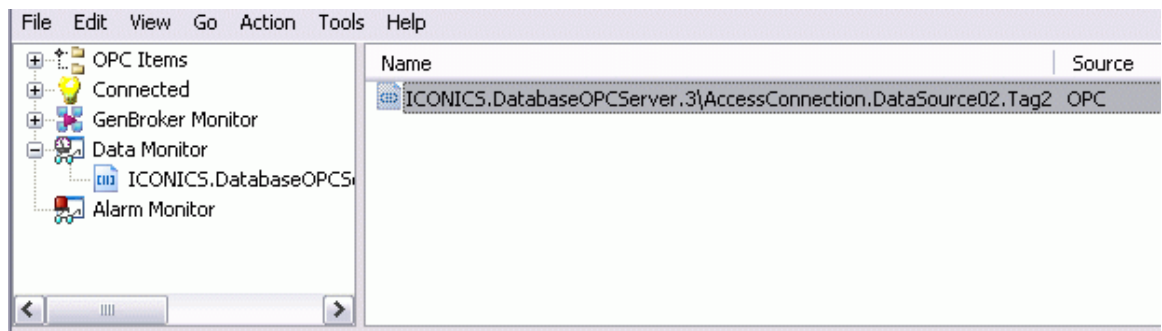

Data Tag Quality Indicated in DataSpy Data Monitor

Visualizing Data in GraphWorX32

Once you have configured and tested your database connection, data sources, and data items in the Data Mining Configurator, the next step is to visualize the data in GraphWorX32. You also can view data in the Data Mining ActiveX, which displays one-dimensional and multidimensional arrays of data from

database connections inside a grid display, which is embedded in an ActiveX container. For more information, please see the Data Mining ActiveX help documentation.

1. Go to the **\\Program Files\\ICONICS\\GENESIS32\\Examples\\Database Mining Examples** directory in the GENESIS32 installation and open the **DBOPC.gdf** file.
2. The display opens in GraphWorX32 configuration mode, as shown in the figure below. The display contains two different examples of data mining visualization: static and dynamic. A **static** display simply displays the data values from the connected database. A **dynamic** display allows you to manipulate data values from the connected database.

The table in the **static definition** section contains some column names from the **Employees** database table, as shown in the figure below:

- **Name:** Employee's first name
- **Surname:** Employee's last name
- **Salary:** Employee's salary
- **PID:** Employee's identification number

Each column contains process points that correspond to data items (e.g. **Name_1**, **Name_2**, **Name_3**, **PID_1**, **PID_2**, etc.) in the **Employees_By_PID** data source from the demo data mining configuration. A process point must be configured for each data item. We will continue to look at the **Name_2** data item as an example:

Under the **Name** column in the GraphWorX32 display, double-click the second process point under the **Name** column, as shown in the figure below.

Static definition


Name:	Surname:	Salary in \$:	PID:
??????????	??????????	??????????	??????????
■ ?????????? ■	■ ?????????? ■	??????????	??????????
■ ?????????? ■	■ ?????????? ■	??????????	??????????
??????????	??????????	??????????	??????????

Dynamic definition

Name:	Surname:	Salary in \$:	PID=PID_1
??????????	??????????	??????????	PID=PID_2
			PID=PID_3


Data Mining Demo in GraphWorX32: Configuration Mode

3. This opens the **Property Inspector** for the data item. Click on the **PPT/DE** tab, as shown in the figure below. As you can see, the **AdministrationDB.Employees_By_PID.Name_2** item ID has already been specified in the **Data Source** field.

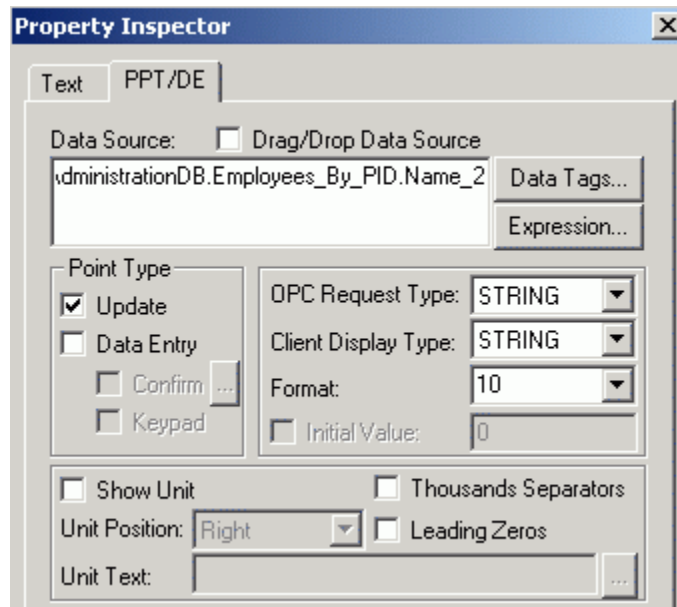

Property Inspector for Name_2 Data Item

4. Click on the **Data Tags** button to open the Unified Data Browser. The Unified Data Browser opens to the **Database Access** tab, as shown in the figure below. You can see that the browser tree control is similar to the tree control in the Data Mining Configurator; you can choose from configured data items from the **Employees_By_PID** data source connection. The **Name_2** item ID has already been selected. Notice that each **ItemID** (e.g. **ICONICS.DatabaseOPCServer.3\AdministrationDB.Employees_By_PID.Name_2**) contains the following information:
 - Server name (e.g. **ICONICS.DatabaseOPCServer.3**)
 - Database connection name (e.g. **AdministrationDB**)
 - Data source name (e.g. **Employees_By_PID**)
 - Data item name (e.g. **Name_2**)

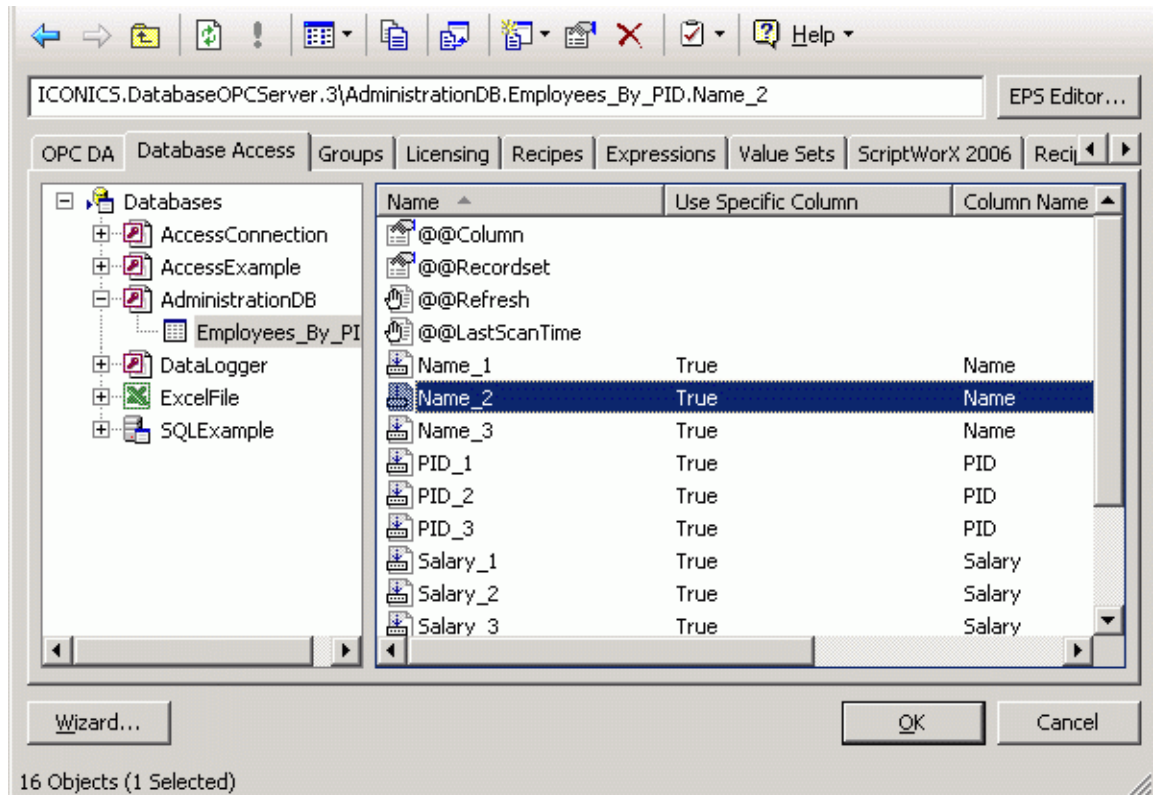

Data Item Specified in Unified Browser

5. Close out of the Unified data Browser and the Property Inspector dialog box.
6. Enter the GraphWorX32 display into runtime mode. You can see the data coming from the **Employee** database table, as shown in the figure below. Notice that the **Parameter Value** for data item **Name_2** is resolved as "Russel" in the visualization display.

Note: The **Static definition** section simply displays the values from the **Employee** database table for the configured data items, but the data cannot be manipulated. The **Dynamic definition** section also displays values from the **Employee** database table, but in this case only one row of data is displayed at a time, and you change the currently viewed row by clicking the three PID buttons, as shown in the figure below. The dynamic configuration uses local aliases and global aliases, which enable you to switch between rows during runtime mode.

Static definition


Name :	Surname :	Salary in \$:	PID :
Bob	Richards	4500	1
Russel	Smith	2100	2
Dave	Jones	1500	3

Dynamic definition

Name :	Surname :	Salary in \$:	
Bob	Richards	4500	PID=PID_1
			PID=PID_2
			PID=PID_3

Data Mining Demo in GraphWorX32: Runtime Mode


7. The items displayed in GraphWorX32 correspond to the information in the **Employees** database table in the Administration database. For example, the itemID **AdministrationDB.Employees_By_PID.Name_2** has the value **Russel**, because **Russel** is the second name listed in the database table, as shown in the figure below.

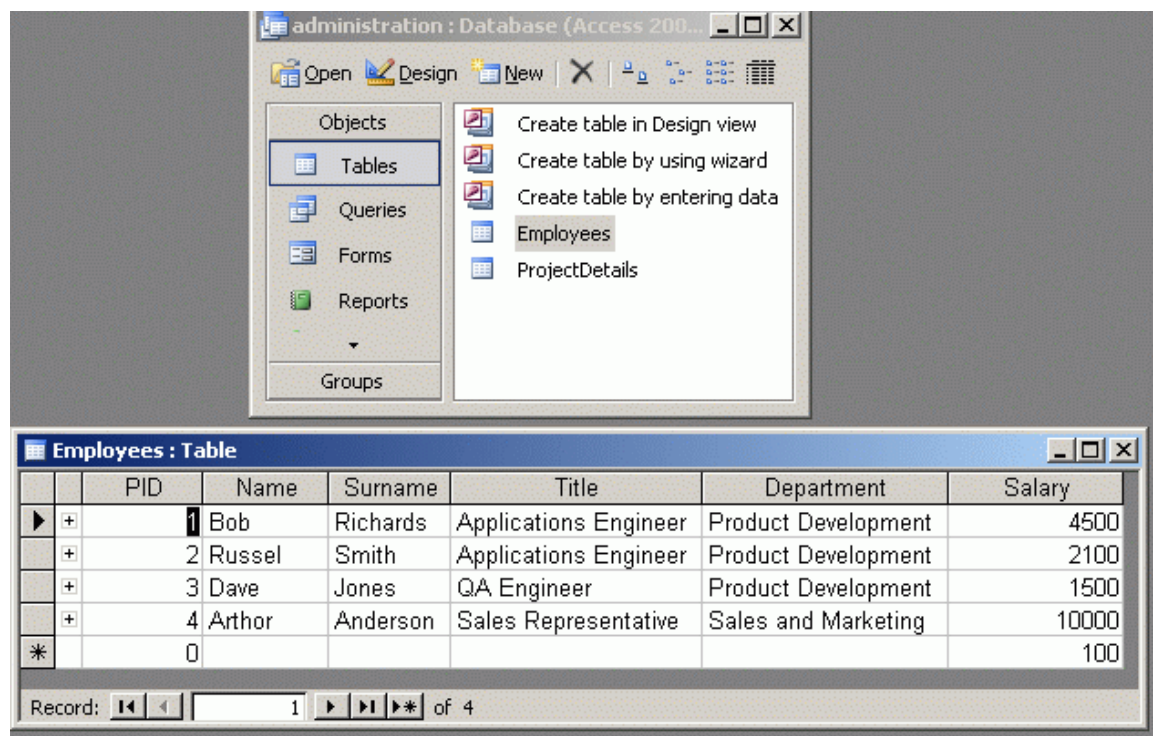

Employees Table in Administration Database

Database Access Tag Syntax

In the **Database Access** tab of the Unified Data Browser, shown in the figure below, the tree control is similar to the tree control in the Data Mining Configurator; you can choose from configured data items from the **Employees_By_PID** data source connection.

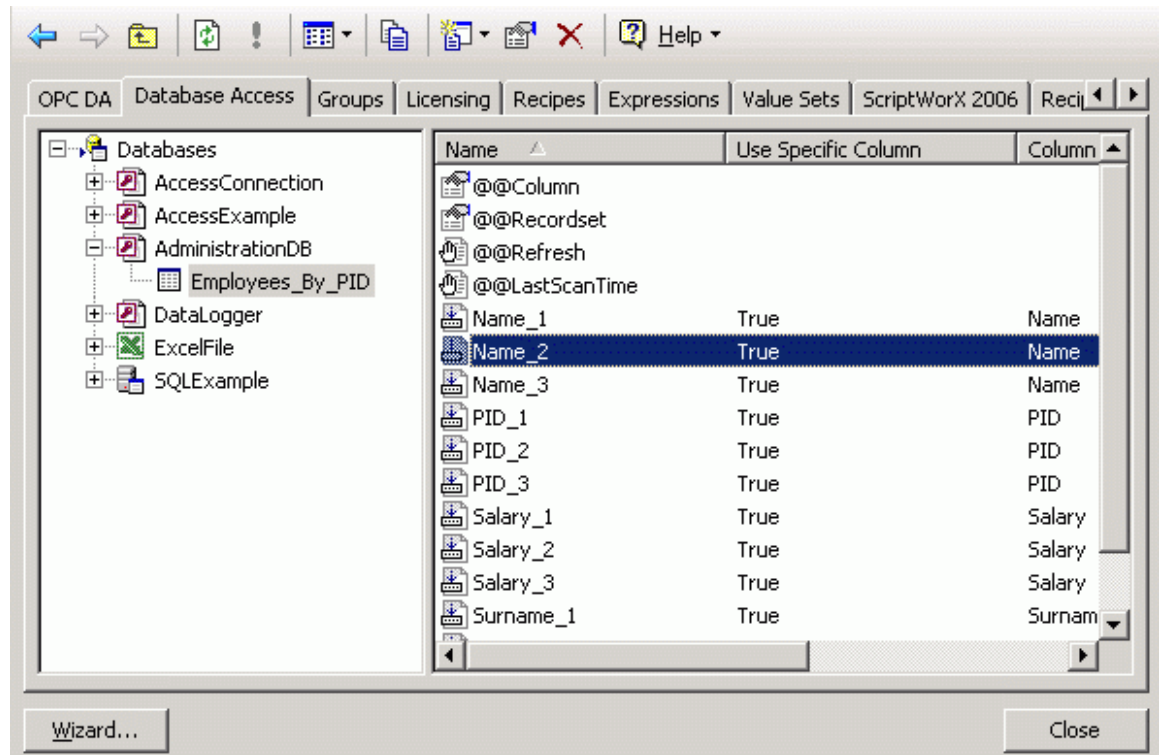

Unified Browser: Browsing Databases

For example, in the figure above the **Name_2** item ID has been selected. The full **ItemID** is:

ICONICS.DatabaseOPCServer.3\AdministrationDB.Employees_By_PID.Name_2)

Each item ID in the **Database Access** tab contains the following information:

- Server name (e.g. **ICONICS.DatabaseOPCServer.3**)
- Database connection name (e.g. **AdministrationDB**)
- Data source name (e.g. **Employees_By_PID**)
- Data item name (e.g. **Name_2**)

Data Mining Examples

The GENESIS32 installation includes several data mining example files in the **\Program Files\ICONICS\GENESIS32\Examples\Database Mining Examples** directory.

See Also

Example 1: Data Mining Configuration Demo

Example 2: Data Source Configuration Examples

Example 3: Data Mining Logging Examples

Example 1: Data Mining Configuration Demo


The GENESIS32 installation provides a default **Data Mining Demo** configuration. To view the demo files, go to the **\Program Files\ICONICS\GENESIS32\Examples\Database Mining Examples** directory in the GENESIS32 installation. This directory contains the following files:

- **DBOPCServerConfigurator.mdb**: This Microsoft Access file is a data mining configuration database.
- **administration.mdb**: This Microsoft Access file is the demo database connection.
- **DBOPC.gdf**: This is a GraphWorX32 display that allows you to view the data sources and data items specified in the demo database connection.

To view the **DBOPCServerConfigurator.mdb** demo configuration database:

1. Open the Data Mining Configurator from the Windows **Start** menu by selecting **Programs > ICONICS Tools > Data Mining Configurator**.
2. Opens the **DBOPCServerConfigurator.mdb** database in the Configurator, as shown in the figure below. The main tree control of the Configurator is called **Databases**. Under this tree control, you can see the following items:
 - The demo database connection, called **AdministrationDB**, which connects to the **administration.mdb** Microsoft Access database.
 - A demo data source, called **Employees_By_PID**.
 - Several data items (e.g. Name_1, Name_2, Name_3, PID_1, PID_2, etc.)

These demo items are described in greater detail in the Data Mining Demo section.

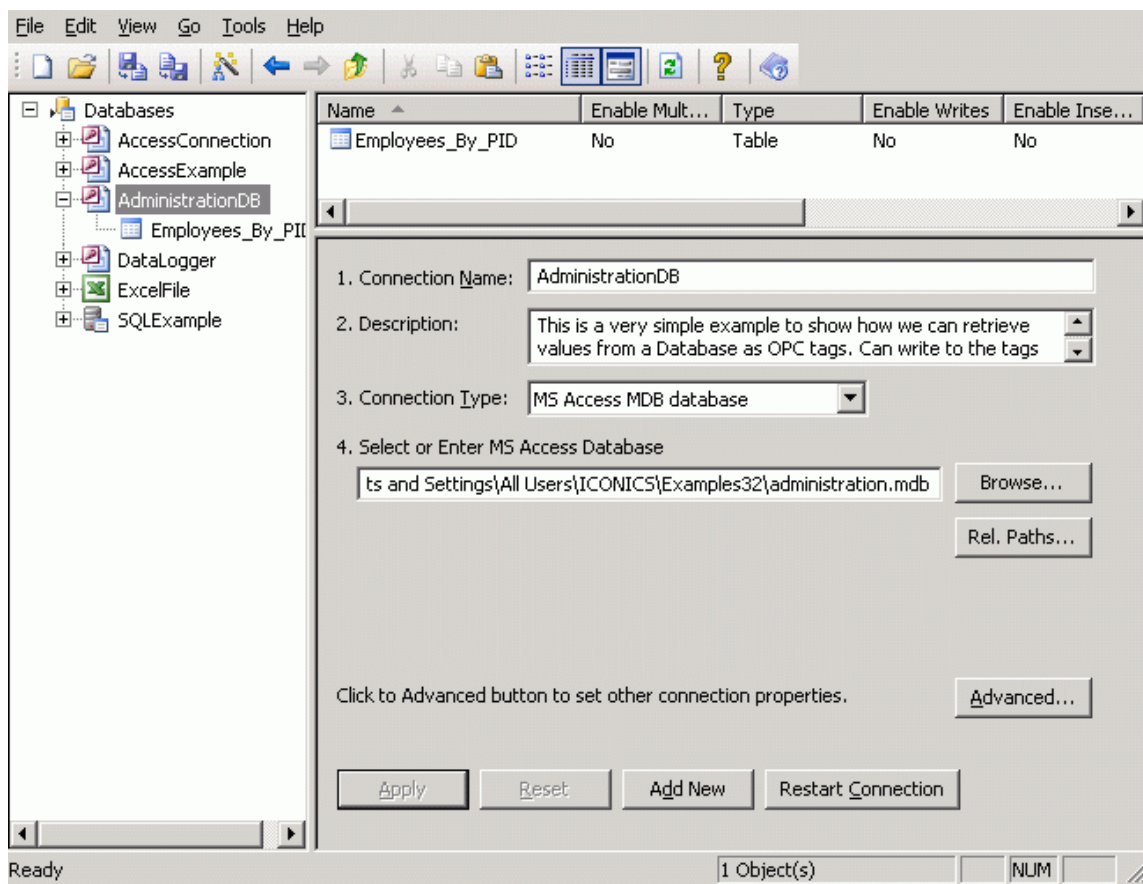

Data Mining Configuration Demo

Example 2: Data Source Configuration Examples

The second data mining example provides a data mining configuration database with several different types of preconfigured data sources. For this example, the GENESIS32 installation includes the following data mining example files in the **\Program Files\ICONICS\GENESIS-32\Examples\Database Mining Examples** directory:


- **DBOPCServerConfigurator.mdb:** This is an example data mining configuration database that contains many example data sources and data tags.
- **Northwind.mdb:** This is an example Microsoft Access database to which the example data mining configuration database is connected.
- **DBOPC_PainReliefRECIPE.XLS:** This is an example Microsoft Excel workbook to which the example data mining configuration database is connected.
- **DBOPC_Excel.gdf:** This GraphWorX32 display allows you to view and write to Excel cells that are included in the **DBOPC_PainReliefRECIPE.XLS** spreadsheet. In order to use the Excel example, you must open the **DBOPC_GlobalAliasCfg.mdb**

database in the Global Aliasing Configurator and activate the database by selecting **Make Active** from the **File** menu.

- **DBOPC_Access2.gdf:** This GraphWorX32 display contains tags that return a single-dimensional recordset connecting to a database table in the Data Mining ActiveX.
- **DBOPC_Access3.gdf:** This GraphWorX32 display contains tags that return a two-dimensional recordset connecting to a database table in the Data Mining ActiveX.
- **DBOPC_Access4.gdf:** This GraphWorX32 display contains tags that return a single-dimensional recordset connecting to a database table using a SQL command in the Data Mining ActiveX.
- **DBOPC_Access5.gdf:** This GraphWorX32 display contains tags that return a two-dimensional recordset connecting to a database table using a SQL command in the Data Mining ActiveX.
- **DBOPC_GlobalAlias.gdf:** This GraphWorX32 display contains an example of how to use global aliases as tags in the Data Mining ActiveX.


To view the example configuration database:

1. Open the Data Mining Configurator from the Windows **Start** menu by selecting **Programs > ICONICS Tools > Data Mining Configurator**.
2. Select **Open** from the **File** menu, as shown in the figure below.

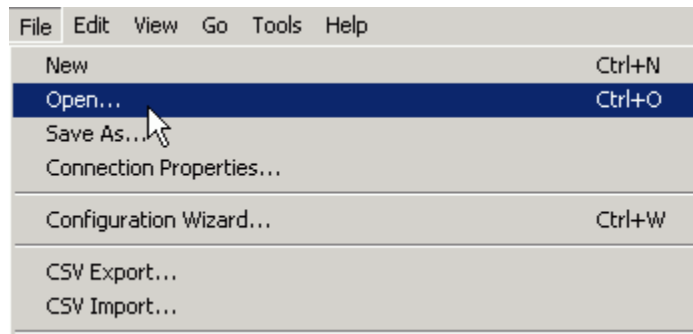


Opening the Example Configuration

3. Browse to the **Program Files\ICONICS\GENESIS32\Examples\Database Mining Examples** directory and select the **DBOPCServerConfigurator.mdb** file.
4. The example data mining configuration opens in the Configurator, as shown in the figure below. The example configuration contains two different database connections. These connections contain several data sources and data items (tags).

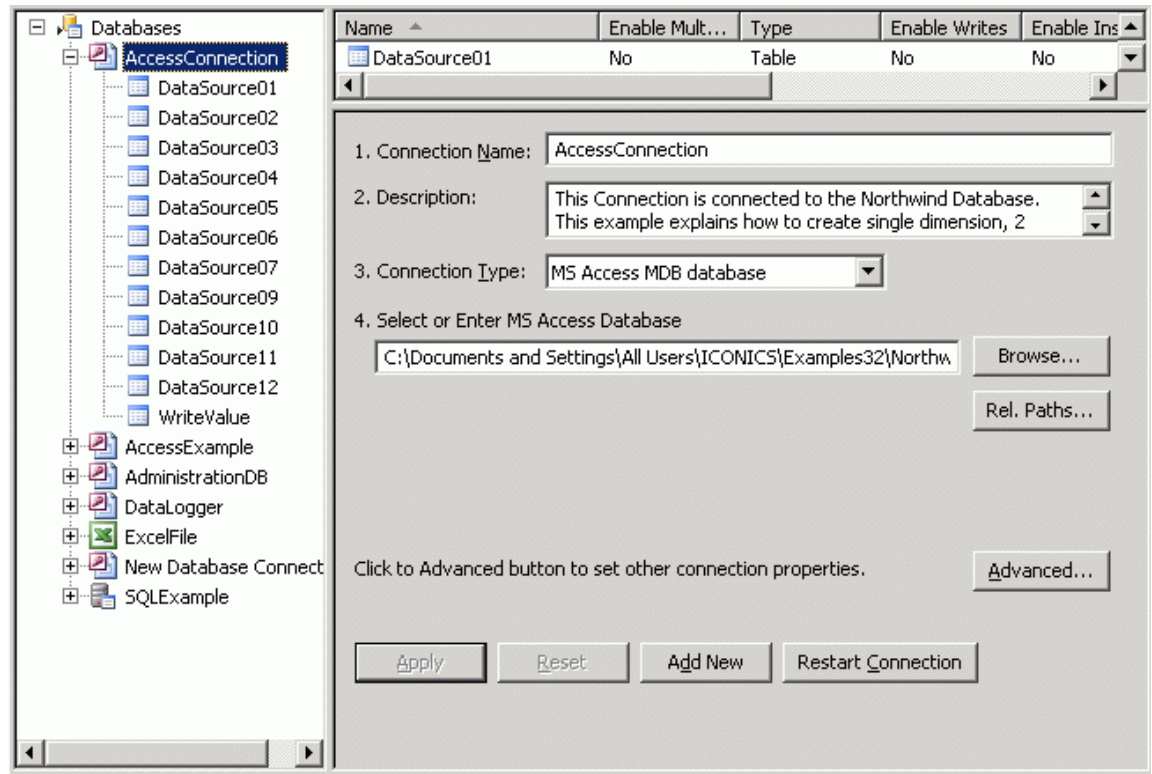

Data Mining Example Configuration Database

The first is a connection to the **Northwind.mdb** Microsoft Access database, as shown in the figure below. This database connection reads data from reads data from the **Customers** table in the Northwind database. The figure below shows this table as viewed in Microsoft Access. As you can see, it has several columns of data (e.g. Customer ID, Company Name, Contact Name, Contact Title, etc.).

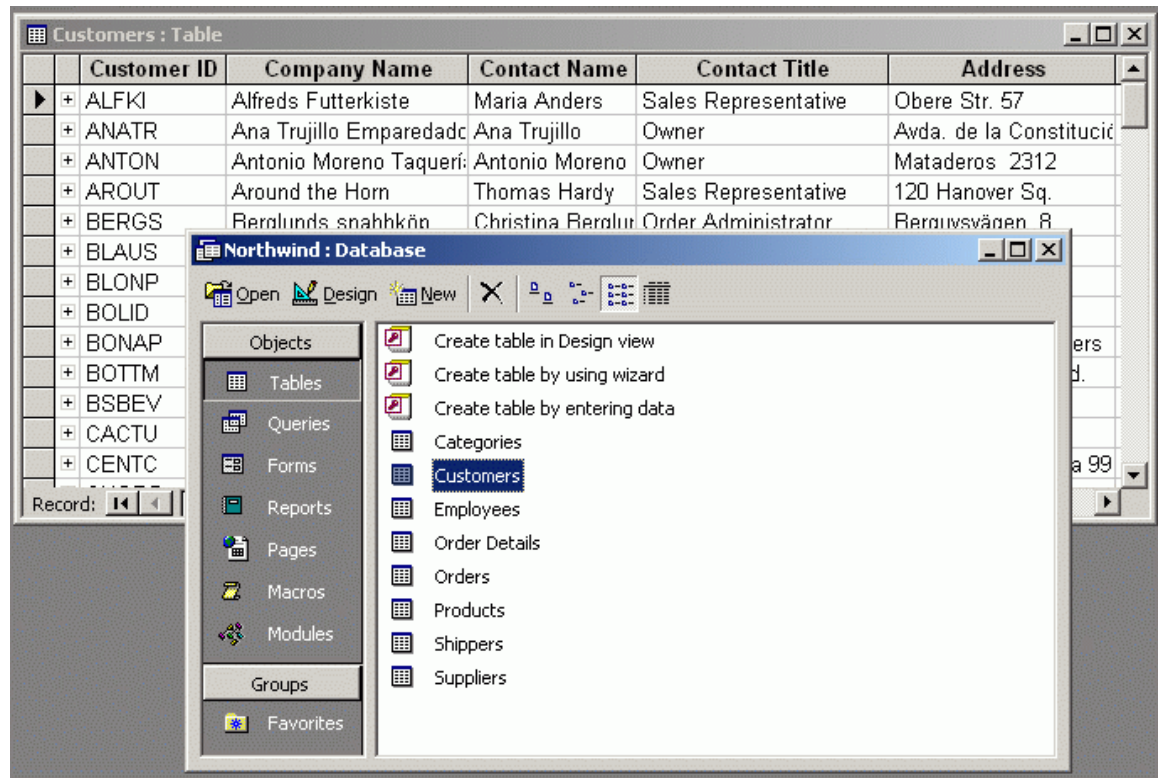

Customers Table in Northwind Database

The example configuration database contains the following data sources and data tags:

- **DataSource01.Tag1:** Reads a single value from the CompanyName column in the Customers table.
- **DataSource02.Tag2:** Reads a complete rowset from the Customer ID column in the Customers table.
- **DataSource03.Tag3:** Reads all values from the Company Name column in the Customers table.
- **DataSource04.Tag4:** Reads all values from the Customers table in a multidimensional array.
- **DataSource05.Tag5:** Reads a complete rowset from the Customer ID column in the Customers table.
- **DataSource06.Tag6:** Reads a single value from a list list of parameters.
- **DataSource07.Tag7:** Reads a single value from the CompanyName column in the Customers table.
- **DataSource07.Tag8:** See single value. Reads a single value from the CompanyName column in the Customers table.
- **DataSource09.Tag10:** SQL command reads a complete rowset from the Customer ID column in the Customers table.
- **DataSource10.Tag11:** SQL command reads a single value from the CompanyName column in the Customers table.

- **DataSource11.Tag12:** SQL command reads all values from the Customers table in a multidimensional array.
- **DataSource12.Tag13:** SQL Command Example reads multiple rows from the ContactName column in the Customers table.
- **WriteValue.Write1:** Writes values to these tags from GraphWorX32 and displays the changes online.
- **WriteValue.Write2:** Writes values to these tags from GraphWorX32 and displays the changes online.

It is recommended that you view these data tags in the Data Mining ActiveX in GraphWorX32 so you can see how the data are displayed in the Data Mining ActiveX when connections to data tags are established for both one-dimensional and multidimensional arrays. For more information, please see the Data Mining ActiveX help documentation.

Example 3: Data Mining Logging Examples

The third data mining example provides a data mining logging configuration that connects to different data sources using the Data Mining ActiveX control and Data Manipulator ActiveX control. For this example, the GENESIS32 installation includes the following data mining example files in the **Program Files\ICONICS\GENESIS-32\Examples\Database Mining Examples** directory:

- **DataLoggerExample.gdf:** This is a GraphWorX32 example display that contains Data Mining ActiveX controls and Data Manipulator ActiveX controls.
- **DataLogger.mdb:** This is a logger database that is used by the Data Mining ActiveX controls and two Data Mining Manipulator ActiveX controls in the **DataLoggerExample.gdf** display.

For more information about this example, please see the Data Manipulator Example application note on the GENESIS32 product CD.